

## FORMULA GUARD PROTECTS YOUR BOATING INVESTMENT.

- The Formula Guard protection plan protects your boating investment with a 10-year structural warranty.
- A five-year limited protection plan under Formula Guard covers engine/outdrive, accessories and components, including labor and materials.
- Formula Guard is transferable during the first five years of ownership, increasing your Formula's value.
- For detailed information visit our website at [www.formulaboats.com](http://www.formulaboats.com).



## BENEFITS

SERVICE ASSIST HOIST • HAUL-OUT • TOWING

A Product Of



[www.seasafegroup.com](http://www.seasafegroup.com)



**Check Out  
The FORMULA Difference...**



**Best-Backed  
Warranty Program  
in the Industry**



**Thunderbird Products  
2200 West Monroe Steet  
PO Box 1003  
Decatur, IN 46733**

**1.800.736.7685  
260.724.9111**

[www.formulaboats.com](http://www.formulaboats.com)



# Check Out The FORMULA Difference...

## ACCESSORY COMPONENT COVERAGE

- ✓ **AIR CONDITIONER:** (up to three units), compressor, condenser, circulation pumps, heat exchanger, evaporator, thermostat, capacitors, relays, fans.
- ✓ **HEATING:** heating elements, control panel, thermostat, blower motor.
- ✓ **WATER SYSTEM:** water pump, water heater, compressor, drain system, sump pump, fittings, faucets.
- ✓ **WASTE SYSTEM:** shower, toilet, sink(s), holding tanks, macerator, gate valves, connections, vacuum pump, waste level monitoring display and sending unit. *Note: pipes and leaks from piping and vacuum accumulations are excluded.*
- ✓ **APPLIANCES:** galley sink and faucet, refrigerator (up to two units), freezer (one unit), range/stovetop, oven, clothes dryer, microwave, ice maker (one unit), trash compactor, central vacuum system (applies to built-in units only).
- ✓ **12 VOLT/24 VOLT ELECTRICAL:** battery charger/converter, shorepower, onboard receptacle, shorepower main switch, circuit panel, and circuit breakers.
- ✓ **ELECTRICAL:** interior courtesy lights, battery main switch, battery isolator, battery selector switch, battery box, fuse block, fuse holder, chart light, transom light, bow light, docking lights, voltmeter, electric horn, windshield wiper motor, accessory switches, hatch lift motor(s) and switches.
- ✓ **HYDRAULIC LIFT/SWIM PLATFORM:** hydraulic cylinders, hydraulic pump, wiring harness, and control panel.
- ✓ **BOW THRUSTER:** control joystick, and wiring harness. (Bow thruster motors not included)
- ✓ **INSTRUMENT PANEL:** speedometer head, tachometer head, volt meter gauge, hour meter, oil pressure gauge, trim gauge, fuel gauge, temp gauge, SmartCraft™-gauges, components, and sending units (applies to factory installed units only).
- ✓ **COMPASS:** compass head, mounting brackets (excludes digital models).
- ✓ **AUDIO AND VISUAL SYSTEM:** head units, CD changer, XM/Sirius™ Satellite Radio tuner/antenna, cassette player, AM/FM tuner, TV/DVD combination units (up to two), and TV/DVD 12v/120v inverter (applies to factory installed units only).
- ✓ **PLANING/TRIM TABS:** (Labor only) pump, trim cylinders, planing plates, and tab position indicator.
- ✓ **BILGE:** pump, manual control panel, switches, wiring harness, and venting system.
- ✓ **REMOTE SPOTLIGHT:** control panel, horizontal/vertical control motors, and light housing.
- ✓ **HORNS:** air horns, air horn compressor, air solenoids, control panel, and electric horns.
- ✓ **ANCHOR:** winch, electric windlass motor, bow pulpit guide, switches, and chain counter.
- ✓ **SPEEDOMETER/TACHOMETER:** speedometer head, tachometer head, speed log, speed sensor, mounting brackets, and control cable.
- ✓ **DIGITAL DEPTH FINDER:** depth sounder, transducer, control cable, wiring harness (applies to one factory installed unit only).
- ✓ **ELECTRIC SHOREPOWER/HOSE REELS:** motor, switches (applies to one shorepower and one hose reel).
- ✓ **BOAT HARDWARE:** Deck rails, grab rails, hand rails, bow eyes, rope cleats, anchor chocks, top slides, door hinges, latches, and deck plates.

✓ **ENGINE:** Internally lubricated parts including: pistons, piston rings and pins; crankshaft; main bearings; connecting rods; rod bearings; camshaft and camshaft bearings; timing chain and timing gears; valves, valve springs, valve guides, valve seats and valve push rods; thermostat components, sending units (temperature and oil pressure), knock sensor, main seals, intake and exhaust valves; lifters; oil pump; rocker arm cover; harmonic balancer; oil pan; engine mounts; distributor housing; distributor shaft; distributor bearings; flywheel ring gear. Engine head, engine block and cylinder sleeves and intake manifold only if damaged by a failure of a covered internally lubricated part. DIESEL ENGINE ONLY: Cylinder head bolts; air intake housing; turbochargers (up to three); main bearing bolts; rod bolts; rocker arms; oil cooler housing; oil filter housing; flywheel housing; pump drive gears; front covers; idler gears; and balancer cover housing.

✓ **CLOSED-WATER COOLING SYSTEM:** Engine water/coolant circulating pump; oil cooler; heat exchangers (for closed-water cooling system only). We do not cover failures to heat exchangers due to corrosion or clogging from salt, debris or other contaminants.

✓ **TRANSMISSION:** Internally lubricated parts including: clutch plates and clutch drums; thrust plates; planetary gears; shift bands; reduction gears and reduction bearings; drive plate, temperature switches, neutral safety switch, control valves, transmission oil cooler, shafts; bearing carriers; hydraulic pumps; hydraulic pistons; valve bodies; transmission mounts; oil pan; seals; and gaskets. Transmission case only if damaged by a failure of a covered internally lubricated part.

✓ **V-DRIVE:** Internally lubricated parts including: bearings; thrust bearings; bevel gears; shafts; shims; bearing carriers. V-drive case only if damaged by a failure of a covered internally lubricated part.

✓ **STERNDRIVE LOWER UNIT:** Internally lubricated parts including: forward gears; reverse gear; pinion gears; clutch dog; dog pin; cam follower; prop shaft; drive shaft; shift shaft; bearings; pinion nut washer; shims; bearing carriers, seals; and gaskets. Gear case only if damaged, by a failure of a covered internally lubricated

✓ **STERNDRIVE UPPER GEAR UNIT:** Internally lubricated parts including: upper drive gear set; clutch dogs and cones; shift cams; shims; bearings; bearing carriers; upper drive shaft; spring kit, spanner cover nut, seals, and gaskets. Gear case only if damaged by a failure of a covered internally lubricated part.

✓ **INTERMEDIATE HOUSING:** Intermediate shaft; universal joints; universal joint bellows, gimbal ring, bell housing, gimbal ring bushings, hinge pins and screws, intermediate shift bellows, oil reservoir bottle and cap and level switch assembly; bearings; gimbal bearings; center yoke; drive yoke; engine coupler. Intermediate housing case only if damaged by a failure of an internally lubricated part.

✓ **IGNITION:** Ignition module; ignition trigger coil; ignition high output coil; and spark plug wires.

\* Some components listed above are optional and/or not available on some models. Coverage is standard equipment on all 2007 Formula models.

✓ **ELECTRICAL:** Alternator/stator; voltage regulator/rectifier; electronic ignition module; ECM, choke, choke solenoid; ignition switch, coolant temperature switch; oil pressure switch; starter motor; starter armature; starter field windings; starter magnets; starter drive; starter solenoid; and engine mounted wiring harness.

✓ **STEERING:** Power steering: steering control helm assembly; control rack and yoke assembly; power steering pump; power-steering pump pulley; power-steering oil cooler; power-steering cylinder; steering wheel; steering wheel mounting hub; cables. Hydraulic steering: hydraulic-steering head; hydraulic-steering lines; hydraulic-steering cylinder; hydraulic-steering flow valves, cables.

✓ **CONTROLS:** All parts contained within control box: cams; eccentrics; shafts pivots; neutral safety switch; shift switch; lever; and throttle control cable.

✓ **POWER TRIM:** Power trim motor/pump; trim cylinders; cylinder rams; cylinder seals; cylinder mounts and pivots; trim motor actuator solenoids; trim wiring harness; trim master control switches; sender/limit switches; control valve; pump; reverse lock valve; trim reservoir; and cap assembly.

✓ **FUEL SYSTEM:** Fuel injectors; injector rails; (VST) vapor separator; (IAC) idle air control valve; pressure regulator; fuel distributors; fuel-injection pumps (high and low pressure); ECU module; throttle position sensor; manifold-pressure sensor; idle speed control; air-flow sensor; detonation sensor; coolant sensor; fuel cooler; ignition pick up sensor; fuel delivery pump; fuel pump diaphragm; and flame arrestor.

✓ **SEALS AND GASKETS:** Seals and gaskets, if needed, for covered components. Failures caused by worn or misinstalled gaskets are not covered.

### GENERATOR COVERAGE:

✓ **ENGINE:** internally lubricated parts including: pistons; piston rings; and pins; crankshaft; main bearings, connecting rods; rod bearings; camshaft; camshaft bearings; timing chain; timing gears; valves; valve springs; valve guides; valve seats; valve push rods; lifters; oil pump; rocker arm cover; harmonic balancer; oil pan; engine mounts; distributor housing; distributor shaft; distributor bearings; and flywheel ring gear. Engine head, engine block and cylinder sleeves and intake manifold—only if damaged by a failure to a covered internally lubricated part.

✓ **ELECTRICAL:** switch box/amplifier, alternator, voltage regulator/rectifier, ignition coil, starter motor, solenoid, engine mounted wiring harness

✓ **CLOSED-WATER COOLING SYSTEM:** engine water coolant circulating pump, head exchangers (for closed-water cooling system only).

✓ **GENERATOR ELECTRICAL:** armature, fields brushes, end frame and housing, generator mounted control panel, rectifier (does not include removal and/ or installation of unit).

### NAVIGATION COVERAGE:

✓ **NAVIGATION SYSTEM:** radar, GPS unit, GPS map receiver, auto pilot, and VHF radio.



**Best-Backed  
Warranty Program  
in the Industry**