

# 353 FASTech WIRE DIAGRAM INDEX

## AC CIRCUITS

110V AC SCHEMATIC.....	04A
220V AC SCHEMATIC.....	04B
BATTERY CHARGER.....	05
OUTLETS 110V/220V.....	06A
REFRIGERATOR.....	06B
SHORE POWER.....	07

## DC CIRCUITS

12V DC PANEL SCHEMATIC.....	08
ALARM, HIGH WATER.....	09
BATTERY CHARGING, ALT.....	10A
BLOWERS, BILGE.....	11
BLOWERS, HEAD.....	12
BOLSTER SEATS/FOOT REST.....	13
CAPTAIN'S CALL.....	38
CO SENSOR.....	16A
DC SUPPLY.....	10B
DEPTH SOUNDER.....	14A
ENGINE HATCH.....	14B
FIRE SYSTEM.....	15
FUEL SYSTEM.....	40
FUME DETECTOR.....	16B
GALVANIC ISOLATOR.....	39
GPS.....	17A
HORN.....	17B
IGNITION GASOLINE.....	18
INSTRUMENT PANELS ACCESSORY.....	19
AFT BREAKER.....	20
DASH BREAKER.....	21

## DC CIRCUITS

IGNITION.....	22
MAIN DASH.....	23
SHIFTER.....	24
LIGHTS CABIN AREA FLOOR.....	25A
OVERHEAD.....	25B
VALANCE.....	26A
V-BERTH.....	26B
DOCKING.....	28A
HEAD UNIT OVERHEAD.....	27A
COURTESY.....	27B
NAV/ANCH.....	28B
MACERATOR ELECTRICAL.....	29A
PLUMBING.....	29B
MERCATHODE.....	30
OUTDRIVES.....	31B
OUTLET 12V DC CABIN.....	32A
COCKPIT.....	32B
PUMPS BILGE ENGINE.....	33
FRESH WATER ELECTRICAL.....	34A
PLUMBING.....	34B
WASTE SYSTEM.....	35
REFRIGERATOR.....	36A
STEREO COMPONENT LOCATION.....	37A
COMPLETE WIRING.....	37B
TRIM TABS.....	31A
VHF RADIO.....	36B
OTHER INDEX.....	01
WIRE COLORS.....	02
HARNESS & PIGTAIL #'S.....	03
BONDING.....	41



# WIRE COLORS AND ABBREVIATIONS

BLACK	-----BK
BLUE	-----BL
BROWN	-----BN
GRAY	-----GY
GREEN	-----GN
ORANGE	-----OR
PINK	-----PK
PURPLE	-----PR
RED	-----RD
TAN	-----TN
WHITE	-----WT
YELLOW	-----YL

## COMMON COLOR CODES

BL/RD/RD

### NOTE :

COLOR OF WIRE MAY HAVE LT. OR DK. BEFORE THE COLOR CODE. THIS STATES THAT THE WIRE IS EITHER LIGHT OR DARK COLORED.

EXAMPLE: LT.BL/BK = LIGHT BLUE WIRE WITH A BLACK STRIPE.

CODE	COLOR	STRIPE	STRIPE
BK	BLACK		
BL/RD/RD	BLUE	RED	RED
BN/WT/RD	BROWN	WHITE	RED
GY/BN/BN	GRAY	BROWN	BROWN
GN/BL/BL	GREEN	BLUE	BLUE
OR/RD/BN	ORANGE	RED	BROWN
PK/RD	PINK	RED	
PR/WT/WT	PURPLE	WHITE	WHITE
RD/PK	RED	PINK	
TN/RD	TAN	RED	
WT/PR	WHITE	PURPLE	
YL	YELLOW		



# 353 FASTech HARNESS AND PIGTAIL #'S

## HARNESSES

DECK HARNESS.....61521

HULL HARNESS.....61522

## PIGTAIL

AC/DC PANEL.....61523

ACCESSORY PANEL.....61316

AFT CIRCUIT BREAKER.....9115

BOLSTER SEAT.....7328

DASH CIRCUIT BREAKER.....61320

HEAD PIGTAIL.....61981

IGNITION PANEL.....61315

INSTRUMENT PANEL.....6704

K-PLANE.....103447

STEREO L-PAD.....61231

V-BERTH.....6060






# LEGEND


BREAKER 

3 WIRE AC CONDUCTOR 

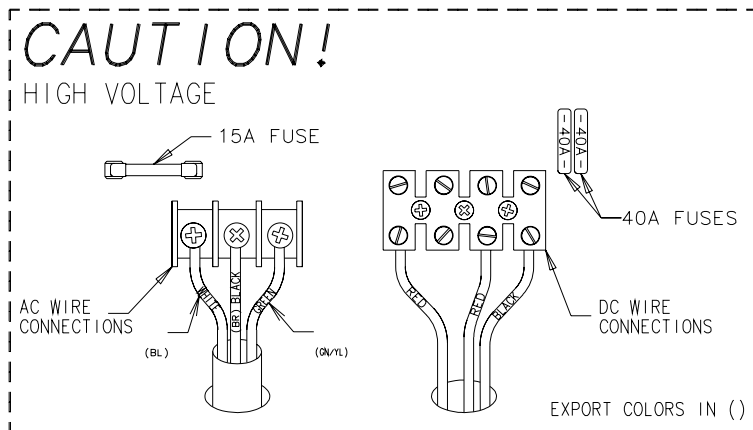

TO OPERATE:

1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. MAKE SURE THE BOAT IS SUPPLIED WITH SHOREPOWER.
3. ON THE AC/DC PANEL IN THE CABIN, SWITCH THE "BATTERY CHARGER" BREAKER TO "ON".
4. CHECK FACE OF BATTERY CHARGER FOR GREEN LIGHT.
5. AFTER 24 HOURS OF CHARGING, BATTERIES SHOULD READ 12+ VOLTS ON THE DASH VOLTMETER.
6. IF BATTERIES READ BELOW 12V OR DROP BELOW 12V WITHIN 15 MINUTES, HAVE THE BATTERIES CHECKED.

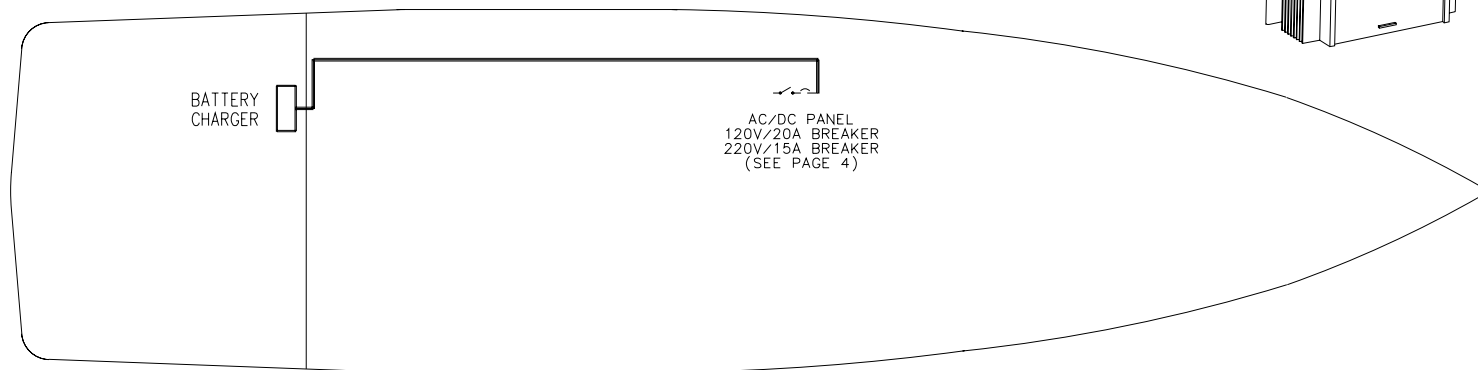

THUNDERBIRD  
PRODUCTS  
ENGINEERING

TITLE: BATTERY  
CHARGER

MOD.: 353 FASTech  
DR BY: SAJ


05

# LEGEND


BREAKER  
SWITCH

GFCI  
OUTLET


OUTLET

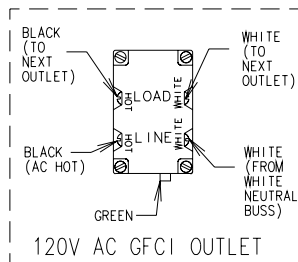

120V AC OUTLET  
(REAR VIEW)

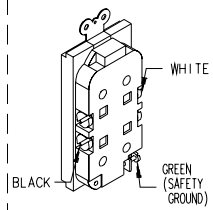


220V AC OUTLET  
(REAR VIEW)

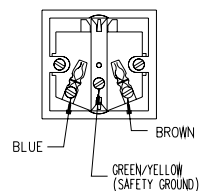

THUNDERBIRD  
PRODUCTS  
ENGINEERING

TO OPERATE:

1. MAKE SURE THE BOAT IS SUPPLIED WITH SHOREPOWER.
2. LOCATED BEHIND THE COCKPIT SLIDING STORAGE DOOR (STBD SIDE), SWITCH SHOREPOWER BREAKER TO "ON".
3. ON THE AC/DC PANEL IN THE CABIN, SWITCH AC "MAIN" BREAKER TO "ON".
4. ON THE AC/DC PANEL, SWITCH THE "CABIN OUTLETS" BREAKER TO "ON".
5. THE CABIN OUTLET IS NOW SUPPLIED WITH 120V/220V AC POWER.

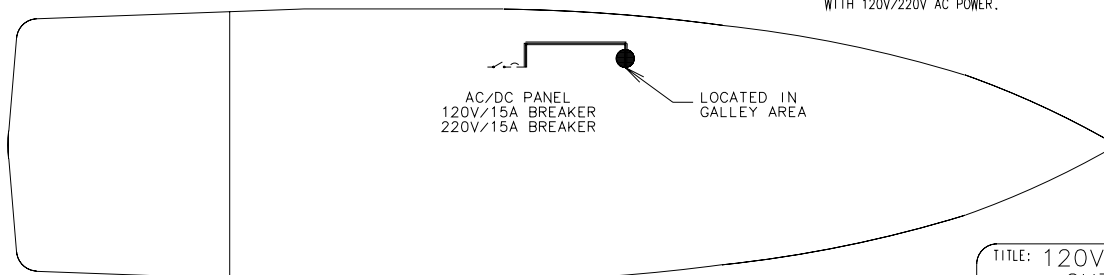

TITLE: 120V/220V  
OUTLET

MOD.: 353 FASTech  
DR BY: SAJ


06A

NOTE:

SEE PAGE 36A FOR 12V OPERATING USE.  
REFRIGERATOR SHOULD USE 120V/220V  
POWER WHEN POSSIBLE TO MAXIMIZE  
REFRIGERATION.

TO OPERATE:

1. MAKE SURE THE BOAT IS SUPPLIED WITH SHOREPOWER.
2. LOCATED BEHIND THE COCKPIT SLIDING STORAGE DOOR (STBD SIDE), SWITCH SHOREPOWER BREAKERS TO "ON".
3. ON THE AC/DC PANEL IN THE CABIN, SWITCH AC "MAIN" BREAKER TO "ON".
4. ON THE AC/DC PANEL, SWITCH THE 120V/220V "REFRIG." BREAKER TO "ON".
5. THE REFRIGERATOR IS NOW SUPPLIED WITH 120V/220V AC POWER.

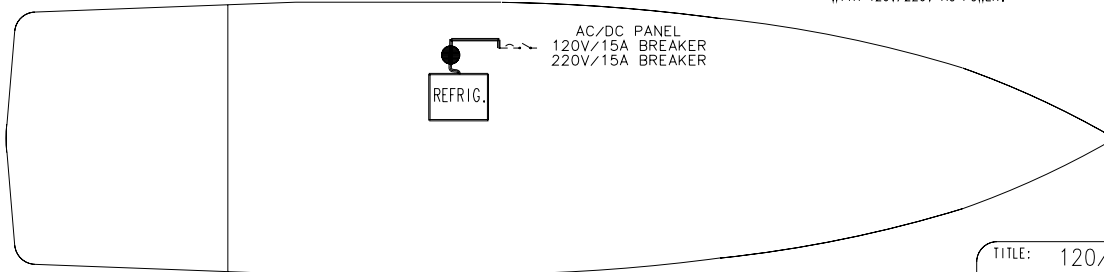


TITLE: 120V/220V  
REFRIGERATOR

MOD.: 353 FASTech  
DR BY: SAJ

06B

# LEGEND


BREAKER 

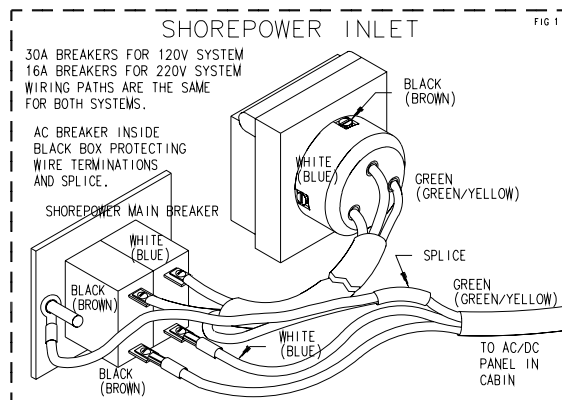

\*(READ THIS COMPLETELY BEFORE OPERATING)

TO OPERATE:

- BEFORE PLUGGING INTO SHOREPOWER SWITCH "OFF" ALL AC EQUIPMENT AND MAIN BREAKER ON AC/DC PANEL IN CABIN. ALSO SWITCH "OFF" SHOREPOWER MAIN BREAKER BEHIND AFT COCKPIT LOUNGE SEAT (STBD SIDE).
- PLUG BOAT'S SHOREPOWER CORD INTO SHOREPOWER.
- LOCATED BEHIND THE COCKPIT SLIDING STORAGE DOOR (STBD SIDE), SWITCH SHOREPOWER MAIN BREAKER TO "ON".
- IN CABIN, SWITCH SHOREPOWER BREAKER TO "ON".  
WARNING!  
IF REVERSED POLARITY LIGHT IS "ILLUMINATED"  
-DO NOT TOUCH ELECTRICAL APPLIANCES  
-LEAVE SHIP IMMEDIATELY  
-DISCONNECT ALL SHORE POWER  
ALSO:  
-CONTACT MARINA TO HAVE SHOREPOWER TESTED FOR REVERSED POLARITY.  
-CONTACT FORMULA'S TECHNICAL ASSISTANCE GROUP FOR ADDITIONAL ASSISTANCE.
- WHEN THE MAIN BREAKER IS ON AND THE REVERSE POLARITY LIGHT ISN'T ILLUMINATED ALL AC EQUIPMENT BREAKERS ARE SUPPLIED WITH 120V/220V AC POWER
- EQUIPMENT IS OPERATIONAL WHEN THE BREAKER BEARING THE EQUIPMENT'S NAME IS "ON".

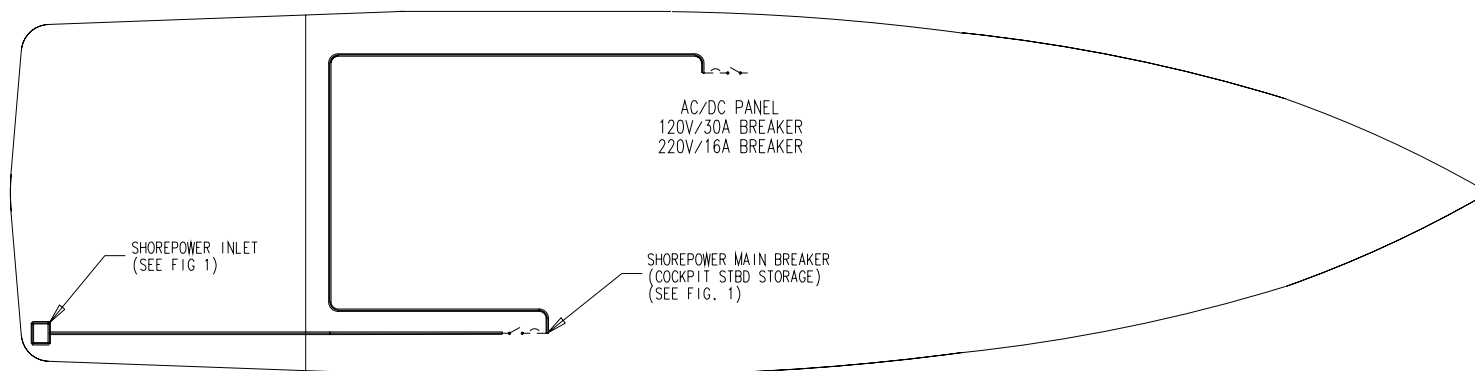


THUNDERBIRD  
PRODUCTS  
ENGINEERING

TITLE: SHOREPOWER

MOD.: 353 FASTech  
DR BY: SAJ

07

+12V DC FROM  
PLEX BLOCK

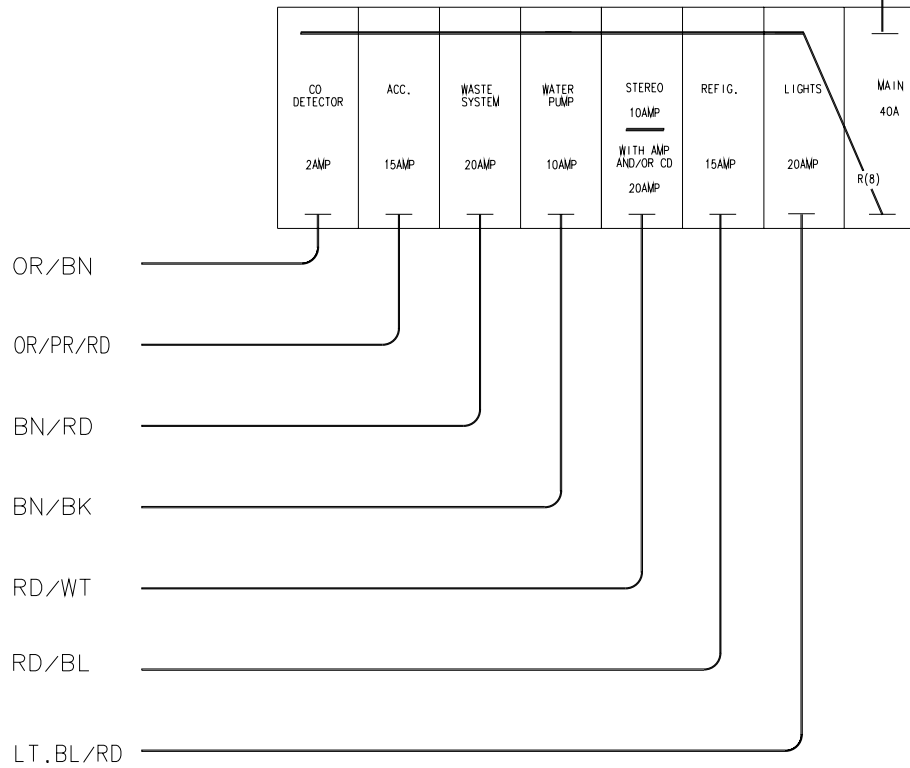

DC PANEL  
(REAR VIEW)



THUNDERBIRD  
PRODUCTS  
ENGINEERING



# LEGEND

GROUND



BREAKER



FLOAT SWITCH



ALARM




PLUG



## 10 SECOND DELAY MODULE

FIG. 1

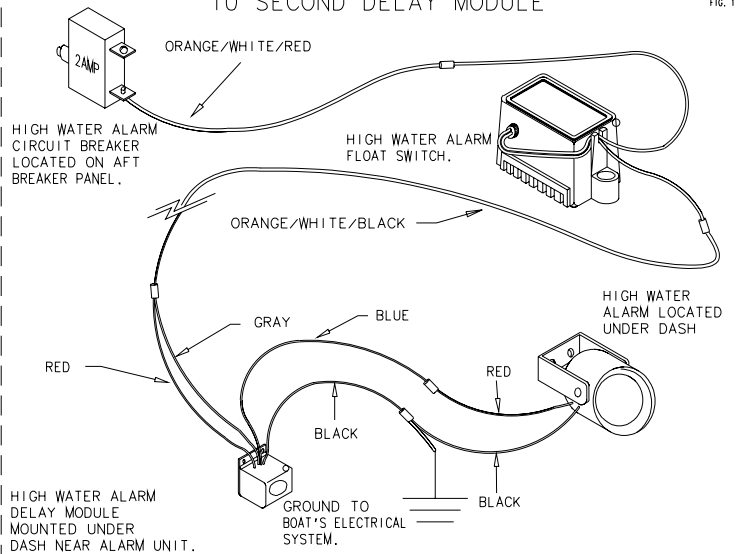


### NOTE:

THE BATTERY SELECTOR SWITCH DOES NOT NEED TO BE SWITCHED TO "ON" FOR THE HIGH WATER ALARM TO WORK.

WHEN WATER IN THE ENGINE BILGE IS AT A LEVEL THAT MAY REQUIRE MANUAL PUMPING, THE UNDER DASH ALARM WILL SOUND.

### WHEN ALARM SOUNDS:

1. CHECK ENGINE ROOM AND CABIN FOR HIGH WATER.
2. CHECK BILGE PUMPS TO SEE IF THEY ARE FUNCTIONING PROPERLY.
3. CONSULT MARINA'S SERVICE DEPARTMENT OR CALL FORMULA'S TECHNICAL ASSISTANCE GROUP.

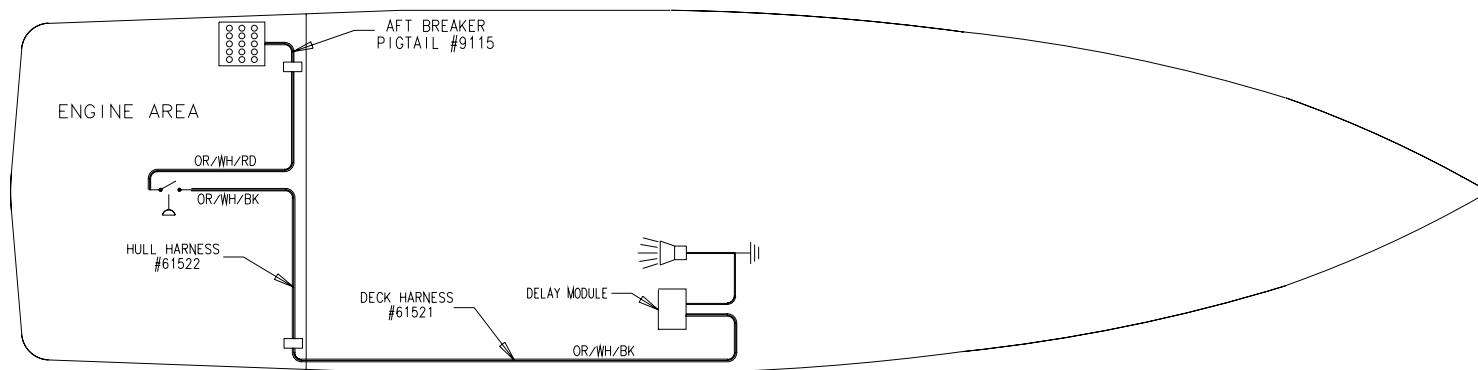

THUNDERBIRD  
PRODUCTS  
ENGINEERING

TITLE: HIGH WATER ALARM

MOD.: 353 FASTech

DR BY: SAJ

09



# LEGEND

BATTERY 

ALTERNATOR 


BREAKER  
PANEL 

## BATT. SELECTOR SWITCH

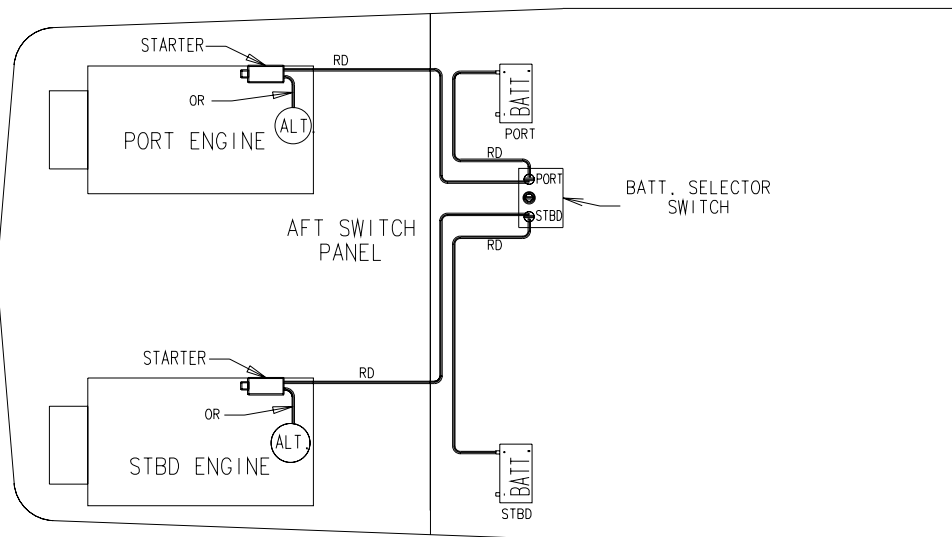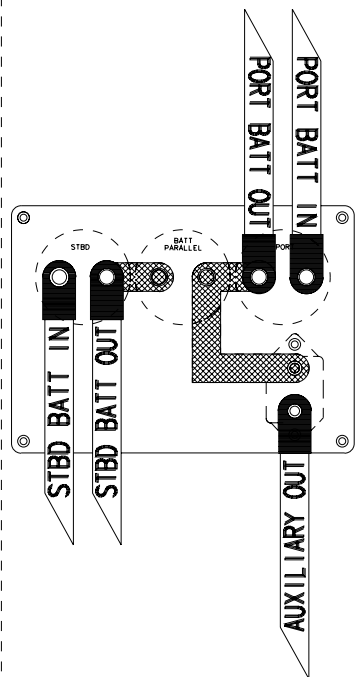

TITLE: BATTERY  
CHARGING, ALTERNATORS  
MOD.: 353FASTech  
DR BY: SAJ

10A

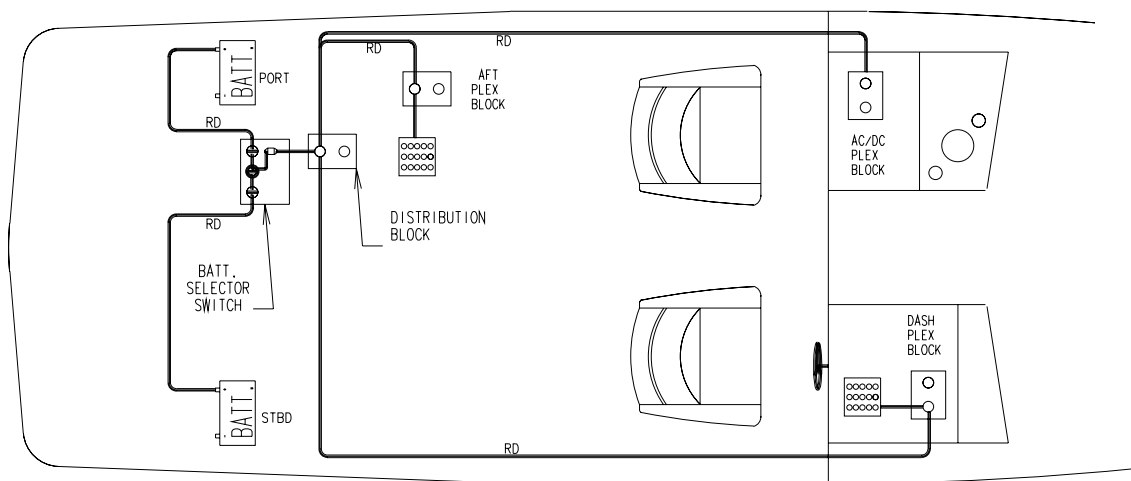

TITLE: DC SUPPLY  
MOD.: 353 FASTech  
DR BY: SAJ

10B



THUNDERBIRD  
PRODUCTS  
ENGINEERING

# LEGEND


GROUND 

BREAKER 


PLUGS 

BLOWER 


BLOWER BKR 5A  
(AFT BKR PANEL)  
(REAR VIEW)

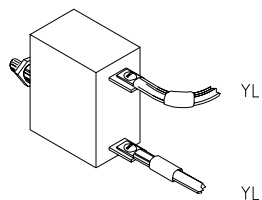

BLOWER BKR 15A  
(DASH BKR PANEL)  
(REAR VIEW)

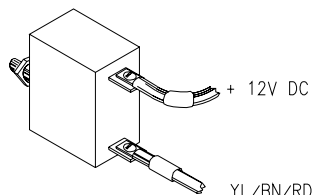

BLOWER SWITCH  
(IGNITION PANEL)  
(REAR VIEW)

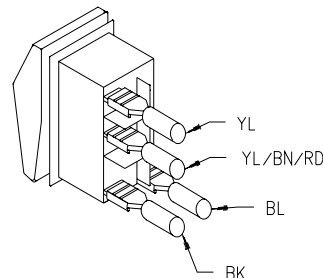


## WARNING!


GASOLINE VAPORS CAN EXPLODE,  
BEFORE STARTING ENGINES:  
-CHECK ENGINE BILGE FOR GASOLINE  
VAPORS  
-OPERATE BLOWERS FOR 4 MINUTES  
RUN BLOWERS BELOW CRUISING SPEED.

### TO OPERATE:

1. LOCATED UNDER COCKPIT FLIP-UP SEAT,  
TURN THE PORT BATTERY SWITCH TO "ON".
2. ON THE DASH BREAKER PANEL, THE "BILGE  
BLOWER" BREAKER MUST BE PUSHED IN  
(CLOSED).
3. ON THE AFT BREAKER PANEL, BOTH OF THE  
"BLOWER" BREAKERS MUST BE PUSHED IN  
(CLOSED).
4. THE BLOWERS CAN NOW BE OPERATED BY THE  
"BLOWER" SWITCH ON THE IGNITION PANEL.

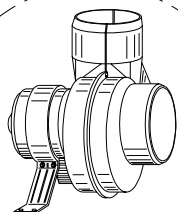

BLOWER  
UNIT

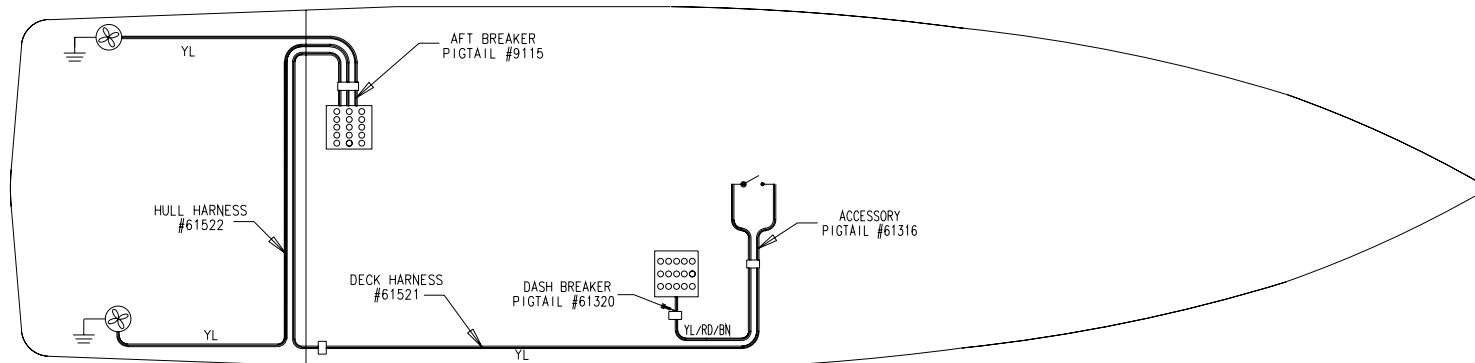

THUNDERBIRD  
PRODUCTS  
ENGINEERING

TITLE: BLOWERS,  
ENGINE BILGE


MOD.: 353 FASTech  
DR BY: SAJ

11


# LEGEND

GROUND	
BREAKER PANEL	
BLOWER	
PLUG	
SWITCH	

HEAD BLOWER  
SWITCH  
(REAR VIEW)

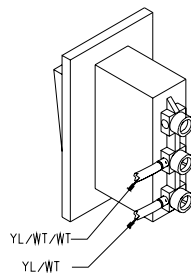


BLOWER BKR 5A  
(DASH BKR PANEL)  
(REAR VIEW)

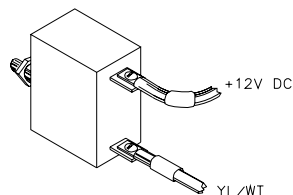

## TO OPERATE:

1. LOCATED UNDER COCKPIT FLIP-UP SEAT, TURN THE PORT BATTERY SWITCH TO "ON".
2. ON THE DASH BREAKER PANEL, THE "HEAD BLOWER" BREAKER MUST BE PUSHED IN (CLOSED).
3. THE "BLOWER" CAN NOW BE OPERATED BY THE BLOWER SWITCH IN THE HEAD.

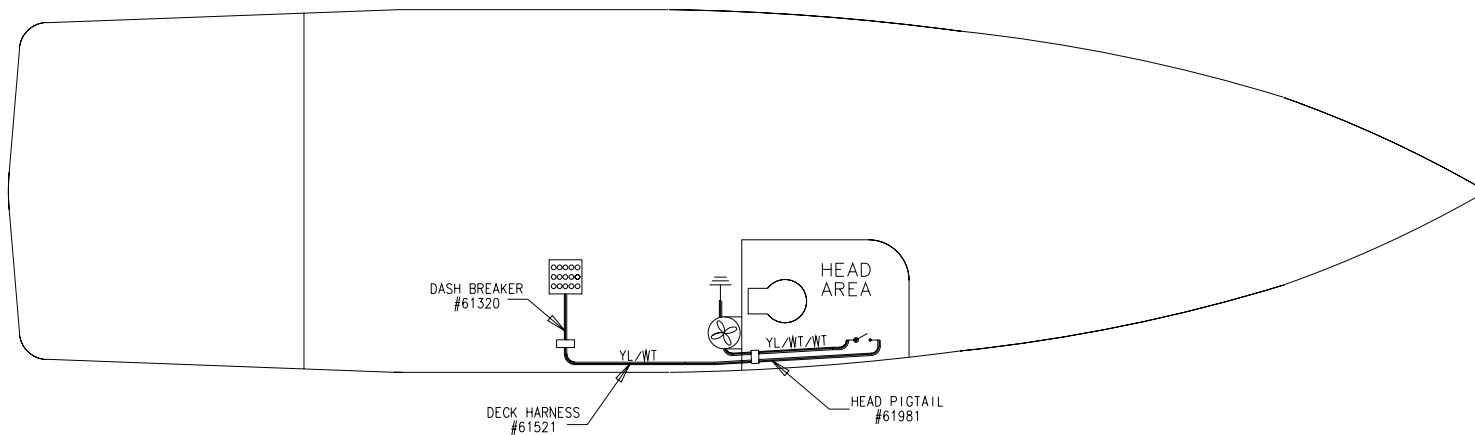

THUNDERBIRD  
PRODUCTS  
ENGINEERING

TITLE: BLOWER,  
HEAD

MOD.: 353 FASTech  
DR BY: SAJ

12

# LEGEND


GROUND 

DASH BREAKER 


PLUG 

MOTOR 

PORT BOLSTER SEAT 25A  
(DASH BKR PANEL)  
(REAR VIEW)

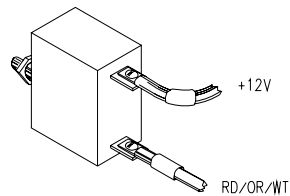


STBD BOLSTER SEAT 25A  
(DASH BKR PANEL)  
(REAR VIEW)

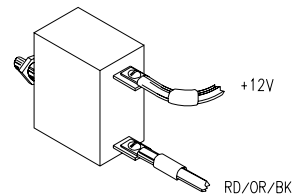

TO OPERATE:

1. LOCATED UNDER COCKPIT AFT FLIP UP SEAT, TURN THE PORT BATTERY SWITCH TO "ON".
2. ON DASH BREAKER PANEL, THE "FOOT/SEAT" BREAKERS MUST BE PUSHED IN (CLOSED).
3. THE BOLSTER SEAT AND FOOT REST CAN NOW BE RAISED AND LOWERED BY THE SWITCHES, LOCATED ON EACH SEAT'S ARM REST.

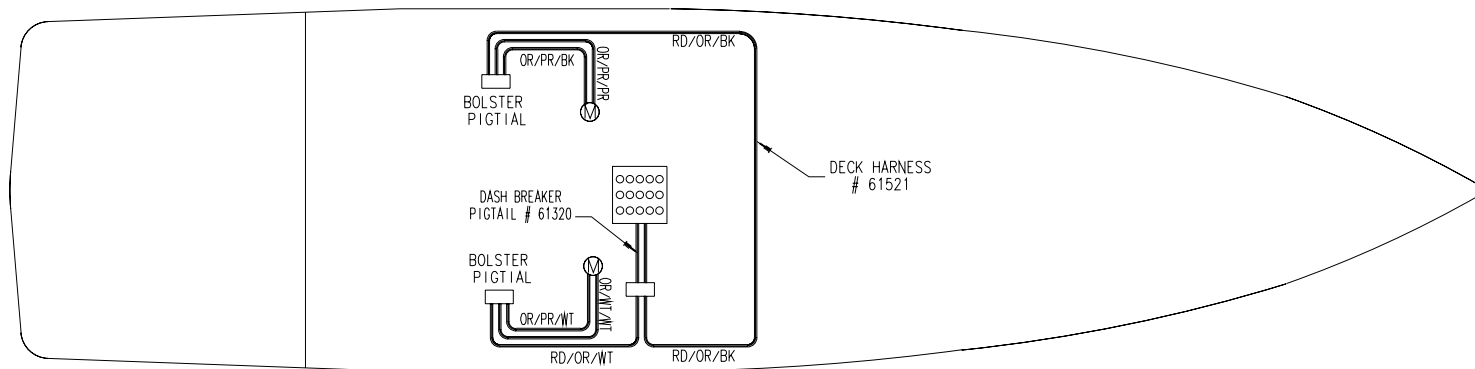

THUNDERBIRD  
PRODUCTS  
ENGINEERING

# LEGEND

GROUND



BREAKER  
PANEL



BLOWER




PLUG




SWITCH




ELECTRONIC'S BKR 5A  
(DASH BKR PANEL)  
(REAR VIEW)

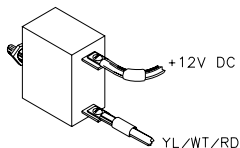

ENG. HATCH BKR 20A  
(DASH BKR PANEL)  
(REAR VIEW)

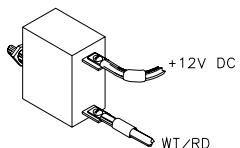


ENGINE HATCH SWITCH  
(IGNITION PANEL)  
(REAR VIEW)

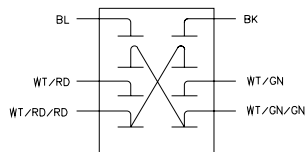

THUNDERBIRD  
PRODUCTS  
ENGINEERING

TO OPERATE:

1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, PORT SIDE, TURN THE PORT BATTERY SWITCH TO "ON".
3. ON THE DASH BREAKER PANEL THE "ELECTRONICS" BREAKER MUST BE PUSHED IN (CLOSED).
4. THE DEPTH SOUNDER CAN NOW BE OPERATED BY THE "DEPTH" SWITCH ON THE ACCESSORY PANEL.

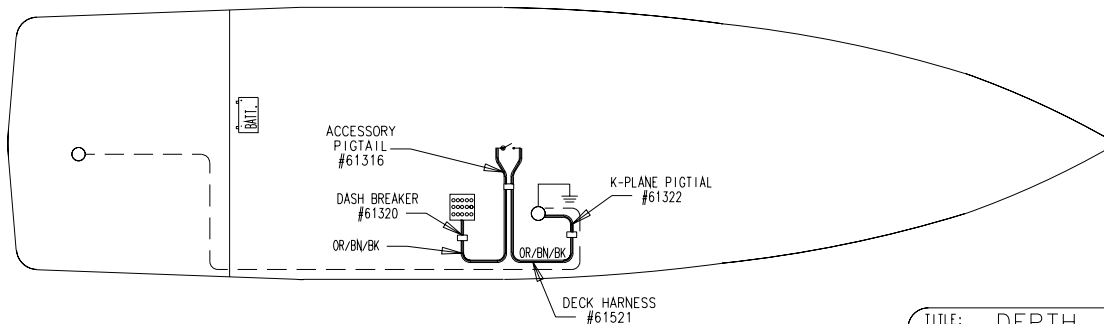

TITLE: DEPTH  
SOUNDER


MOD.: 353 FASTech

DR BY: SAJ

14A

TO OPERATE:

1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, PORT SIDE, TURN THE PORT BATTERY SWITCH TO "ON".
3. ON THE DASH BREAKER PANEL THE "ENGINE HATCH" BREAKER MUST BE PUSHED IN (CLOSED).
4. THE ENGINE HATCH CAN NOW BE OPERATED BY THE "ENGINE HATCH" SWITCH ON THE IGNITION PANEL.

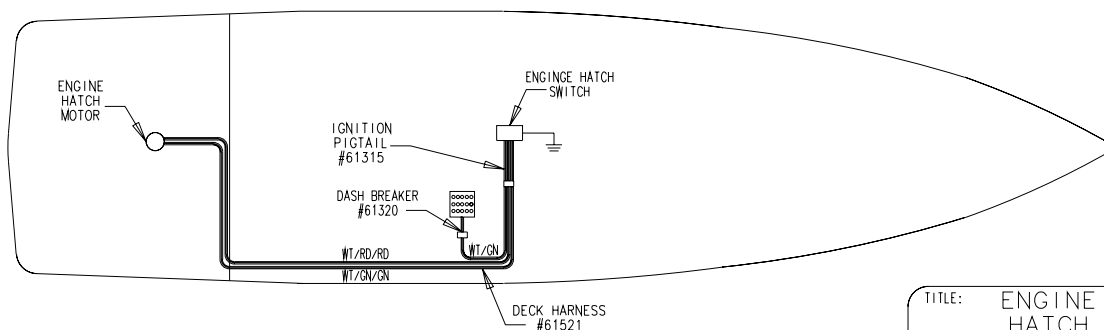

TITLE: ENGINE  
HATCH

MOD.: 353 FASTech

DR BY: SAJ

14B

# LEGEND

GROUND 


HALON LIGHT 

PLUG 

FIRE EXTINGUISHER 

IGNITION 

LABEL REPRESENTS  
THE PRESENCE OF  
A DRY-CHEMICAL  
EXTINGUISHER  
WITHIN

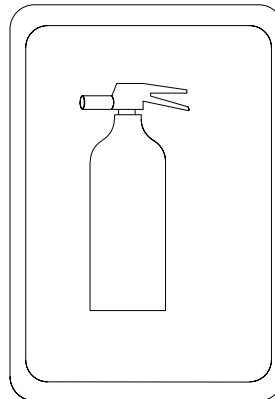


PORT SIDE STORAGE  
COMPARTMENT

LOCATED IN CABINET  
BESIDE REFRIG

## OPERATION:

THE HALON INDICATOR LIGHT  
IS POWERED BY THE STARTING  
BATTERY WHEN THE IGNITION  
SWITCH IS IN THE "ON" POSITION.  
THE LIGHT INDICATES TO THE  
OPERATOR THERE IS SUFFICIENT  
PRESSURIZATION TO EXPEL THE  
AGENT OF THE ENGINE  
COMPARTMENT EXTINGUISHER.  
THE UNIT DOES NOT REQUIRE  
12 VOLTS TO EXPEL THE AGENT.

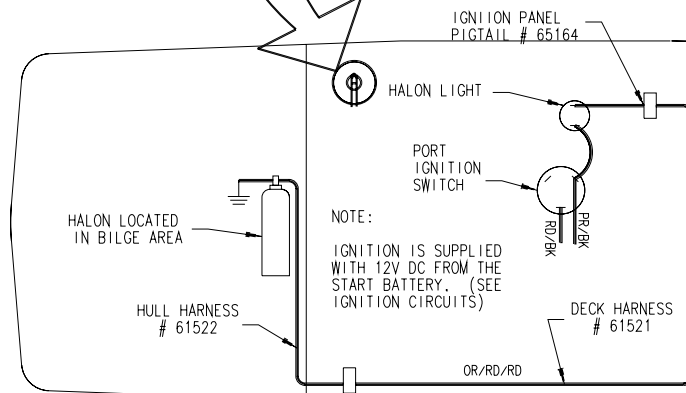

THUNDERBIRD  
PRODUCTS  
ENGINEERING

TITLE: FIRE  
SYSTEM

MOD.: 353FASTech  
DR BY: SAJ

15

# LEGEND


GROUND 

PLUG 


BREAKER 

DASH  
BREAKER 

CO DETECTOR BKR 2A  
(AC/DC PANEL)  
(REAR VIEW)

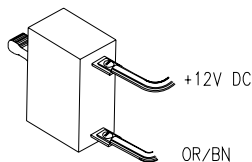

ELECTRONICS BKR 10A  
(DASH BKR PANEL)  
(REAR VIEW)

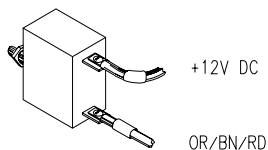


NOTE: THE CO DETECTOR PROVIDES AN AUDIBLE AND VISUAL ALARM IF CARBON MONOXIDE IS PRESENT IN THE CABIN AREA.

TO OPERATE:

READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.

1. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, TURN THE PORT BATTERY SWITCH TO "ON".
2. ON AC/DC PANEL IN THE CABIN, SWITCH THE "MAIN" AND "CO SENSOR" BREAKER TO "ON".
3. CHECK THE CO SENSOR TO BE SURE THE GREEN POWER "ON" INDICATOR IS ILLUMINATED.
4. AFTER THE INITIAL TEN (10) MINUTE WARM-UP PERIOD, PRESS THE "TEST" BUTTON. IF THE SENSOR IS O.K., THE AUDIBLE ALARM WILL SOUND AND THE GREEN POWER "ON" LIGHT WILL CHANGE TO RED.

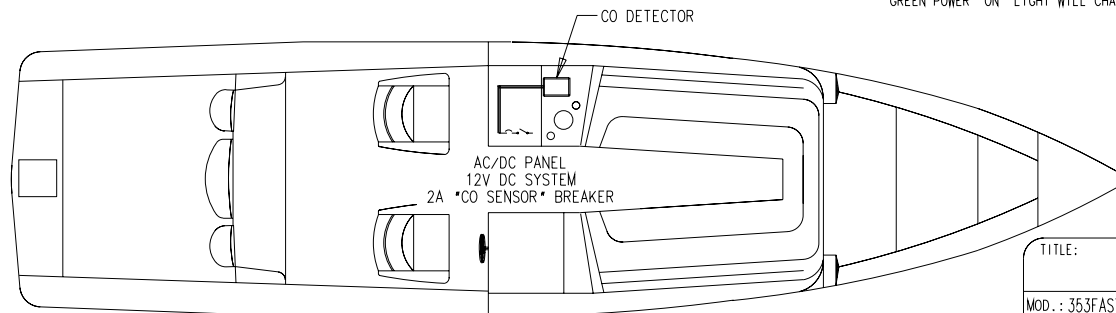


NOTE: THE FUME DETECTOR PROVIDES AN AUDIBLE AND VISUAL ALARM IF EXPLOSIVE GASES ARE PRESENT IN THE ENGINE BILGE AREA.

IN THE EVENT THE DETECTOR GOES INTO THE ALARM MODE, OPERATE THE ENGINE BLOWERS AND INSPECT FOR THE SOURCE.

TO OPERATE:

READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.

1. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, TURN THE PORT BATTERY SWITCH TO "ON".
2. ON DASH BREAKER PANEL THE "ELECTRONICS" BREAKER MUST BE PUSHED IN (CLOSED).
3. PRESS THE "ON" BUTTON LOCATED UPON THE DETECTOR FACE.
4. PRESS "TEST"

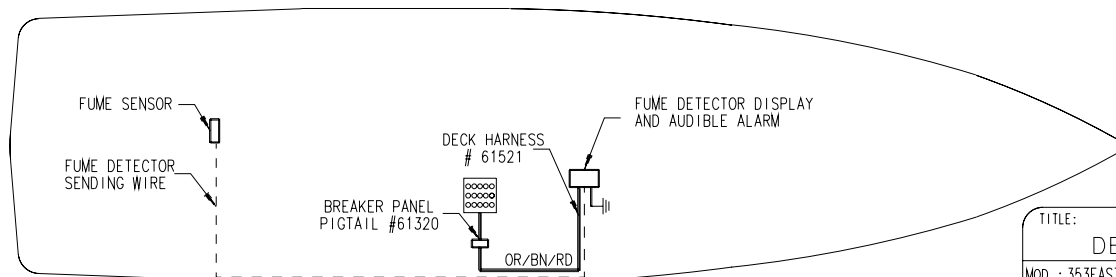


THUNDERBIRD  
PRODUCTS  
ENGINEERING



# LEGEND


GROUND 

SWITCH 


PLUG 

BREAKER PANEL 


## ELECTRONICS BKR 10A (DASH BKR PANEL) (REAR VIEW)

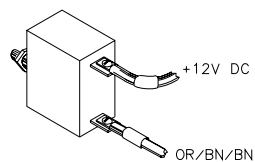

## HORN SWITCH (IGNITION PANEL) (REAR VIEW)

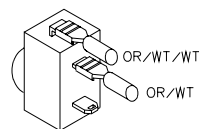



## HORN BKR 20A (DASH BKR PANEL) (REAR VIEW)

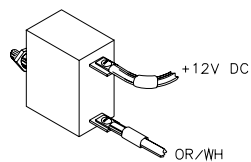

## HORN COMPRESSOR MAINTENANCE


### LUBRICATION (Very Important)

Lubricate compressor every 4-5 months. Remove air hose from compressor and apply 3 to 4 drops of light machine oil into the air port. Let oil set for a few minutes and then activate the compressor momentarily to distribute the oil. Reconnect the air hose.

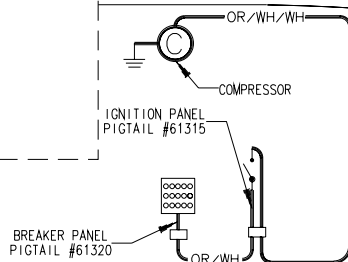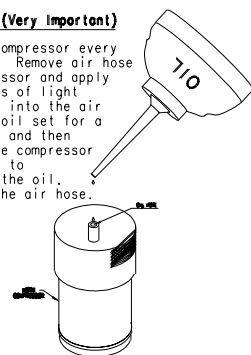

## TO OPERATE:


1. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, TURN THE PORT BATTERY SWITCH TO "ON".
2. ON DASH BREAKER PANEL, THE "ELECTRONICS" BREAKER MUST BE PUSHED IN (CLOSED).
3. THE GPS CAN NOW BE OPERATED.

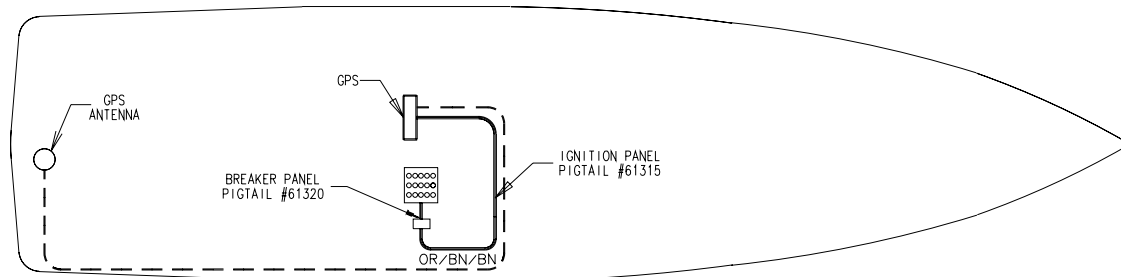

TITLE:	GPS
MOD.: 353FASTech	17A
DR BY: SAJ	

## TO OPERATE:

1. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, TURN THE PORT BATTERY SWITCH TO "ON".
2. ON DASH BREAKER PANEL, THE "HORN" BREAKER MUST BE PUSHED IN (CLOSED).
3. THE HORN CAN NOW BE OPERATED BY THE "HORN" SWITCH ON THE IGNITION PANEL.

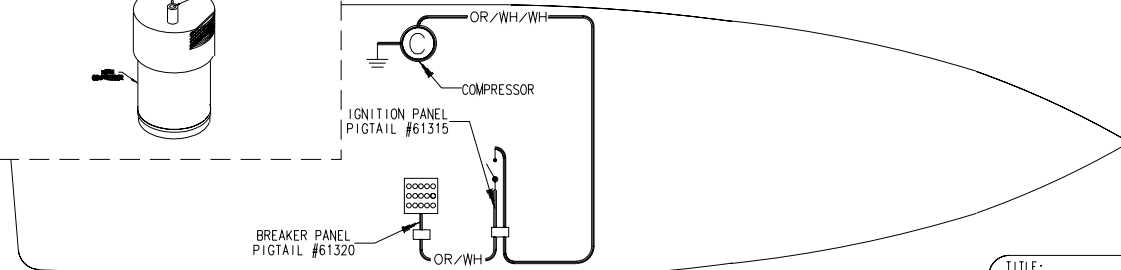

TITLE:	HORN
MOD.: 353FASTech	17B
DR BY: SAJ	




THUNDERBIRD  
PRODUCTS  
ENGINEERING

# LEGEND

GROUND




IGNITION  
BREAKER  
PANEL

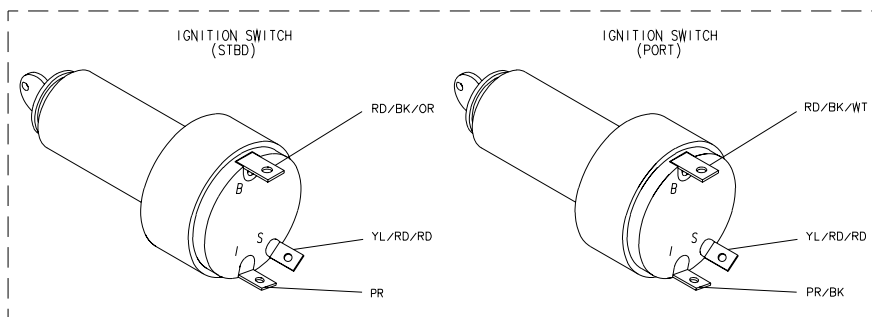

TO OPERATE:



1. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, TURN THE BATTERY SWITCHES TO "ON".
2. THIS WILL ALLOW BOTH THE FUME DETECTOR AND THE ENGINE BLOWERS TO OPERATE WHEN NEEDED.
3. LOCATED ON THE UNDER DASH BREAKER PANEL IGN. BREAKERS MUST BE PUSHED IN "CLOSED".
4. ENGINES ARE NOW READY TO BE STARTED BY TURNING THE IGNITION SWITCHES CLOCKWISE.

## IGNITION BKRS 20A (DASH BKR PANEL) (REAR VIEW)

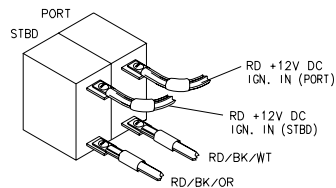

NOTE:

SEE MercRUISER MANUAL FOR FURTHER INFORMATION AND WARNING CONNECTIONS ON ENGINE EQUIPMENT.

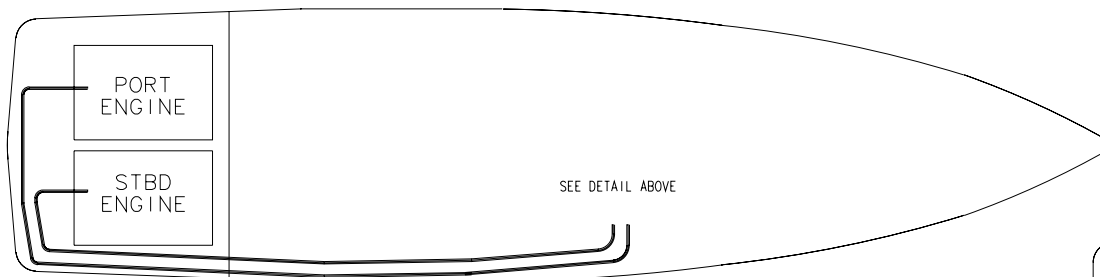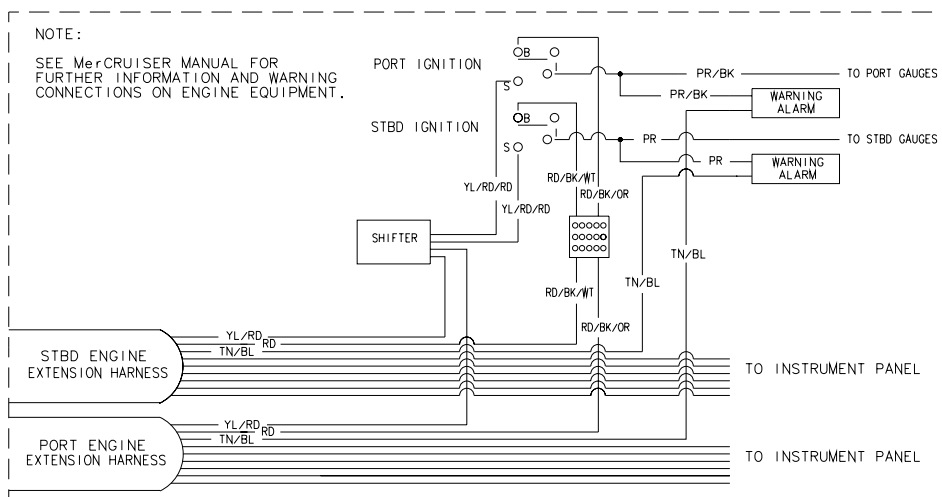


THUNDERBIRD  
PRODUCTS  
ENGINEERING

TITLE: IGNITION,  
GASOLINE


MOD.: 353FASTech  
DR BY: SAJ

18


# 353 FASTech ACCESSORY PANEL (REAR VIEW)

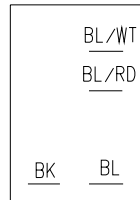


COURTESY  
LIGHTS

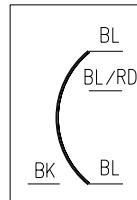


PANEL  
LIGHTS

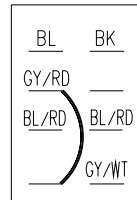


NAV/ANCH  
LIGHT

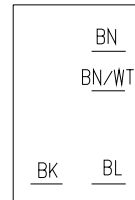


BILGE  
PUMP

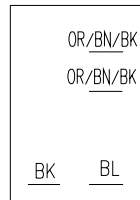

DEPTH  
SOUNDER

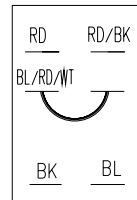

DOCKING  
LIGHTS

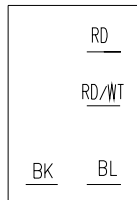

EXHAUST

CODE	COLOR	STRIPE	STRIPE
BL	BLUE		
BL/RD	BLUE	RED	
BL/WT	BLUE	WHITE	
BL/WT/RD	BLUE	WHITE	RED
BK	BLACK		
BN	BROWN		
BN/WT	BROWN	WHITE	
GY/RD	GRAY	RED	
GY/WT	GRAY	WHITE	
OR/BN/BK	ORANGE	BROWN	BLACK
RD	RED		
RD/BK	RED	BLACK	
RD/WT	RED	WHITE	





THUNDERBIRD  
PRODUCTS  
ENGINEERING

PANEL #61652  
PIGTAIL #61316

TITLE: ACCESSORY  
PANEL

MOD.: 353 FASTech  
DR BY: SAJ

AFT BREAKER PANEL  
(LOCATED UNDER COCKPIT  
AFT FLIP-UP SEAT)

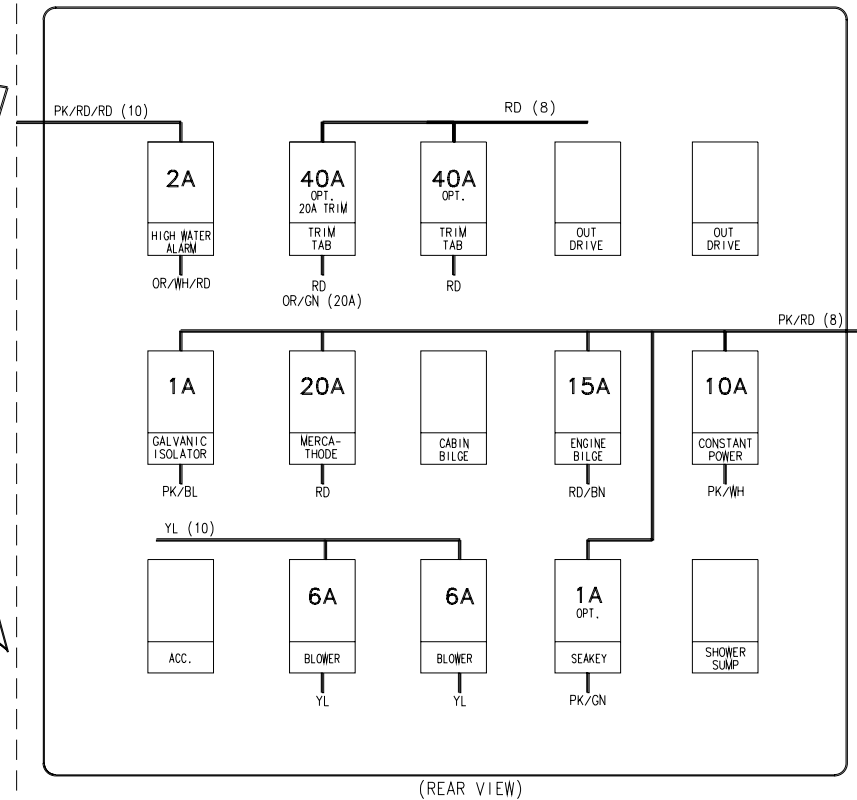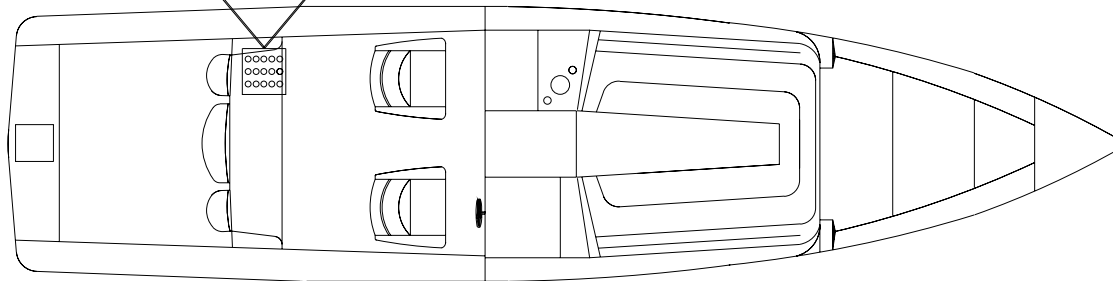

PANEL #185112


PIGTAIL #9115



THUNDERBIRD  
PRODUCTS  
ENGINEERING

TITLE: AFT  
BREAKER PANEL  
MOD.: 353 FASTech  
DR BY: SAJ


20

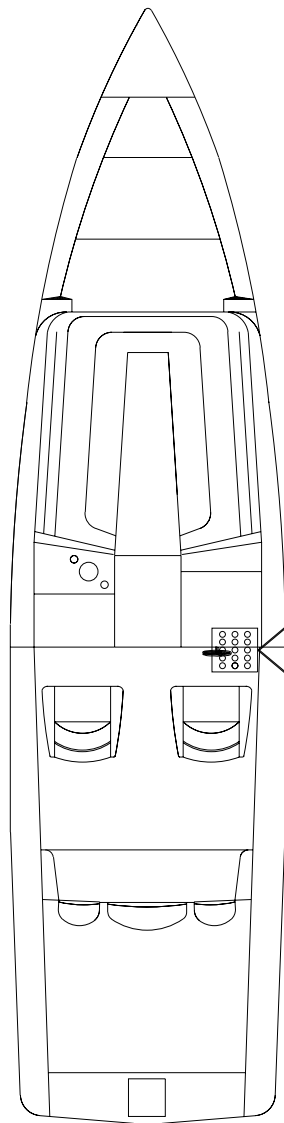

PANEL #9069

PIGTAIL #61320

DASH BREAKER PANEL  
(BELOW DASH STBD SIDE)

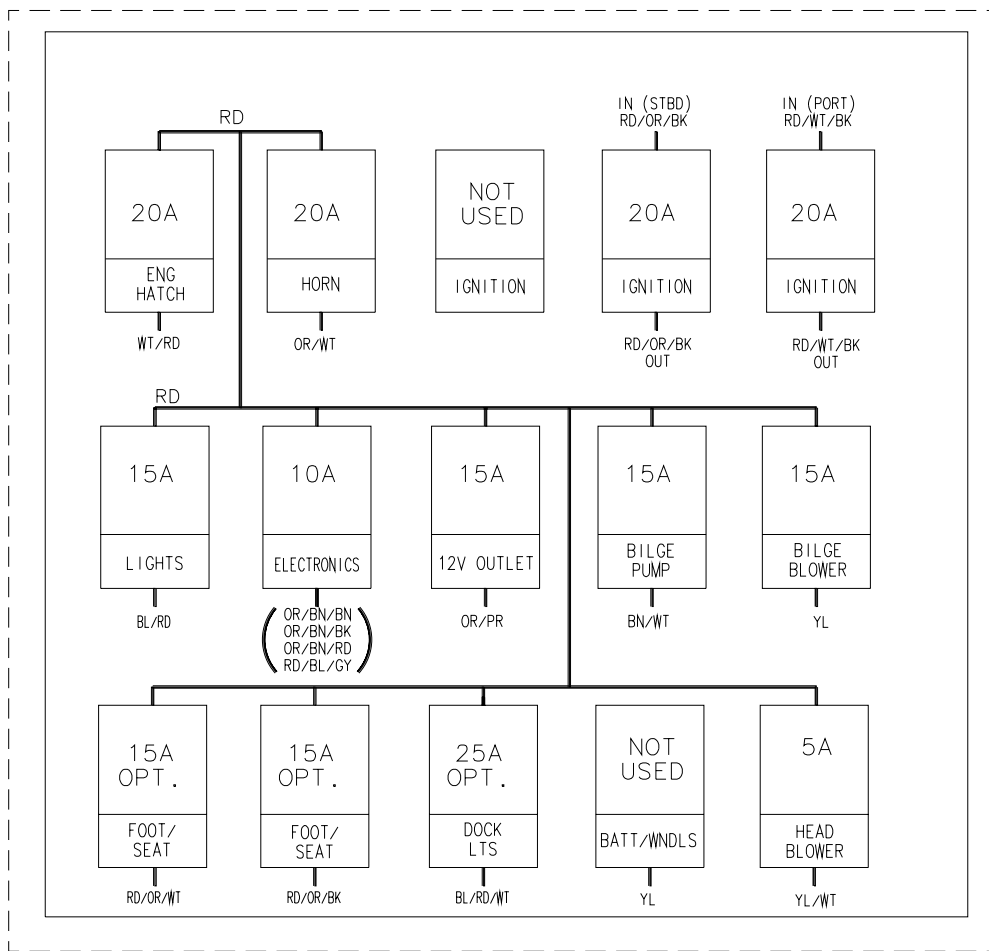

THUNDERBIRD  
PRODUCTS  
ENGINEERING

TITLE: DASH  
BREAKER PANEL

MOD.: 353 FASTech


DR BY: SAJ

21

# IGNITION PANEL

## 353 FASTech

### (REAR VIEW)

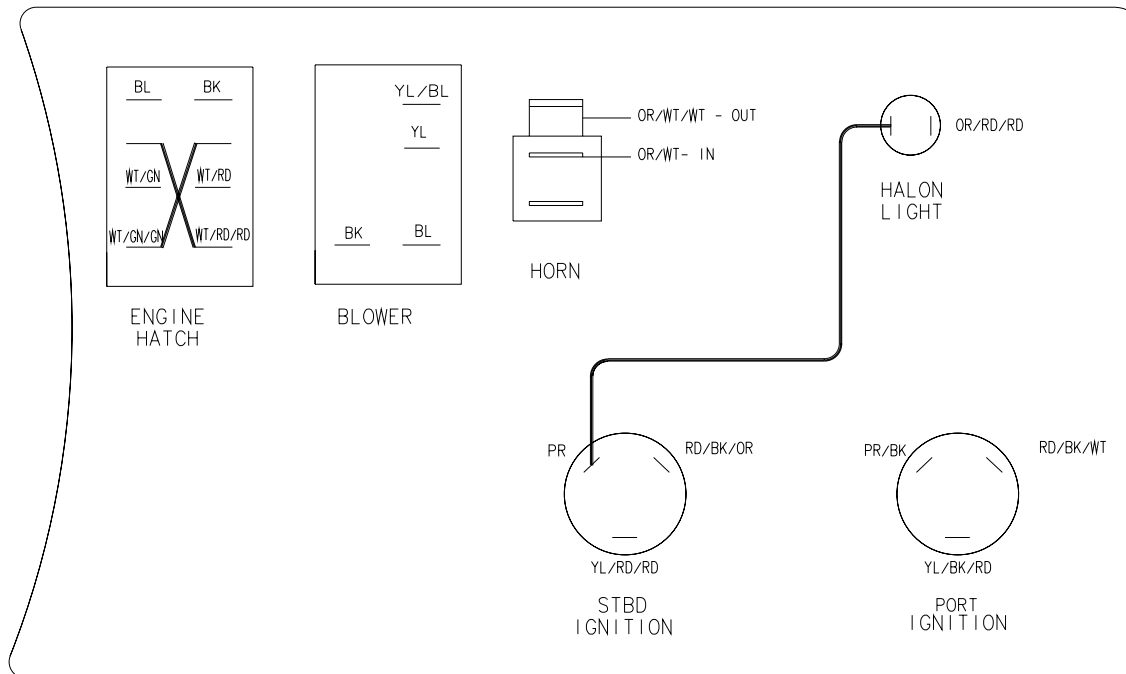

CODE	COLOR	STRIPE	STRIPE
BK	BLACK		
BL	BLUE		
OR/RD/RD	ORANGE	RED	RED
OR/WT	ORANGE	WHITE	
OR/WT/WT	ORANGE	WHITE	WHITE
PR	PURPLE		
PR/BK	PURPLE	BLACK	
RD/BK/OR	RED	BLACK	ORANGE
RD/BK/WT	RED	BLACK	WHITE
YL	YELLOW		
YL/BL	YELLOW	BLUE	
YL/BK/RD	YELLOW	BLACK	RED
YL/RD/RD	YELLOW	RED	RED
WT/GN	WHITE	GREEN	
WT/GN/GN	WHITE	GREEN	GREEN
WT/RD	WHITE	RED	
WT/RD/RD	WHITE	RED	RED



THUNDERBIRD  
PRODUCTS  
ENGINEERING


PANEL #61648  
PIGTAIL #61315

TITLE: IGNITION  
PANEL  
MOD.: 353 FASTech  
DR BY: SAJ

# INSTRUMENT PANEL

## 353 FASTech

### (REAR VIEW)

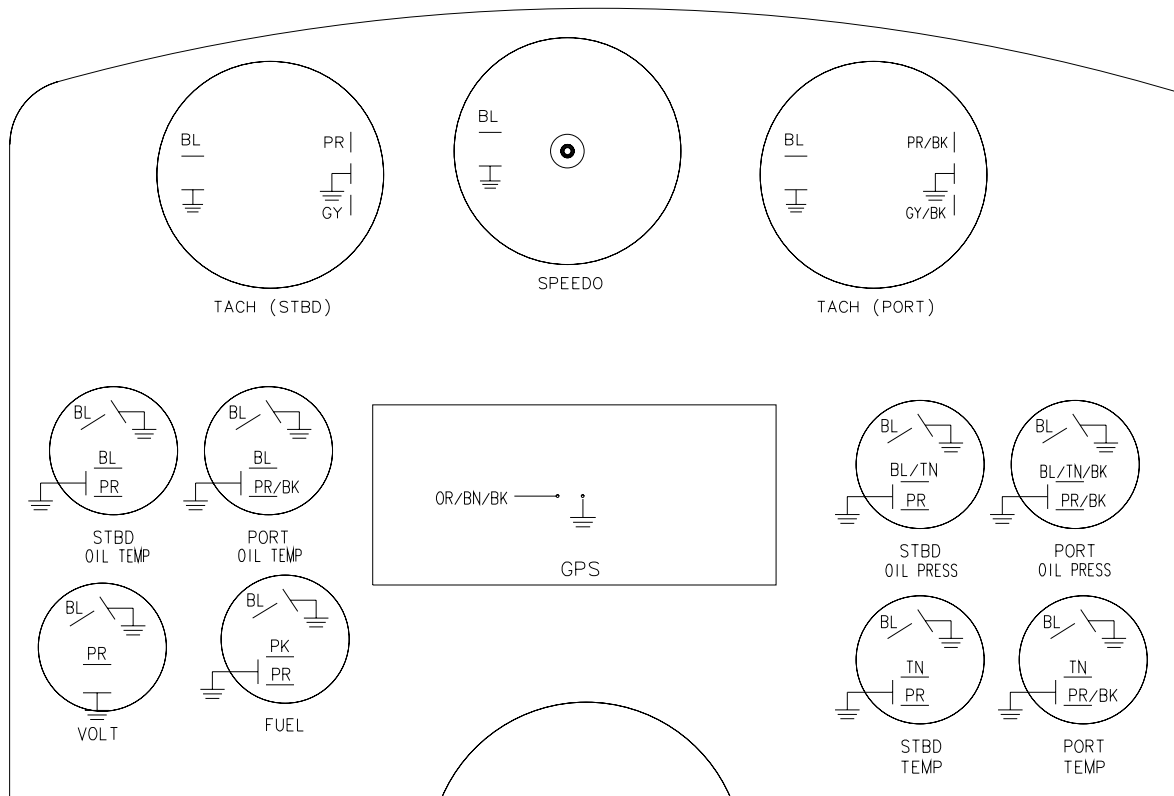

CODE	COLOR	STRIPE	STRIPE
BK	BLACK		
BL	BLUE		
GY	GRAY		
GY	GRAY	BLACK	
OR/BN/BK	ORANGE	BROWN	BLACK
OR/BN/BN	ORANGE	BROWN	BROWN
PK	PINK		
PR	PURPLE		
PR/BK	PURPLE	BLACK	
TN	TAN		



THUNDERBIRD  
PRODUCTS  
ENGINEERING




PANEL #61665  
PIGTAIL #6704  
3471 (2)

TITLE: MAIN  
INSTRUMENT PANEL  
MOD.: 353 FASTech  
DR BY: SAJ


# INSTRUMENT SHIFTER PANEL

## 353 FASTech


### (REAR VIEW)

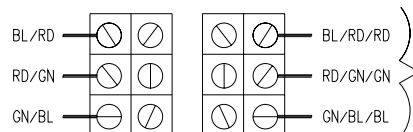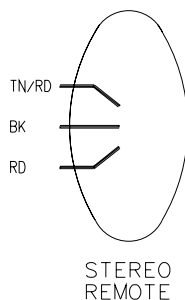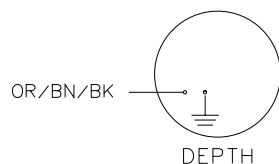

TABS

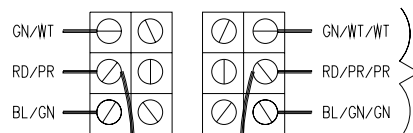

DRIVES

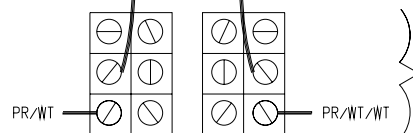

DRIVES TRAILER

CODE	COLOR	STRIPE	STRIPE
BK	BLACK		
BL/GN	BLUE	GREEN	
BL/GN/GN	BLUE	GREEN	GREEN
BL/RD	BLUE	RED	
BL/RD/RD	BLUE	RED	RED
GN/BL	GREEN	BLUE	
GN/BL/BL	GREEN	BLUE	BLUE
GN/WT	GREEN	WHITE	
GN/WT/WT	GREEN	WHITE	WHITE
OR/BN/BK	ORANGE	BROWN	BLACK
PR/WT	PURPLE	WHITE	
PR/WT/WT	PURPLE	WHITE	WHITE
RD	RED		
RD/GN	RED	GREEN	
RD/GN/GN	RED	GREEN	GREEN
RD/PR	RED	PURPLE	
RD/PR/PR	RED	PURPLE	PURPLE
TN/RD	TAN	RED	



THUNDERBIRD  
PRODUCTS  
ENGINEERING

PANEL #61649  
PIGTAIL #61322

TITLE: INSTRUMENT  
SHIFTER PANEL

MOD.: 353 FASTech  
DR BY: SAJ

24



# LEGEND

GROUND 

 
SWITCH 

AC/DC  
BREAKER 


PLUG 

LIGHT 

LIGHT SWITCH,  
FLOOR




MAIN CABIN LIGHT  
SWITCHES

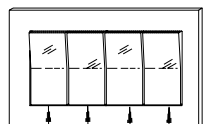


FLOOR  
OVERHEAD  
V-BERTH  
VALANCE

 LIGHT SWITCH,  
CABIN



TO OPERATE:

1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, PORT SIDE, TURN THE PORT BATTERY SWITCH TO "ON".
3. ON THE AC/DC PANEL IN THE CABIN, SWITCH THE 12V DC SYSTEM "MAIN" AND "LIGHTS" BREAKERS TO "ON".
4. THE FLOOR LIGHTS CAN NOW BE OPERATED BY THE FIRST LIGHT SWITCH AT THE ENTRYWAY.

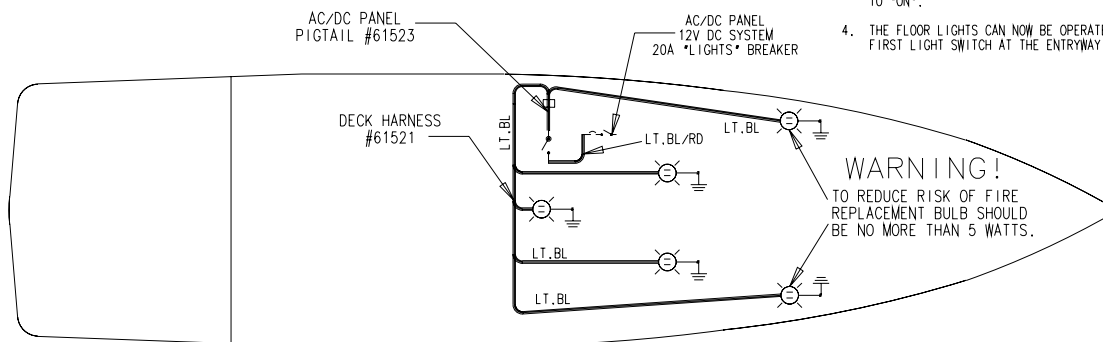

**WARNING!**

TO REDUCE RISK OF FIRE  
REPLACEMENT BULB SHOULD  
BE NO MORE THAN 5 WATTS.

TITLE: LIGHTS,  
FLOOR


MOD.: 353FASTech

DR BY: SAJ

25A

TO OPERATE:

1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, PORT SIDE, TURN THE PORT BATTERY SWITCH TO "ON".
3. ON THE AC/DC PANEL IN THE CABIN, SWITCH THE 12V DC SYSTEM "MAIN" AND "LIGHTS" BREAKERS TO "ON".
4. THE OVERHEAD LIGHTS CAN NOW BE OPERATED BY THE SECOND LIGHT SWITCH AT THE ENTRYWAY.

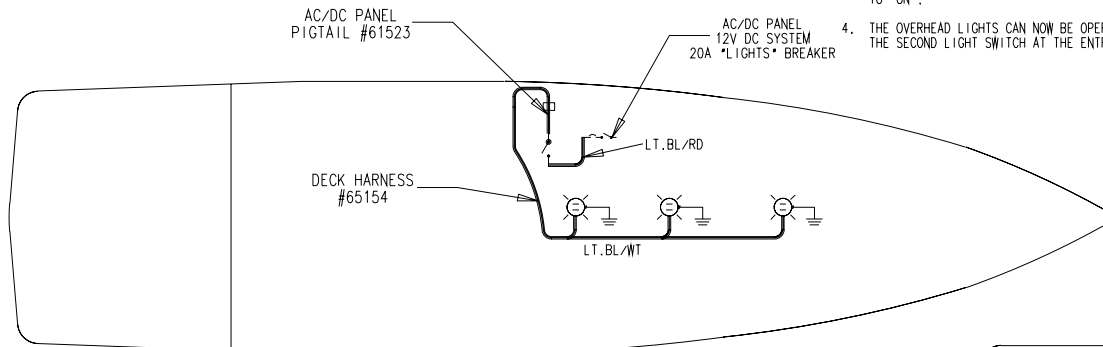

TITLE: LIGHTS,  
OVERHEAD

MOD.: 353FASTech

DR BY: SAJ

25B



THUNDERBIRD  
PRODUCTS  
ENGINEERING


# LEGEND

GROUND 

 
SWITCH 

AC/DC BREAKER 


PLUG 

LIGHT 

LIGHT SWITCH,  
VALANCE




MAIN CABIN LIGHT  
SWITCHES

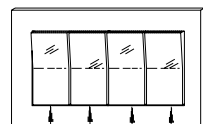

FLOOR OVERHEAD V-BERTH  
VALANCE

 
LIGHT SWITCH,  
V-BERTH



AC/DC PANEL  
PIGTAIL #61523

AC/DC PANEL  
12V DC SYSTEM  
20A "LIGHTS" BREAKER

DECK HARNESS  
#61521

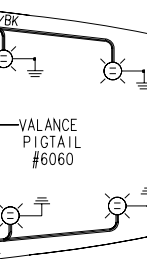

TO OPERATE:

1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, PORT SIDE, TURN THE PORT BATTERY SWITCH TO "ON".
3. ON THE AC/DC PANEL IN THE CABIN, SWITCH THE 12V DC SYSTEM "MAIN" AND "LIGHTS" BREAKERS TO "ON".
4. THE VALANCE LIGHTS CAN NOW BE OPERATED BY THE THIRD LIGHT SWITCH AT THE ENTRYWAY.

TITLE: LIGHTS,  
VALANCE

MOD.: 353FASTech  
DR BY: SAJ

26A

AC/DC PANEL  
PIGTAIL #61523

AC/DC PANEL  
12V DC SYSTEM  
20A "LIGHTS" BREAKER

DECK HARNESS  
#61521

LT.BL/RD

LT.BL/GY

TO OPERATE:

1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, PORT SIDE, TURN THE PORT BATTERY SWITCH TO "ON".
3. ON THE AC/DC PANEL IN THE CABIN, SWITCH THE 12V DC SYSTEM "MAIN" AND "LIGHTS" BREAKERS TO "ON".
4. THE V-BERTH LIGHTS CAN NOW BE OPERATED BY THE FOURTH LIGHT SWITCH AT THE ENTRYWAY.

TITLE: LIGHTS,  
V-BERTH

MOD.: 353FASTech  
DR BY: SAJ

26B



THUNDERBIRD  
PRODUCTS  
ENGINEERING

# LEGEND

GROUND



SWITCH



AC/DC  
BREAKER



 
PLUG




LIGHT



LIGHT SWITCH,  
HEAD




HEAD  
SWITCHES

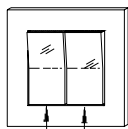


BLOWER LIGHT

LIGHTS BKR 15A  
(DASH BKR PANEL)  
(REAR VIEW)

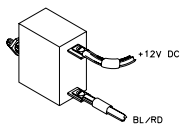


COURTESY  
COCKPIT

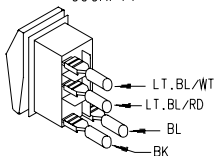

THUNDERBIRD  
PRODUCTS  
ENGINEERING

TO OPERATE:

1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, PORT SIDE, TURN THE PORT BATTERY SWITCH TO "ON".
3. ON THE AC/DC PANEL IN THE CABIN, SWITCH THE 12V DC SYSTEM "MAIN" AND "LIGHTS" BREAKERS TO "ON".
4. THE HEAD LIGHTS CAN NOW BE OPERATED BY THE SECOND LIGHT SWITCH IN THE HEAD.

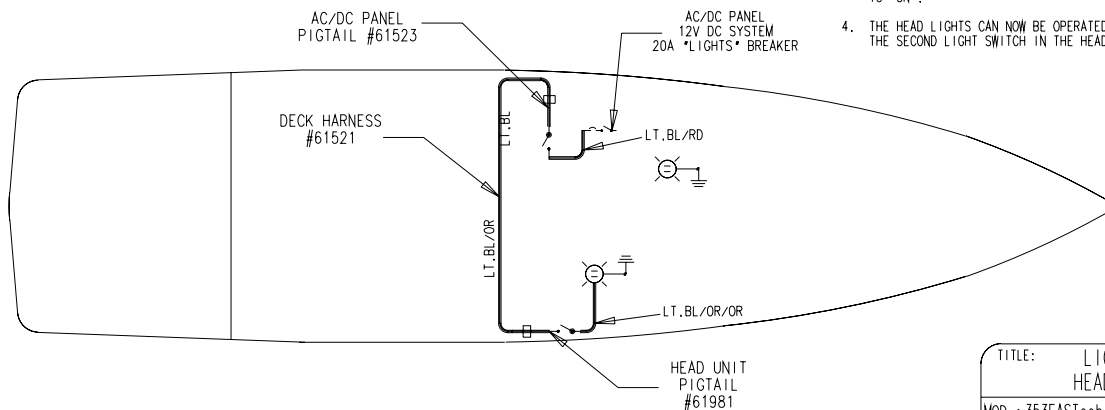

TITLE: LIGHTS,  
HEAD UNIT


MOD.: 353FASTech

DR BY: SAJ

27A

TO OPERATE:

1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. LOCATED UNDER THE COCKPIT AFT FLIP-UP SEAT, PORT SIDE, TURN THE PORT BATTERY SWITCH TO "ON".
3. ON THE DASH BREAKER PANEL, THE "LIGHTS" BREAKER MUST BE PUSHED IN (CLOSED).
4. THE COURTESY LIGHTS CAN NOW BE OPERATED BY THE "COURT LTS" SWITCH ON THE ACCESSORY PANEL.

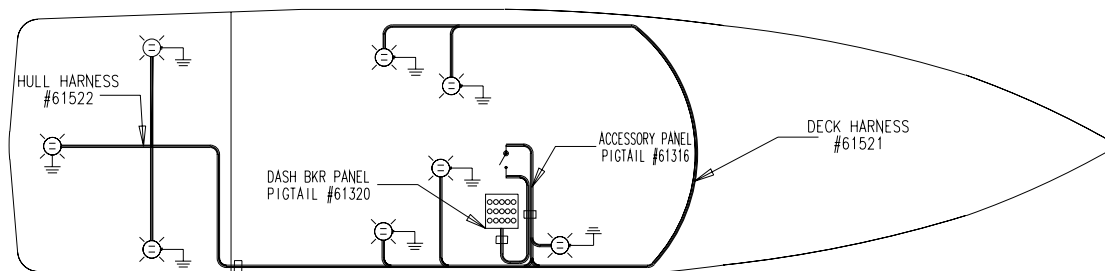

TITLE: LIGHTS,  
COCKPIT COURTESY


MOD.: 353FASTech

DR BY: SAJ

27B

# LEGEND

GROUND 

SWITCH 


BREAKER 

PLUG 


LIGHT 

DPDT SWITCH 


LIGHT SWITCH,  
DOCKING

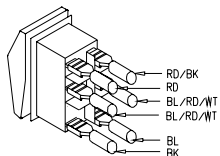

LIGHTS BKR 15A  
(DASH BKR PANEL)  
(REAR VIEW)

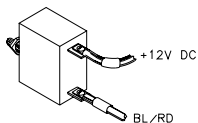


LIGHT SWITCH,  
NAV/ANCH

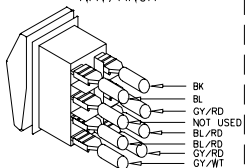

THUNDERBIRD  
PRODUCTS  
ENGINEERING

TO OPERATE:

1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, PORT SIDE, TURN THE PORT BATTERY SWITCH TO "ON".
3. ON THE DASH BREAKER PANEL, THE "LIGHTS" BREAKER MUST BE PUSHED IN (CLOSED).
4. THE DOCKING LIGHTS CAN NOW BE OPERATED BY THE "DOCK LTS" SWITCH ON THE ACCESSORY PANEL.

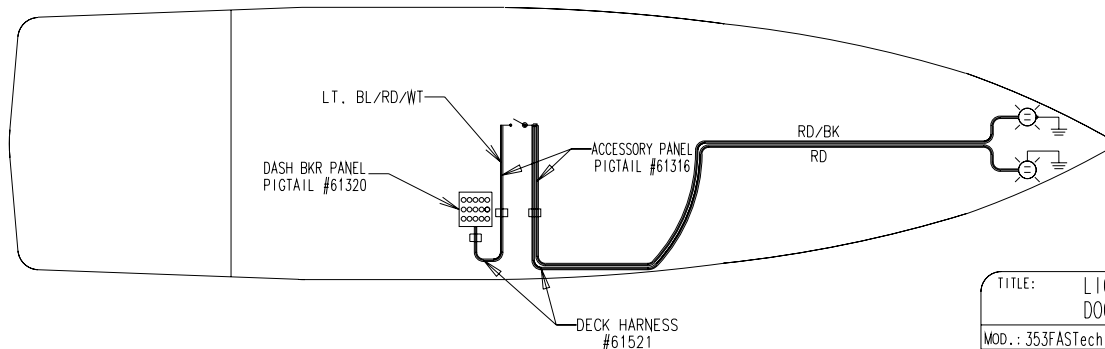

TITLE: LIGHTS,  
DOCKING


MOD.: 353FASTech

DR BY: SAJ

28A

TO OPERATE:

1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, PORT SIDE, TURN THE PORT BATTERY SWITCH TO "ON".
3. ON THE DASH BREAKER PANEL, THE "LIGHTS" BREAKER MUST BE PUSHED IN (CLOSED).
4. THE NAV/ANCH LIGHTS CAN NOW BE OPERATED BY THE "NAV/ANCH" SWITCH ON THE ACCESSORY PANEL.

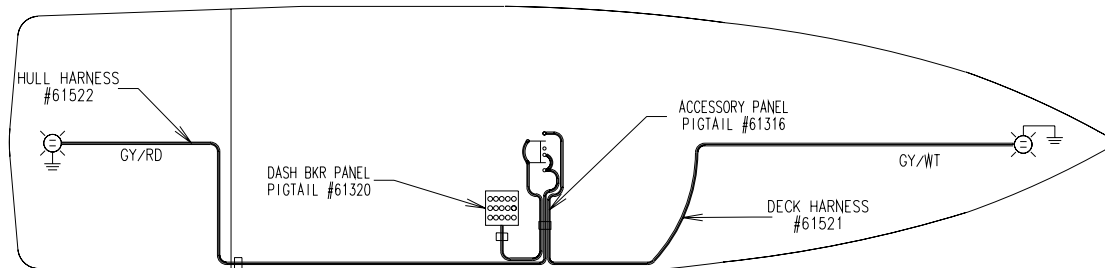

TITLE: LIGHTS,  
NAVIGATION/ANCHOR

MOD.: 353FASTech

DR BY: SAJ

28B

# LEGEND


GROUND 

SWITCH 


AC/DC  
BREAKER 

PLUG 

MACERATOR SWITCH  
(LOCATED NEXT TO  
HEAD UNIT)  
(REAR VIEW)

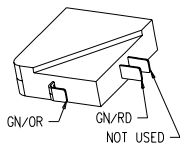

MACERATOR BKR 20A  
(DASH BKR PANEL)  
(REAR VIEW)

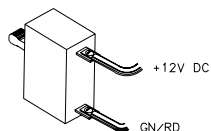


## TO OPERATE:

1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, PORT SIDE, TURN THE PORT BATTERY SWITCH TO "ON".
3. ON THE AC/DC PANEL IN THE CABIN, SWITCH THE 12V DC SYSTEM "MAIN" AND "WASTE SYSTEM" BREAKERS TO "ON".
4. IN THE ENGINE BILGE, PLACE THE Y-VALVE IN THE "DISCHARGE" POSITION.
5. IN THE Y-BERTH NEXT TO THE HEAD, PRESS AND HOLD THE MACERATOR BUTTON UNTIL THE "EMPTY" LIGHT (ON LEVEL MONITOR) ILLUMINATES.

**CAUTION!!**

FOLLOW LOCAL, STATE, AND FEDERAL  
GUIDELINES FOR WASTE DISCHARGE.

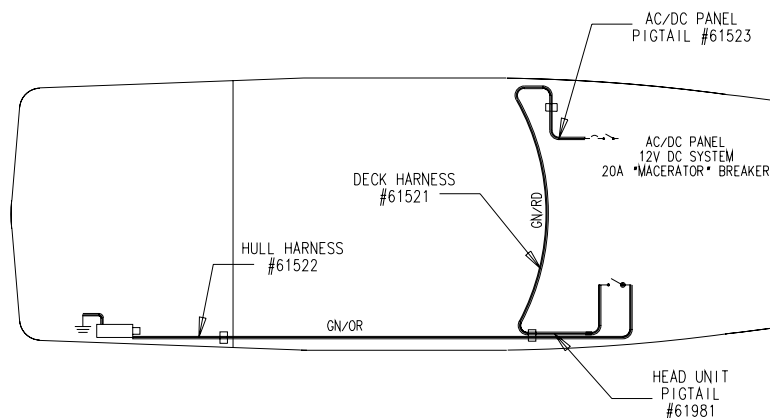


TITLE: MACERATOR,  
ELECTRICAL

MOD.: 353FASTech



DR BY: SAJ

29A

SEACOCK THROUGH HULL

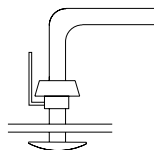

"Y" VALVE

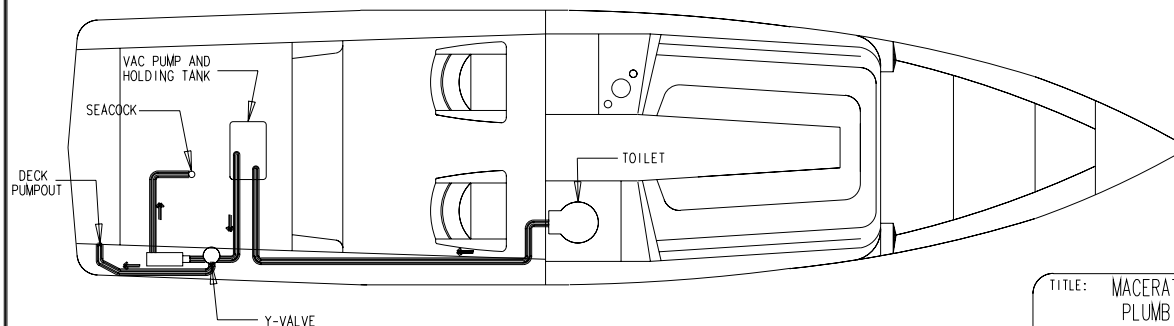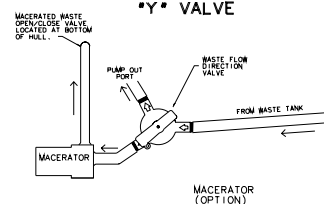

TITLE: MACERATOR,  
PLUMBING

MOD.: 353FASTech

DR BY: SAJ

29B



THUNDERBIRD  
PRODUCTS  
ENGINEERING

# LEGEND

PLUG 





BREAKER  
PANEL 

DC GROUND 

TO OPERATE:

1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. ON THE AFT BREAKER PANEL, THE "MERC." BREAKER MUST BE PUSHED IN (CLOSED).
3. THE MERCATHODE IS NOW SUPPLIED WITH POWER AND SHOULD BE OPERATING.

NOTE: THE MARCATHODE ONLY OPERATES WHEN THE BOAT IS ON WATER.

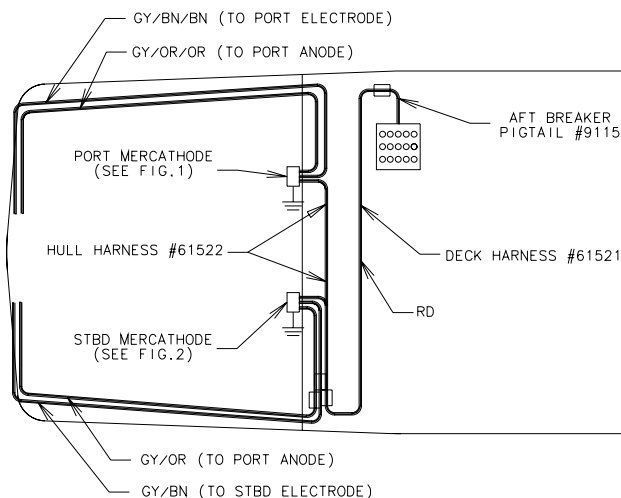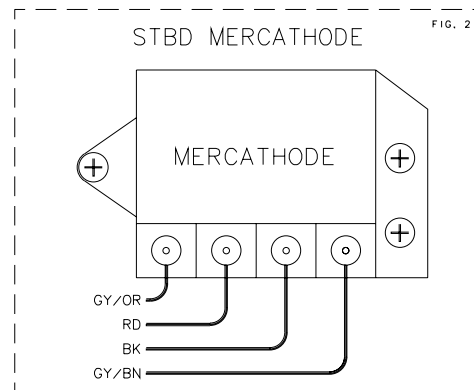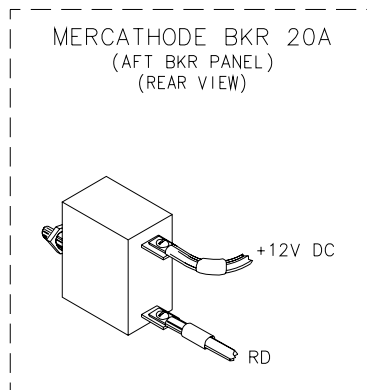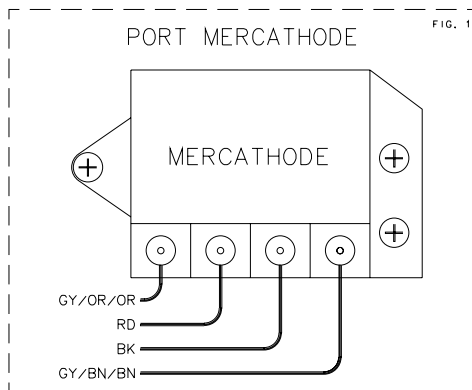

THUNDERBIRD  
PRODUCTS  
ENGINEERING

TITLE: MERCATHODE

MOD.: 353FASTech

DR BY: SAJ

30

# LEGEND

GROUND




BREAKER  
PANEL



PLUG




BATTERY

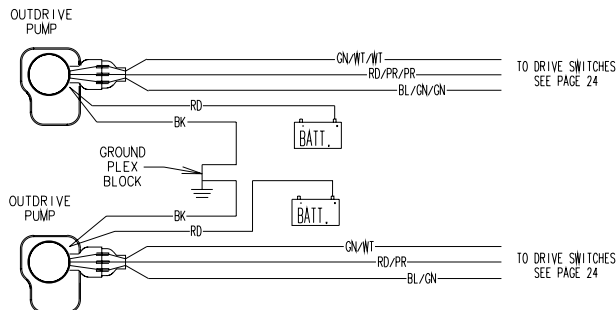

TO OPERATE:

1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. THE OUTDRIVES ARE CONNECTED DIRECTLY TO THE BATTERY AND ARE OPERATIONAL AT ALL TIMES.

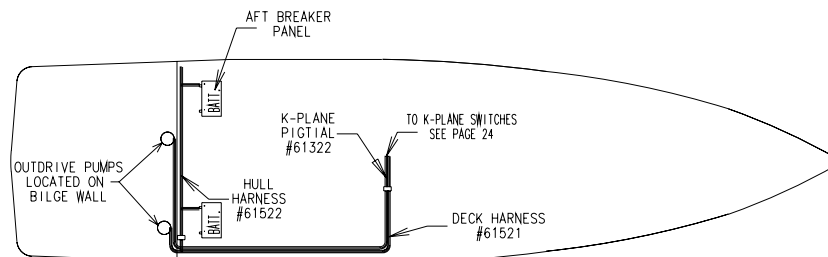



TITLE: OUTDRIVES

MOD.: 353 FASTech

DR BY: SAJ


31A

TRIM TABS BKR 5A  
(AFT BKR PANEL)  
(REAR VIEW)

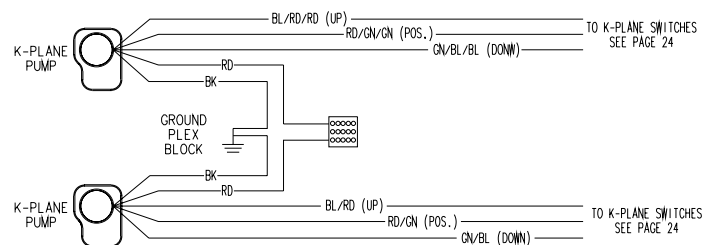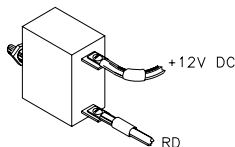

TO OPERATE:

1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, PORT SIDE, TURN THE PORT BATTERY SWITCH TO "ON".
3. ON THE AFT BREAKER PANEL THE "TRIM TABS" BREAKERS MUST BE PUSHED IN (CLOSED).
4. THE TRIM TABS CAN NOW BE OPERATED BY THE TRIM TAB SWITCHES ON THE SHIFTER PANEL.

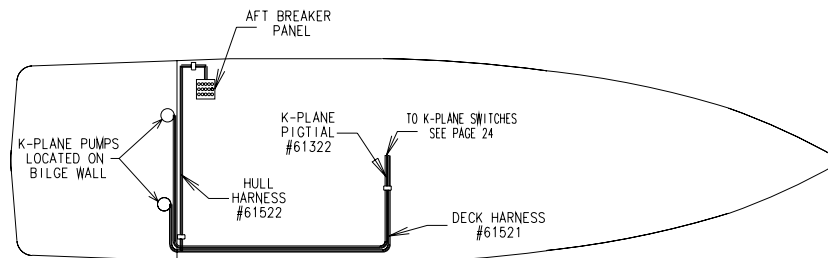

TITLE: TRIM TABS

MOD.: 353 FASTech

DR BY: SAJ

31B



THUNDERBIRD  
PRODUCTS  
ENGINEERING


# LEGEND

BREAKER SWITCH


DC GROUND

BREAKER PANEL


ACCESSORY BKR 15A  
(DASH BKR PANEL)  
(REAR VIEW)

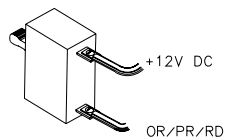

12V DC OUTLET  
(REAR VIEW)

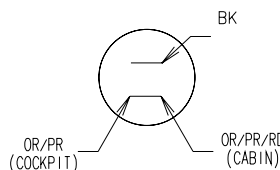


12V OUTLET BKR 15A  
(DASH BKR PANEL)  
(REAR VIEW)

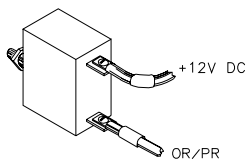

TO OPERATE:

1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, PORT SIDE, TURN THE PORT BATTERY SWITCH TO "ON".
3. ON THE AC/DC PANEL IN THE CABIN, SWITCH THE "MAIN" AND "ACC" BREAKER TO "ON".
4. THE 12V DC OUTLET IS SUPPLIED WITH POWER AND READY TO OPERATE.

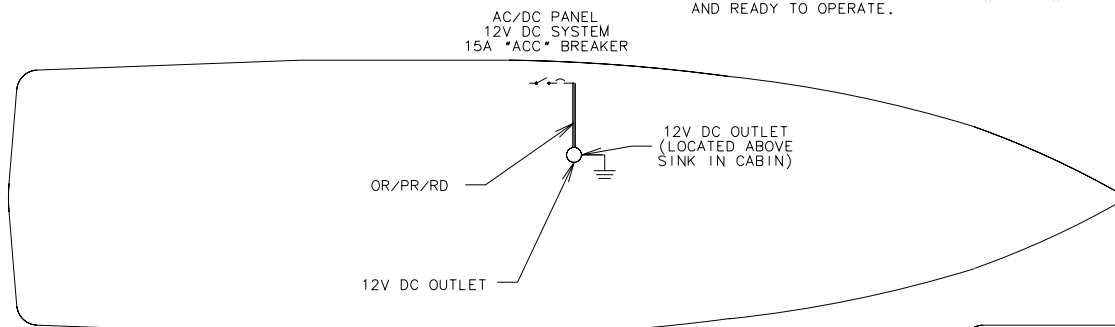

TITLE: 12V OUTLET,  
CABIN


MOD.: 353FASTech

DR BY: SAJ

32A

TO OPERATE:

1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, PORT SIDE, TURN THE PORT BATTERY SWITCH TO "ON".
3. ON THE DASH BREAKER PANEL, THE "OUTLET" BREAKER MUST BE PUSHED IN (CLOSED).
4. THE 12V DC OUTLETS ARE SUPPLIED WITH POWER AND READY TO OPERATE.

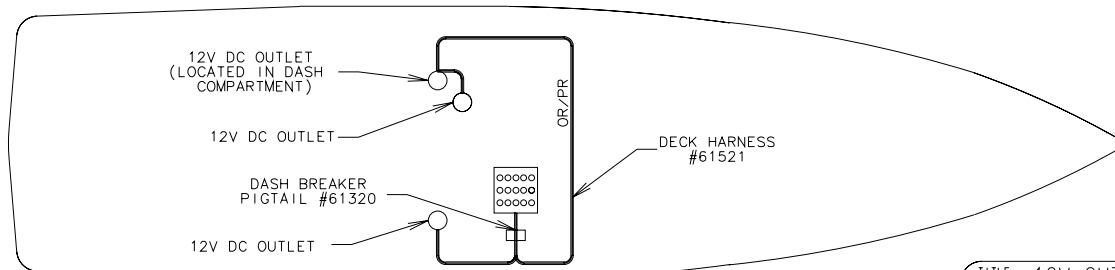

TITLE: 12V OUTLET,  
COCKPIT

MOD.: 353FASTech

DR BY: SAJ

32B




THUNDERBIRD  
PRODUCTS  
ENGINEERING




# LEGEND

BREAKER PANEL	
FLOAT SWITCH	
SWITCH	
PUMP	
PLUG	
DC GROUND	


ENGINE BILGE 15A  
(AFT BKR PANEL)  
(REAR VIEW)

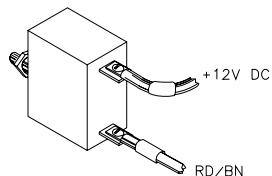

BILGE PUMP BKR 15A  
(DASH BKR PANEL)  
(REAR VIEW)

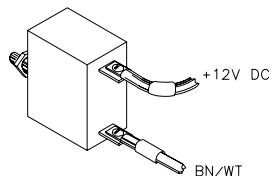

BILGE PUMP SWITCH  
(ACCESSORY PANEL)  
(REAR VIEW)

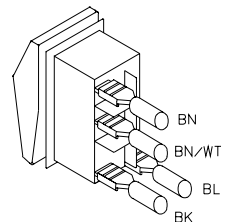

## TO OPERATE:


1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. ON THE AFT BREAKER PANEL, THE "ENGINE BILGE" BREAKER MUST BE PUSHED IN (CLOSED).
3. THE ENGINE BILGE PUMP IS NOW SUPPLIED WITH POWER AND OPERATIONAL.

NOTE: THE ENGINE BILGE PUMP WILL AUTOMATICALLY START WHEN WATER IS AT A LEVEL HIGH ENOUGH TO ACTIVATE THE FLOAT SWITCH.

THE ENGINE BILGE PUMP CAN NOT BE TURNED OFF BY TURNING THE PORT BATTERY SWITCH TO "OFF".

## TO OPERATE MANUALLY:

1. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, PORT SIDE, TURN THE PORT BATTERY SWITCH TO "ON".
2. ON THE DASH BREAKER PANEL, THE "BILGE PUMP" BREAKER MUST BE PUSHED IN (CLOSED).
3. THE ENGINE BILGE PUMP CAN NOW BE OPERATED BY THE "BILGE PUMP" SWITCH ON THE ACCESSORY PANEL.

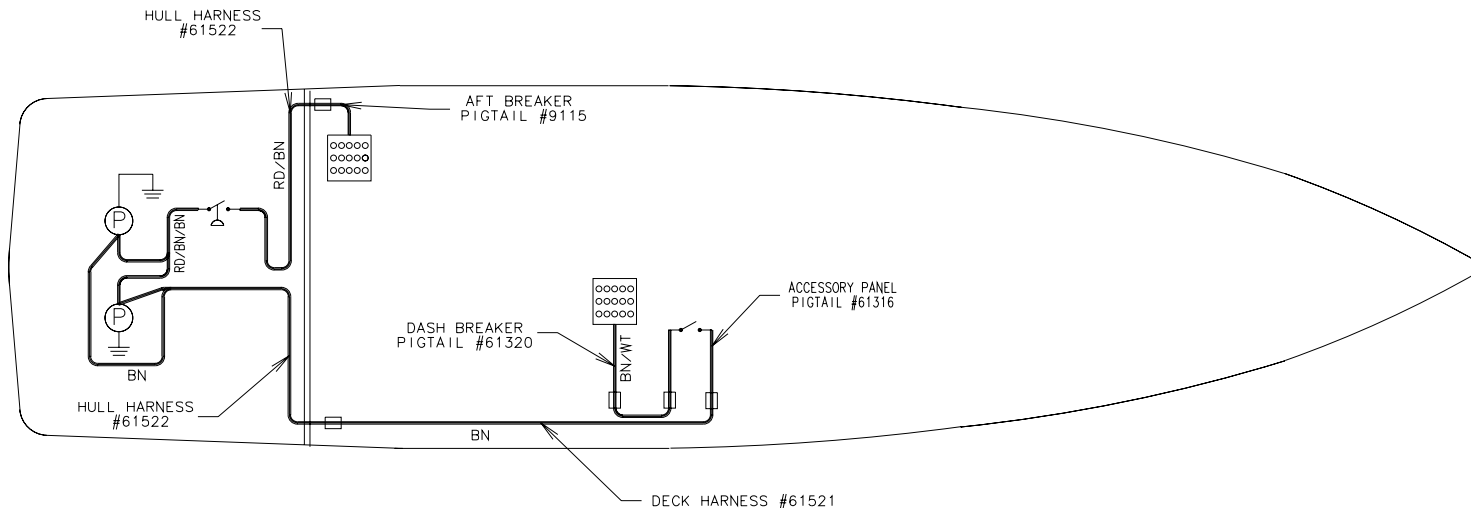

THUNDERBIRD  
PRODUCTS  
ENGINEERING

TITLE: BILGE PUMPS

MOD.: 353FASTech

DR BY: SAJ

33

# LEGEND

BREAKER  
SWITCH



PUMP




PLUG



DC GROUND



WATER PUMP BKR 5A  
(AC/DC BKR PANEL)  
(REAR VIEW)

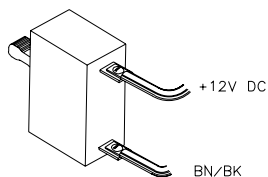


TO OPERATE:

1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, PORT SIDE, TURN THE PORT BATTERY SWITCH TO "ON".
3. ON THE AC/DC PANEL, IN THE CABIN, SWITCH THE "DC MAIN" AND THE "WATER PUMP" BREAKER TO "ON".
4. THE WATER PUMP IS NOW ON, AND WILL SHUT OFF AUTOMATICALLY WHEN THERE IS SUFFICIENT WATER PRESSURE IN THE SYSTEM.

NOTE: THE WATER PUMP DOES NOT NEED TO BE IN OPERATION WHEN THE BOAT IS CONNECTED TO SHORE WATER.

## WARNING!

MAKE SURE WATER TANK HAS SUFFICIENT AMOUNT OF WATER TO RUN SYSTEM. RUNNING THE SYSTEM DRY CAN CAUSE DAMAGE TO THE WATER PUMP.

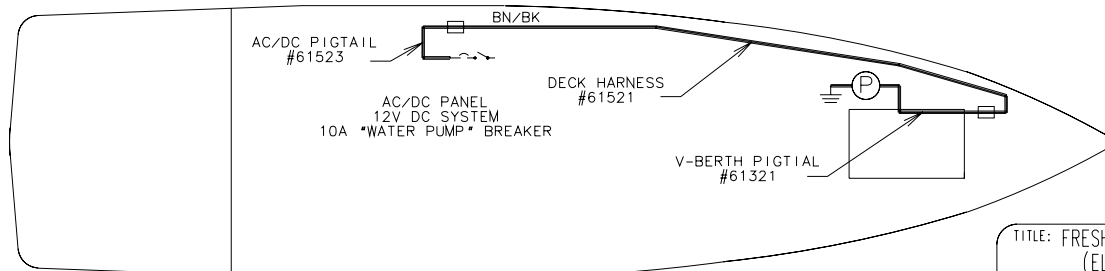


TITLE: FRESH WATER PUMP  
(ELECTRICAL)

MOD.: 353FASTech

DR BY: SAJ

34A

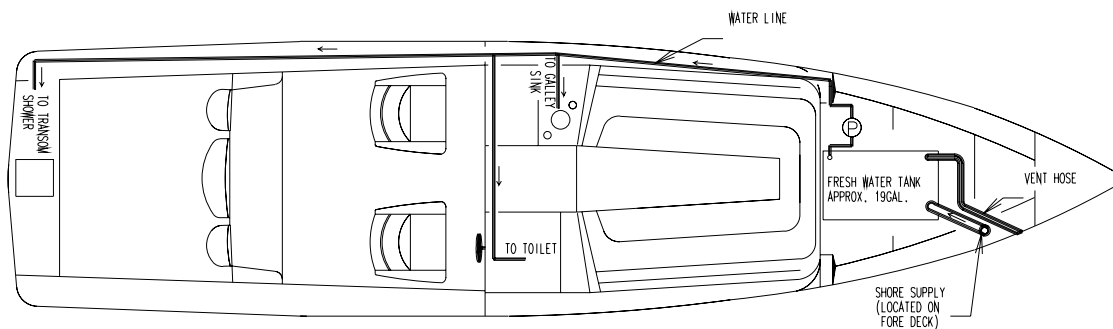

TITLE: FRESH WATER PUMP  
(PLUMBING)

MOD.: 353FASTech

DR BY: SAJ

34B



THUNDERBIRD  
PRODUCTS  
ENGINEERING


# LEGEND

GROUND 

BREAKER 

SPLICE 


PRESSURE SWITCH 

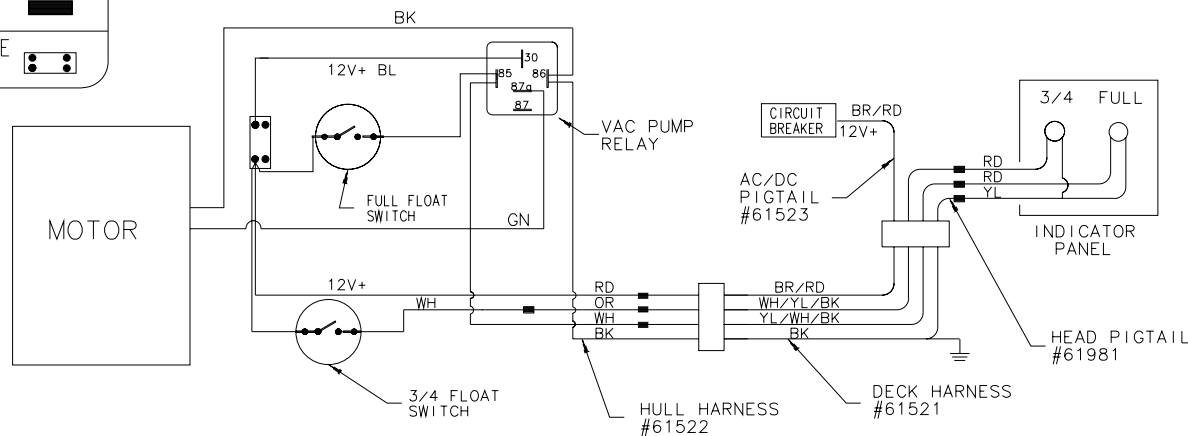

TO OPERATE:

1. LOCATED UNDER COCKPIT FLIP-UP SEAT, TURN THE PORT BATTERY SWITCH TO "ON".
2. ON THE AC/DC PANEL, IN THE CABIN, SWITCH THE DC "MAIN" BREAKER TO "ON".
3. ON THE AC/DC PANEL, SWITCH THE "WASTE SYSTEM" BREAKER TO "ON".
4. THE PUMP IS NOW OPERATIONAL AND THE TOILET CAN BE FLUSHED.

NOTE: WHEN THE "FULL" LIGHT IS ILLUMINATED ON THE TANK LEVEL MONITOR THE VACUUM PUMP SHUTS DOWN AND THE TOILET WILL NOT FLUSH.

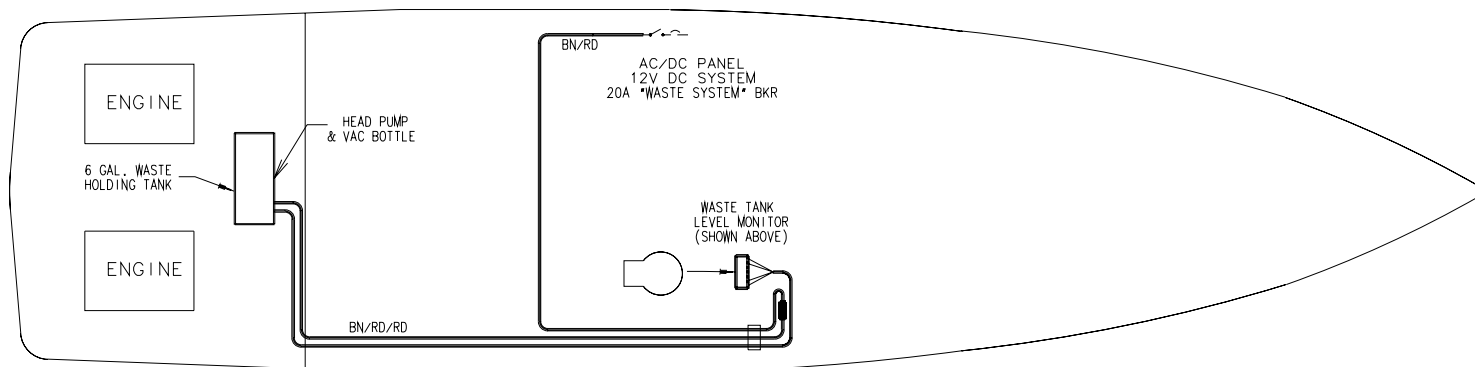

THUNDERBIRD  
PRODUCTS  
ENGINEERING

TITLE: WASTE VAC  
PUMP

MOD.: 353 FASTech  
DR BY: SAJ

35

# LEGEND

BREAKER  
PANEL



PLUG




DC GROUND




BREAKER  
SWITCH



"REFRIG" BKR 10A  
(AC/DC BKR PANEL)  
(REAR VIEW)

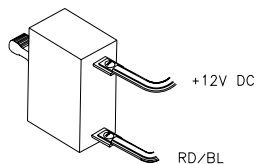


ELECTRONICS BKR 10A  
(DASH BKR PANEL)  
(REAR VIEW)

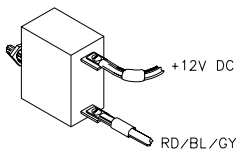

TO OPERATE:


1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, PORT SIDE, TURN THE PORT BATTERY SWITCH TO "ON".
3. ON THE AC/DC PANEL, IN THE CABIN, SWITCH THE "DC MAIN" AND "REFRIG" BREAKERS TO "ON".
4. THE REFRIGERATOR IS NOW SUPPLIED WITH POWER AND READY TO OPERATE.

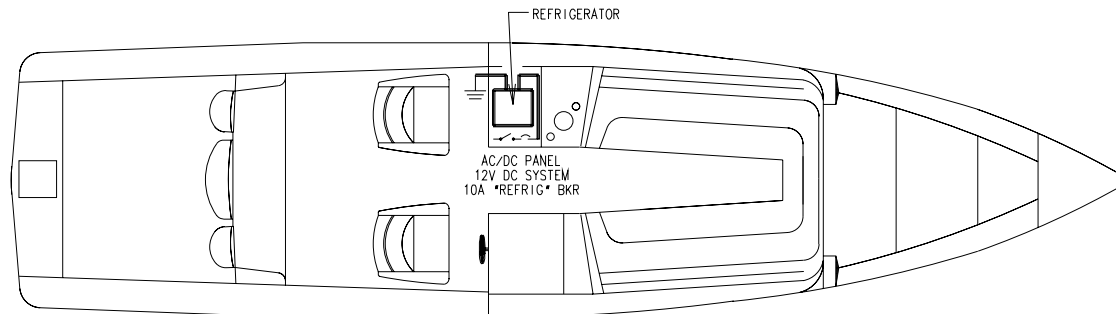

TITLE: REFRIGERATOR  
MOD.: 353FASTech  
DR BY: SAJ 36A

TO OPERATE:

1. READ AND FULLY UNDERSTAND THE OWNER'S MANUAL.
2. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, PORT SIDE, TURN THE PORT BATTERY SWITCH TO "ON".
3. ON THE DASH BREAKER PANEL, THE "ELECTRONICS" BREAKER MUST BE PUSHED IN (CLOSED).
4. THE VHF RADIO IS NOW SUPPLIED WITH POWER AND READY TO OPERATE.
5. SEE THE VHF RADIO'S OPERATORS MANUAL FOR FURTHER INSTRUCTIONS ON OPERATING RADIO FUNCTIONS.

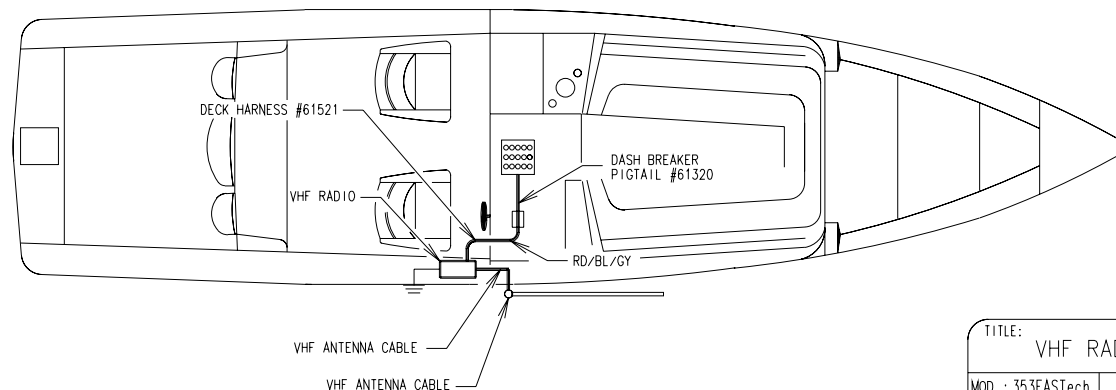








TITLE: VHF RADIO  
MOD.: 353FASTech  
DR BY: SAJ 36B




THUNDERBIRD  
PRODUCTS  
ENGINEERING
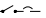
# LEGEND

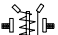
GROUND	
BREAKER PANEL	
AC/DC BREAKER	
PLEX BLOCK	
SPEAKER	
SOLENOID	

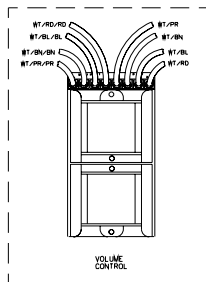

STEREO BKR 20A  
(AC/DC BKR PANEL)  
(REAR VIEW)

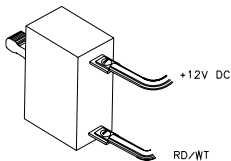


CONST. PWR BKR 15A  
(AFT BKR PANEL)  
(REAR VIEW)

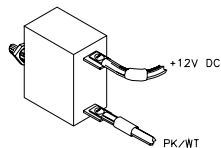

## TO OPERATE:

1. LOCATED UNDER COCKPIT FLIP UP SEAT, TURN THE PORT BATTERY SWITCH TO "ON".
2. ON THE AFT BREAKER PANEL, THE "CONST. POWER" BREAKER MUST BE PUSHED IN (CLOSED).
3. ON THE AC/DC PANEL IN THE CABIN, SWITCH THE DC "MAIN" AND "STEREO SYSTEM" BREAKERS TO "ON".
4. THE STEREO SYSTEM IS NOW SUPPLIED WITH 12 VOLTS DC AND READY FOR OPERATION.
5. SEE KENWOOD'S OPERATING MANUAL FOR INSTRUCTIONS ON OPERATING STEREO FUNCTIONS.

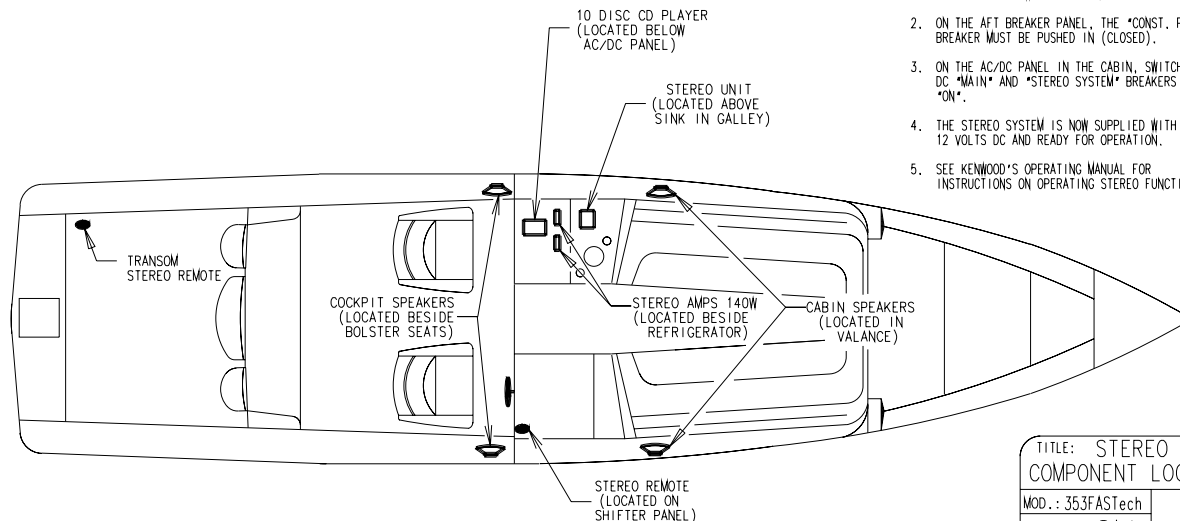


TITLE: STEREO  
COMPONENT LOCATION

MOD.: 353FASTech

DR BY: SAJ

37A

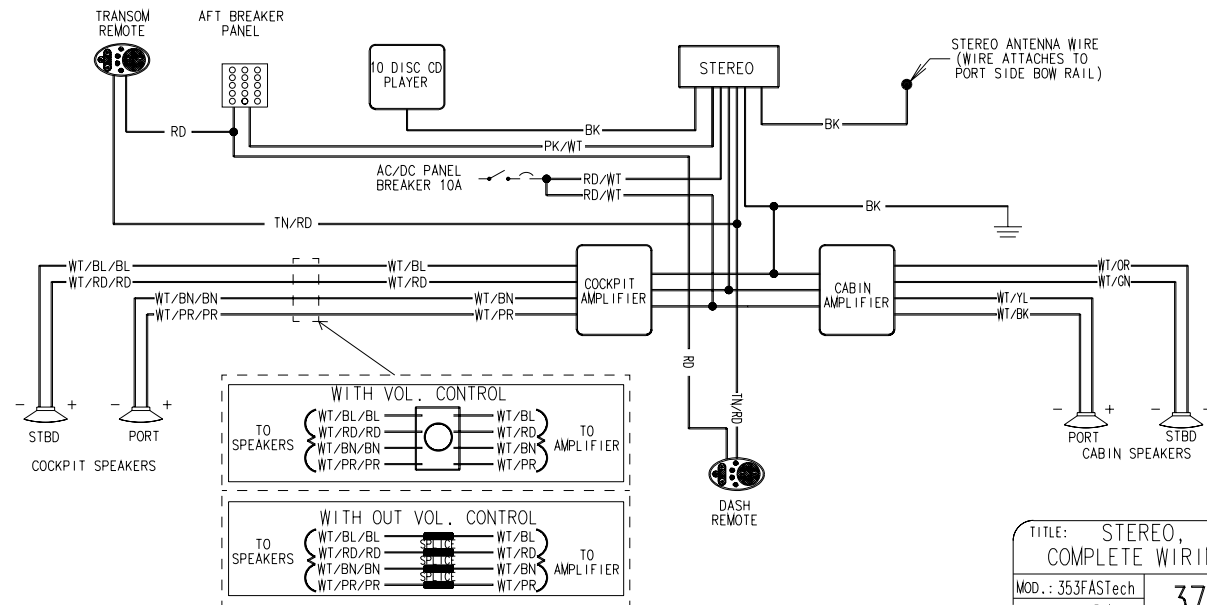

TITLE: STEREO,  
COMPLETE WIRING

MOD.: 353FASTech

DR BY: SAJ

37B



THUNDERBIRD  
PRODUCTS  
ENGINEERING

# LEGEND

ENGINE PLUG 



AC/DC BREAKER 

PLUG 

TO OPERATE:

1. LOCATED UNDER THE COCKPIT FLIP-UP SEAT, TURN THE PORT BATTERY SWITCH TO "ON".
2. THE CAPTIAN'S CALL CAN BE OPERATED BY "CAPT. CALL" SWITCH LOCATED ON THE ACCESSORY PANEL.

NOTE: THE CAPTIAN'S CALL WILL NOT OPERATE UNTIL EITHER ENGINE HAS REACHED 3000 RPM.

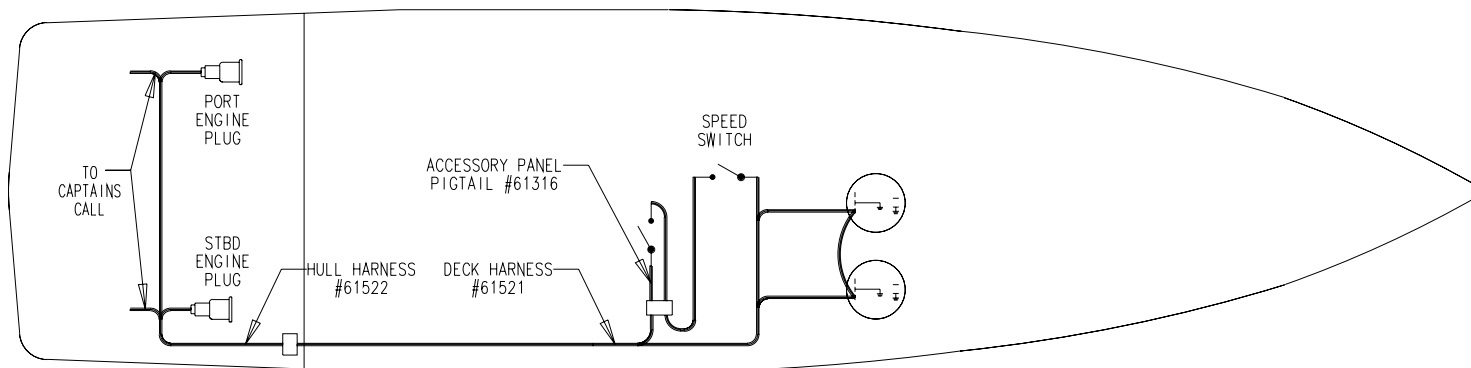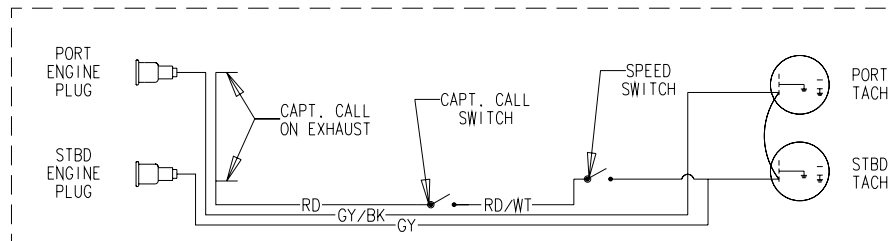

THUNDERBIRD  
PRODUCTS  
ENGINEERING

TITLE:  
CAPTAIN'S CALL

MOD.: 353FASTech  
DR BY: JAW


38

# LEGEND

GROUND ↓

AC/DC BREAKER 


PLUG 

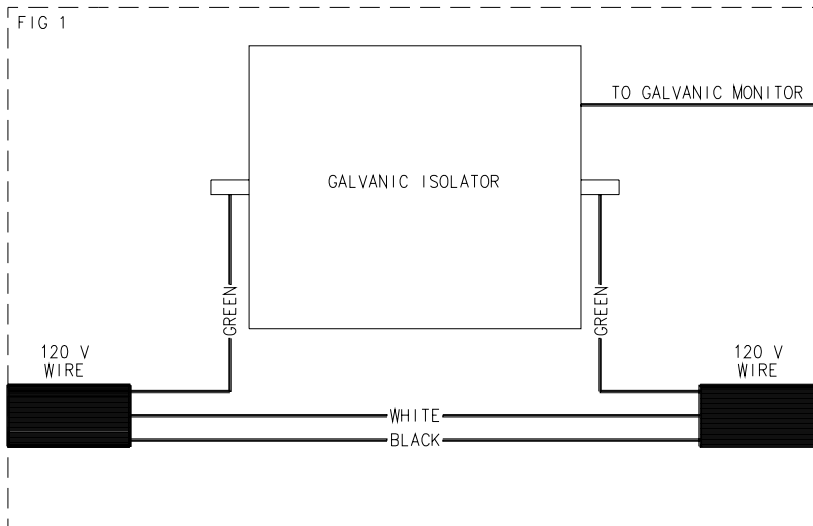

## TEST PROCEDURE:

1. PLUG IN SHORE CORD AND TURN ON SHOREPOWER BREAKER.
2. LOOK AT GALVANIC DISPLAY; IT SHOULD SAY GROUND WIRE NORMAL AND GALVANIC ISOLATOR NORMAL.

NOTE:  
GALVANIC ISOLATOR WILL OPERATE AUTOMATICALLY WHEN BOAT IS SUPPLIED WITH SHOREPOWER.

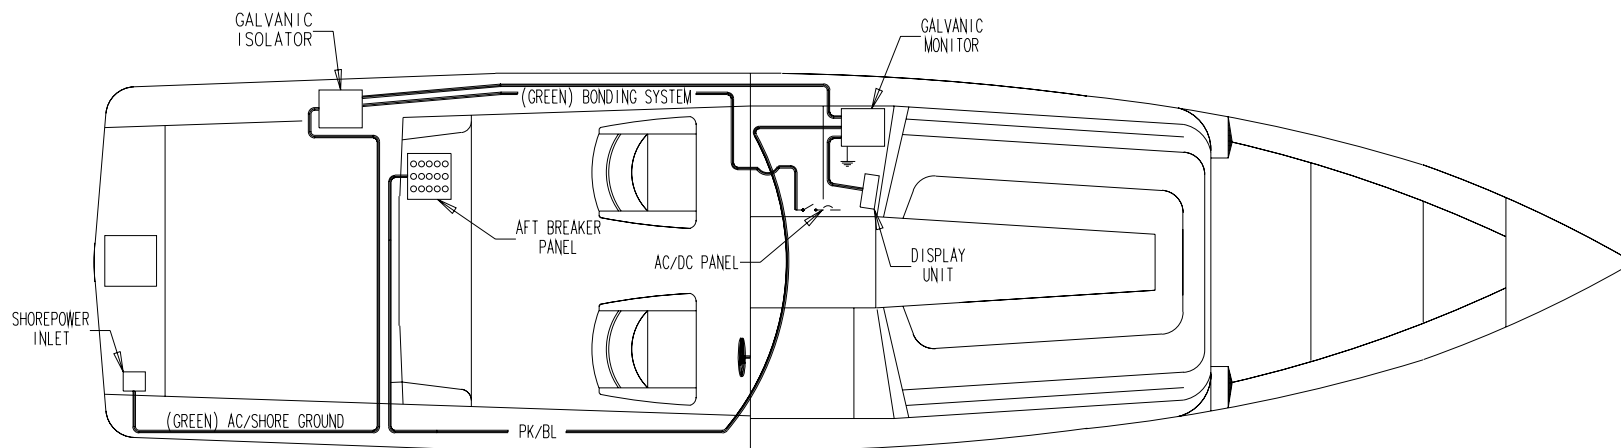



THUNDERBIRD  
PRODUCTS  
ENGINEERING

TITLE: GALVANIC  
ISOLATOR



MOD.: 353FASTech  
DR BY: JAW

39


155 GAL. FUEL TANK

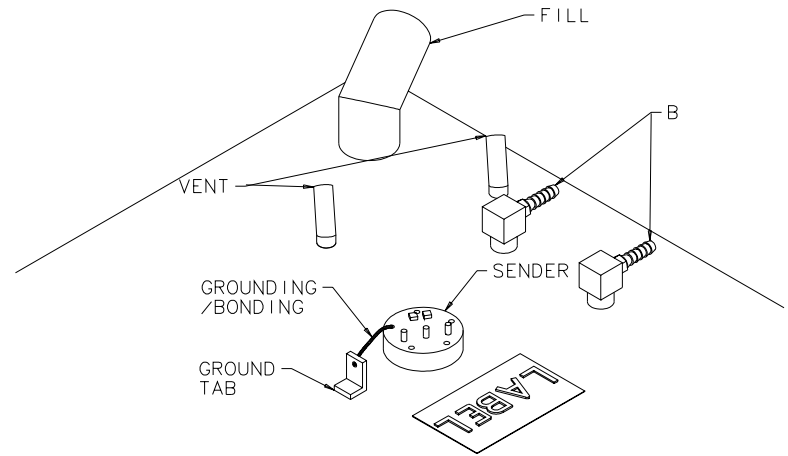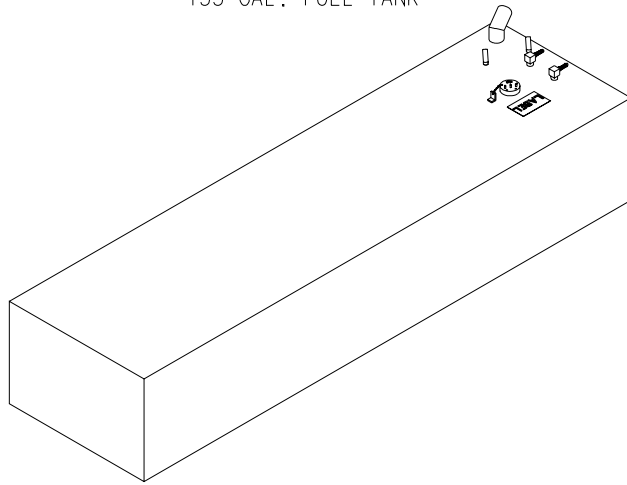

FUEL TANK PICKUP LINES

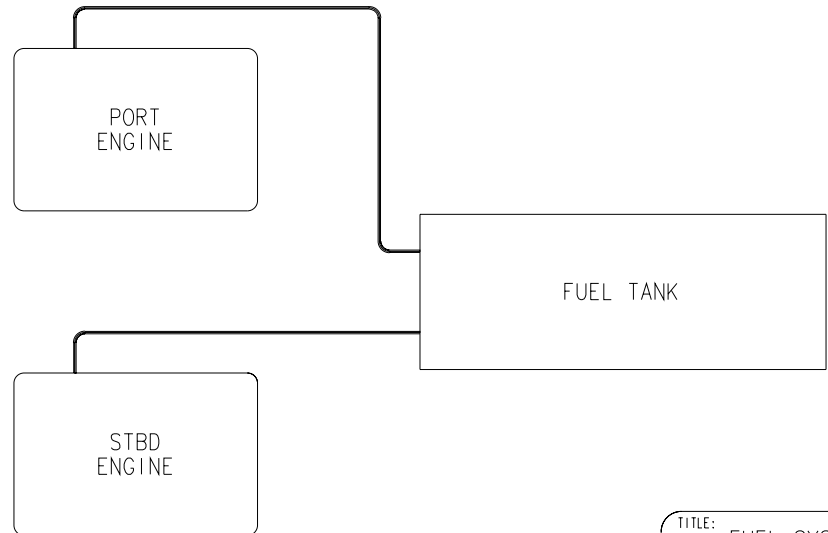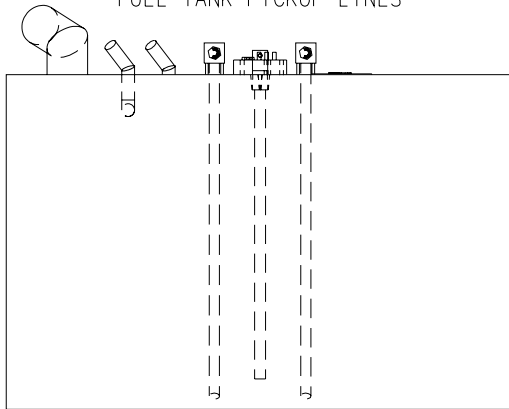



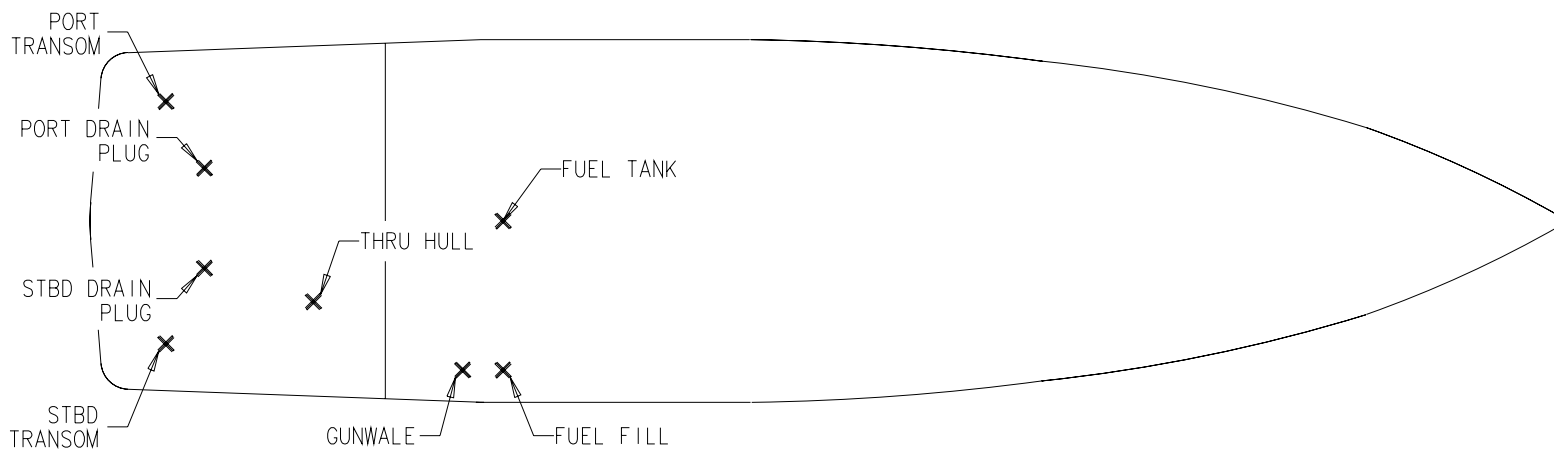

THUNDERBIRD  
PRODUCTS  
ENGINEERING