

AC CIRCUITS

AIR CONDITIONER	
ventilation	.101
120V	.101a/b
220V	.101a/b
BATTERY CHARGER	.102
BLENDER	.103
GENERATOR (see 004a)	
HEATERS	
cabin	.106a
water	.106b
ICEMAKER	.115
MICROWAVE	.107
OUTLETS	
head	.113a
galley	.113b
port	.113c
stbd	.113d
REFRIGERATOR	.108
SHOREPOWER	.109
120V 60HZ panel	.109a
220V 50HZ panel	.109b
STOVE	.110
TV/VCR	.114
WALL VAC	.111
WATERHEATER (see HEATERS)	
ZINC SAVER (see 109a & b)	

BONDING

BONDED EQUIPMENT	.120
BONDING CHECK LIST (WORKSHEET)	121

DC CIRCUITS

ALARM, HIGH WATER	.017
BATTERY PARALLEL	.001
DC SUPPLY SYSTEM	.001
BLOWERS	
eng. room / generator	.002
vent	.002
ENGINE HATCH	.003
GENERATOR	
Quicksilver	.004
HALON (plcmnts & light)	.005
HORN	.006
IGNITION	
gas	.007
diesel	.007
INSTRUMENTATION	
dash panels	.008
gauges	.008
LIGHTS	
aft cabin	.010k
cabin	.010d
courtesy/engine room	.010b
docking	.010c
floor	.010e
head	.010f
mood	.010g
navigation	.010h
spotlight	.010i
MACERATOR	.011
level sensing unit	.011a
plumbing	.011b
PUMP	
air conditioner (see 101 a/b)	
cabin bilge	.013a
engine room bilge	.013b
shower bilge	.013c
water	.013e
REFRIGERATOR(see108)	
TRIM TABS	.015
WASTE TREATMENT SYSTEM	.014
WATER TANK LEVEL GAUGE	.018
WINDLASS	
Maxwell	.016
WINDSHIELD WIPERS	.009

ELECTRONICS



LORAN.	.143
STEREO SYSTEM.	.140
stereo.	.140
stereo w/amplifiers.	.140a
stereo, cd, w/amplifiers.	.140b
VIDEO SYSTEM	.141
VHF RADIO	.144

FUEL SYSTEMS


ENGINES AND GENERATOR	.130
diesel.	.130b
gas	.130a

PLUMBING



DRAINAGE.	.131b
WATER LINES.	.131

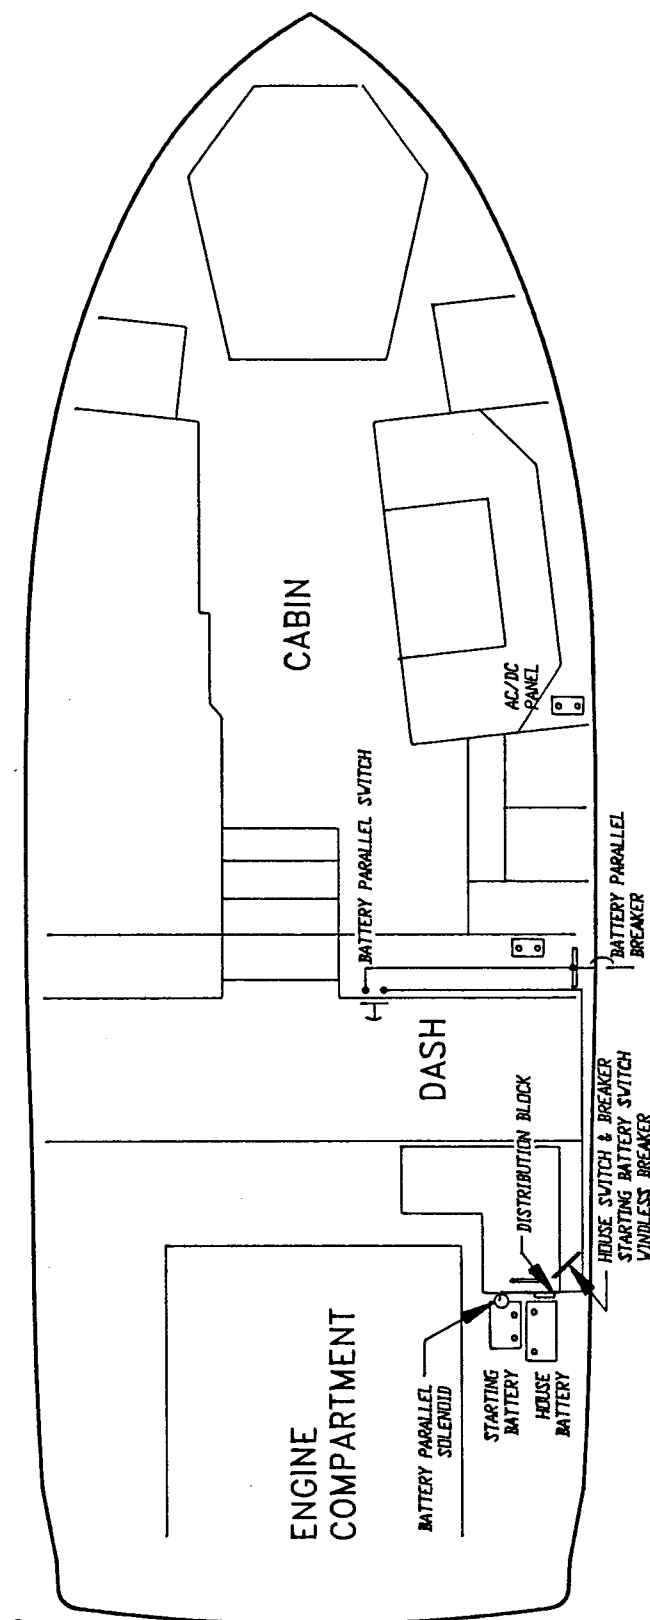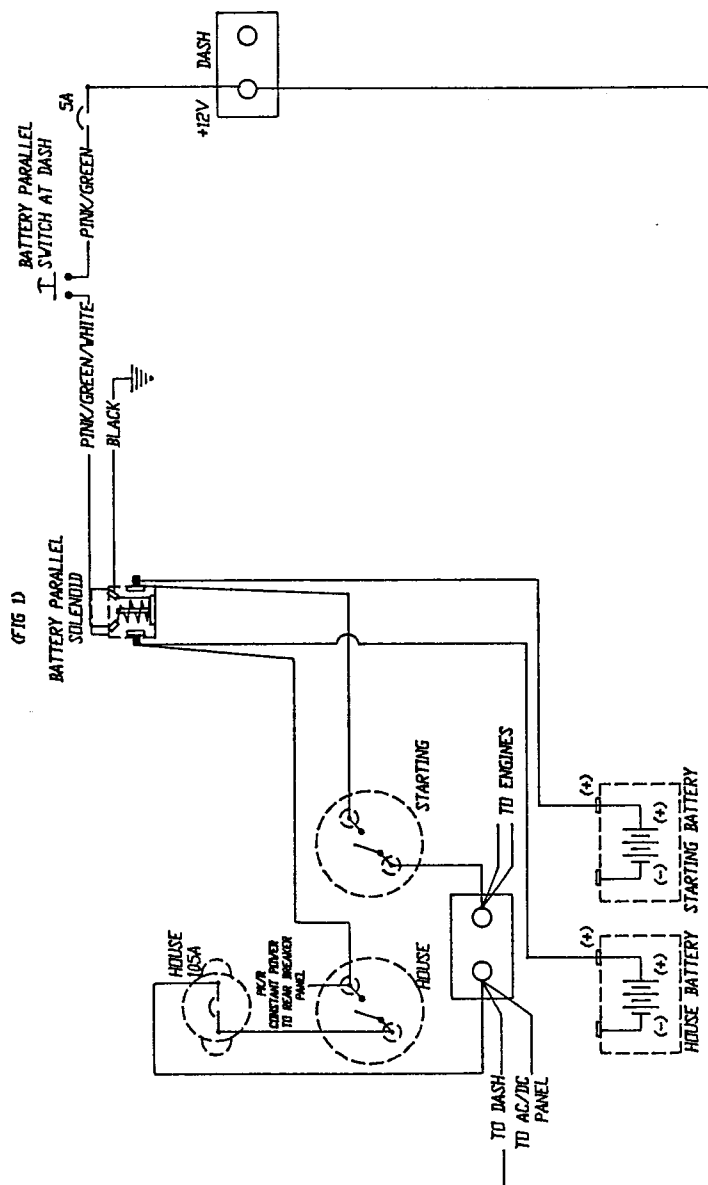

THUNDERBIRD PRODUCTS		WINN-DIXIE STORE		TITLE: F-34 PC	
P.O. BOX 501				BATTERY PARALLEL CIRCUIT	
DECATUR, IN 46733				CUL GEISTED COOPIT STORAGED	
(219) 724-9111				DR BY: KKR CH BY: JRE	
		REVISIONS		DATE: 4-24-91 NO.: 340-001	
4				FROM HIN #	TO HIN #
3				FROM HIN #	TO HIN #
2				FROM HIN #	TO HIN #
1				FROM HIN #	TO HIN #
#		DR	CH	DATE	

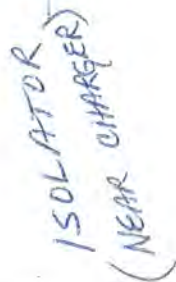

CHARGER	AMMUNITION				TITLE:	
	4		FROM	TO	FROM	TO
THUNDERBIRD PRODUCTS P.O. BOX 501 DECATUR, IN 46733 (219) 724-9111	3		FROM	TO		
	2		FROM	TO		
	1		FROM	TO		
	1		FROM	TO		
		DR	CH	DATE	DR BY: KGR	CH BY: KGR
					DATE: 4-24-91	NO. 340-000a

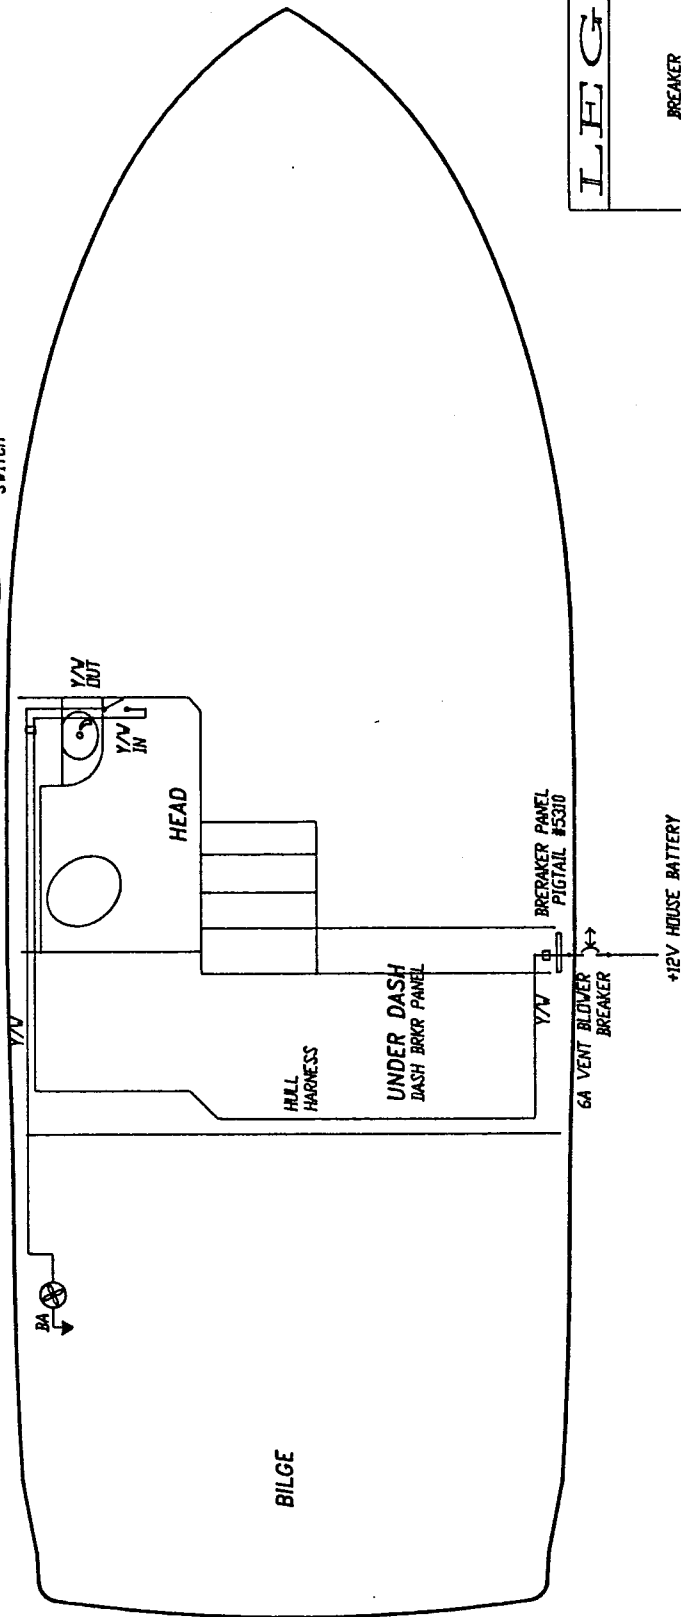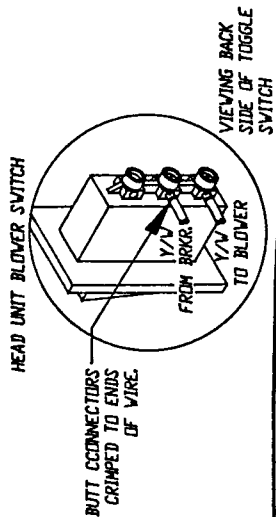


LEGEND

- BREAKER
- TOGGLE SWITCH
- BLOWER
- GROUND
- PLUG

THUNDERBIRD PRODUCTS	4					FROM HIN #	TO HIN #	TITLE: F-34 PC
P.O. BOX 501	3					FROM HIN #	TO HIN #	VENT BLOWER DIAGRAM
DECATUR, IN 46733	2					FROM HIN #	TO HIN #	DASH BRKR PANEL/VANITY
(219) 724-9111	1					FROM HIN #	TO HIN #	DR BY: KKR CH BY: KKR
	#					FROM HIN #	TO HIN #	DATE: 4-22-91 NO: 340-002 b

REVISIONS


1. HOUSE BATTERY SELECTOR SWITCH FOUND IN AFT COCKPIT STBD STORAGE MUST BE IN THE ON POSITION.
2. ENGINE HATCH BREAKER FOUND IN AFT COCKPIT SEAT PAN MUST BE PUSHED IN.
3. THE COCKPIT ENTRANCE DOOR MUST BE CLOSED AND LATCHED SECURELY.
4. THE HATCH IS NOW OPERABLE AT THE DASH BY THE TOGGLE SWITCH LABELED ENGINE HATCH.

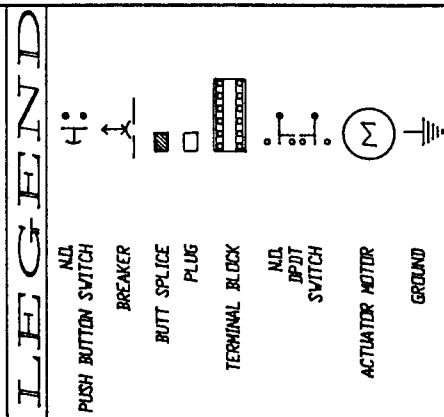

		4										TITLE: F-34 PC ENGINE HATCH RAM (ENGINE COMPARTMENT)	
		3											
		2											
		1										DR BY: KKR CH BY: JDE	
		#										DATE: 4-22-91 NO. 340-003	
THUNDERBIRD PRODUCTS													
P.O. BOX 501													
DECATUR, IN 46733													
(219) 724-9111													
REVISIONS													


QUICKSILVER 120V 60HZ

CONNECTIONS AT GENERATOR

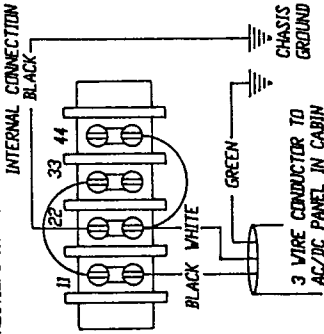

THE ENGINE MUST BE SET AT 60HZ-62HZ (1800 RPM - 1860 RPM) SEE QUICKSILVER INSTALLATION MANUAL ADJUSTMENTS SECTION AND ENGINE GOVERNOR ADJUSTMENT.


CONNECTIONS AT AC/DC PANEL

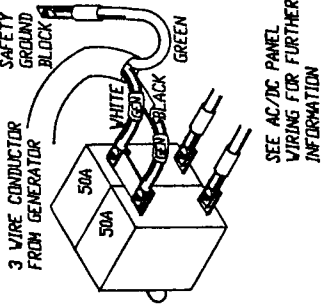

SEE AC/DC PANEL WIRING FOR FURTHER INFORMATION


QUICKSILVER 12V DC

CONNECTIONS AT GENERATOR


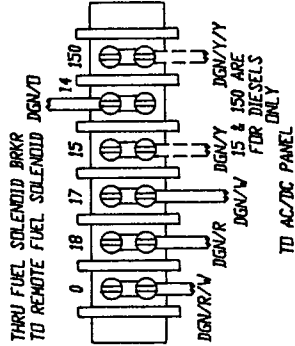


TO AC/DC PANEL

CONNECTIONS AT AC/DC PANEL

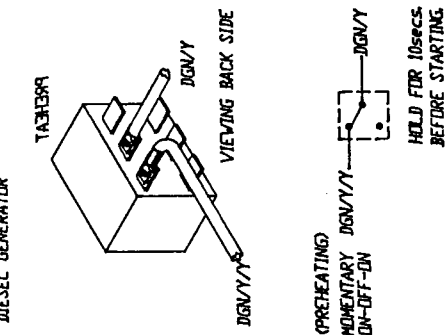


CONNECTIONS AT AC/DC PANEL

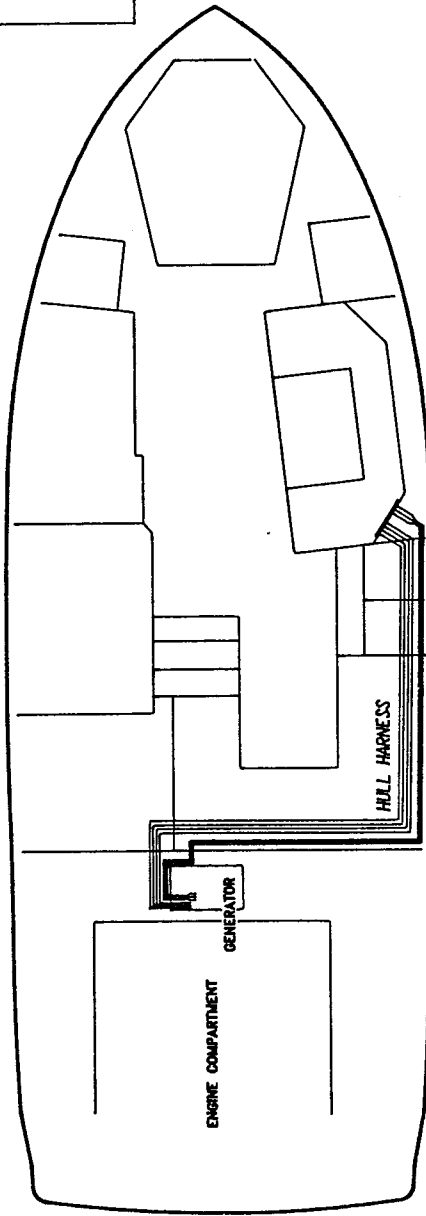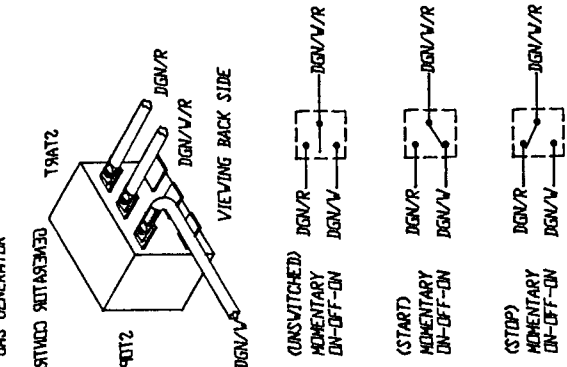


AC/DC PANEL

QUICKSILVER 220V 50HZ

CONNECTIONS AT GENERATOR

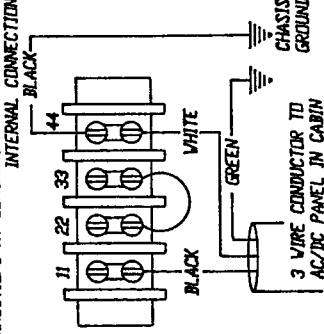

CONNECTIONS AT AC/DC PANEL

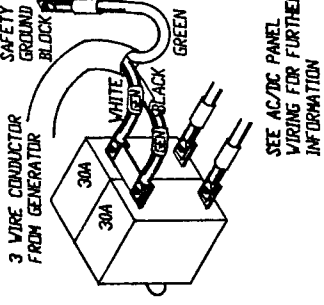

SEE AC/DC PANEL WIRING FOR FURTHER INFORMATION

TO START (GAS)


1. VENTILATE GENERATOR AREA BY TURNING ON GENERATOR BLOWERS FOR AT LEAST 5 MINUTES.
2. PUSH THE STOP/START TOGGLE SWITCH TO THE START POSITION AND HOLD FOR 5 TO 15 SECONDS. THIS WILL CRANK AND START THE ENGINE. DO NOT HOLD OVER 30 SECONDS.
- TO STOP (BOTH)
 1. PUSH THE STOP/START SWITCH TO THE STOP POSITION (THIS WILL STOP THE ENGINE)

LEGEN


CHASSIS GROUND



THUNDERBIRD PRODUCTS	4	3	2	1	#	REVISIONS
P.O. BOX 501						
DECATUR, IN 46733						
(219) 724-9111						
TITLE: F-34 PC	TO HIN #	FROM HIN #	TO HIN #	TO HIN #	TO HIN #	TO HIN #
QUICKSILVER GENERATOR	TO HIN #	FROM HIN #	TO HIN #	TO HIN #	TO HIN #	TO HIN #
(AFT BILGE & AC/DC PANEL)	TO HIN #	FROM HIN #	TO HIN #	TO HIN #	TO HIN #	TO HIN #
DR BY: KKR	TO HIN #	FROM HIN #	TO HIN #	TO HIN #	TO HIN #	TO HIN #
CH BY: (21)	TO HIN #	FROM HIN #	TO HIN #	TO HIN #	TO HIN #	TO HIN #
DATE: 5-21-90	TO HIN #	FROM HIN #	TO HIN #	TO HIN #	TO HIN #	TO HIN #
NO. 340-104 a	TO HIN #	FROM HIN #	TO HIN #	TO HIN #	TO HIN #	TO HIN #

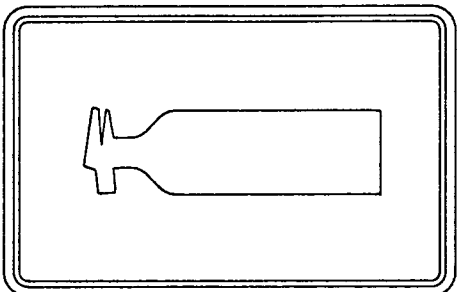

LABEL REPRESENTS
THE PRESENCE OF
AN EXTINGUISHER
WITHIN

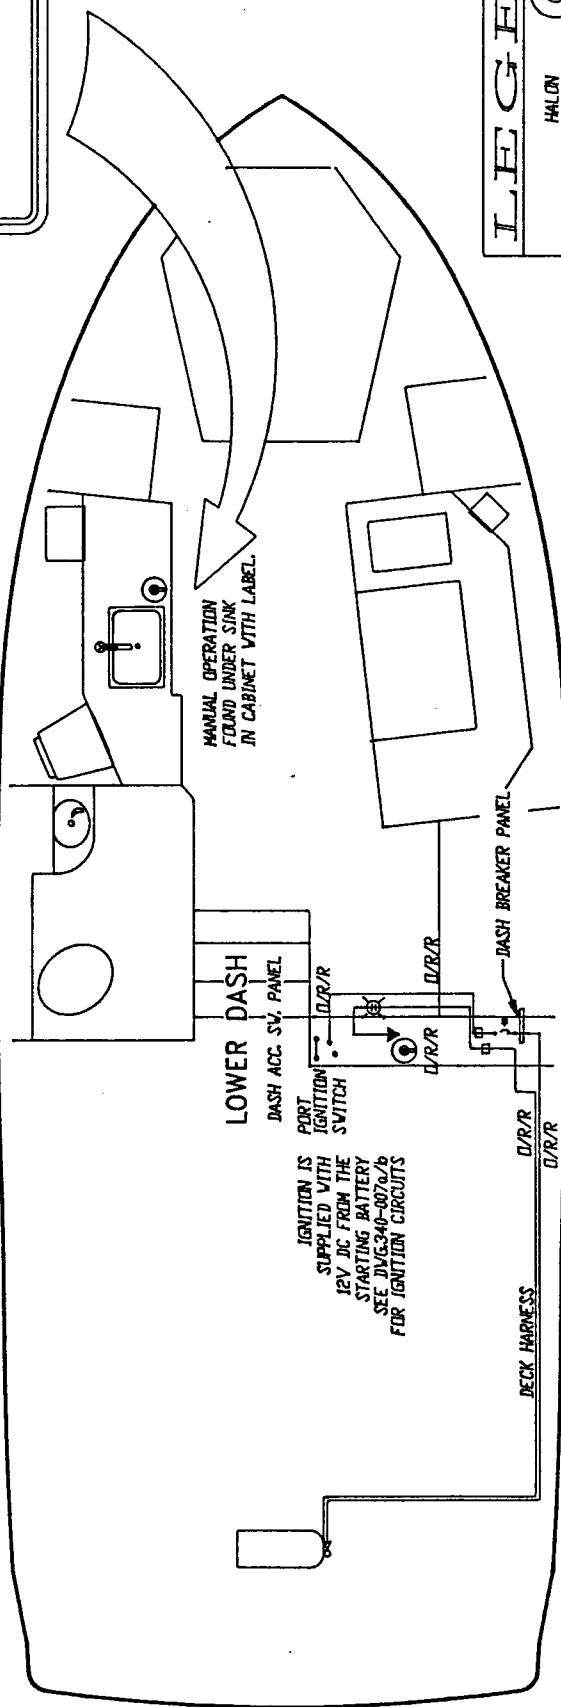

HANUAL OPERATION
FOUND UNDER SINK
IN CABINET WITH LABEL.

LOWER DASH
DASH ACC. SV. PANEL

PORT
IGNITION
SWITCH

IGNITION IS
SUPPLIED WITH
12V DC FROM THE
STARTING BATTERY
SEE JWG340-0076/b
FOR IGNITION CIRCUITS

DECK HARNESS

DASH BREAKER PANEL

HALON BREAKER
DASH BREAKER PANEL
(SHOVDING BACK SIDE)

D/R/R DASH ACC BRKR PIGTAIL


D/R/R
DASH BRKR PANEL PIGTAIL

THE HALON INDICATOR LIGHT
IS POWERED BY THE STARTING
BATTERY ONLY WHEN THE
IGNITION SWITCH IS IN THE
ON POSITION THE LIGHT INDICATES
TO THE OPERATOR THERE IS
SUFFICIENT PRESSURIZATION TO
EXPEL THE AGENT OF THE ENGINE
COMPARTMENT EXTINGUISHER. THE
UNIT DOES NOT
REQUIRE 12 VOLTS TO EXPEL
THE AGENT.

LEGEND


- HALON FIRE EXTINGUISHER
- PUSH/PULL BREAKER
- PLUG
- HALON LIGHT
- IGNITION SWITCH
- GROUND


THUNDERBIRD PRODUCTS P.O. BOX 501 DECATUR, IN 46733 (219) 724-9111	4									TO HIN #	TITLE: F-340 PC		
	3									FROM HIN #	HALON INDICATOR LIGHT		
	2									TO HIN #	HALON PLACEMENTS		
	1									FROM HIN #	DR BY: MGR		
	#									FROM HIN #	DATE: 5-6-91		
REVISIONS										CH	BY: JRE		
										NO.	340-005		

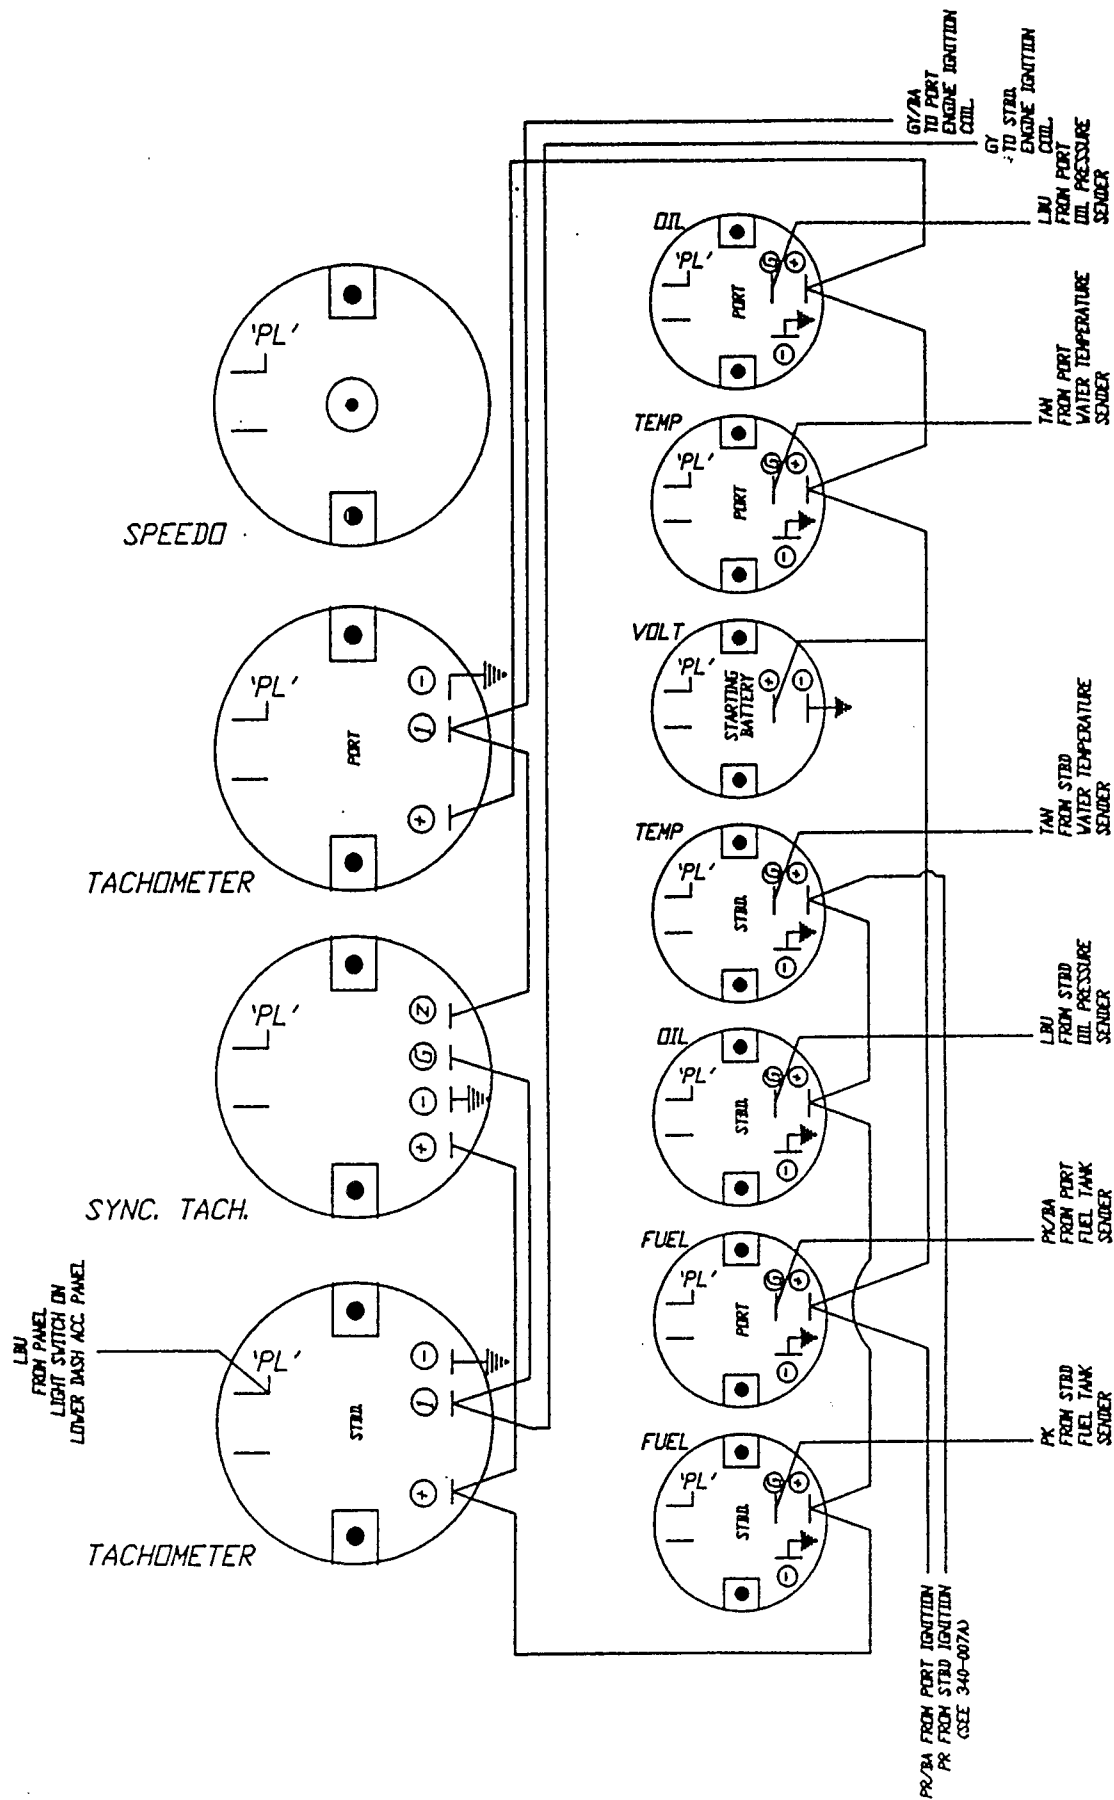


THUNDERBIRD PRODUCTS	4					FROM HIN #	TO HIN #	TITLE:
P.O. BOX 501	3					FROM HIN #	TO HIN #	DASH GAUGE WIRING
DECATUR, IN 46733	2					FROM HIN #	TO HIN #	
(219) 724-9111	1					FROM HIN #	TO HIN #	DR BY: ROR
	1	DR	CH	DATE		FROM HIN #	TO HIN #	DATE: 6-11-91
						FROM HIN #	TO HIN #	NO: 340-008

REVISIONS

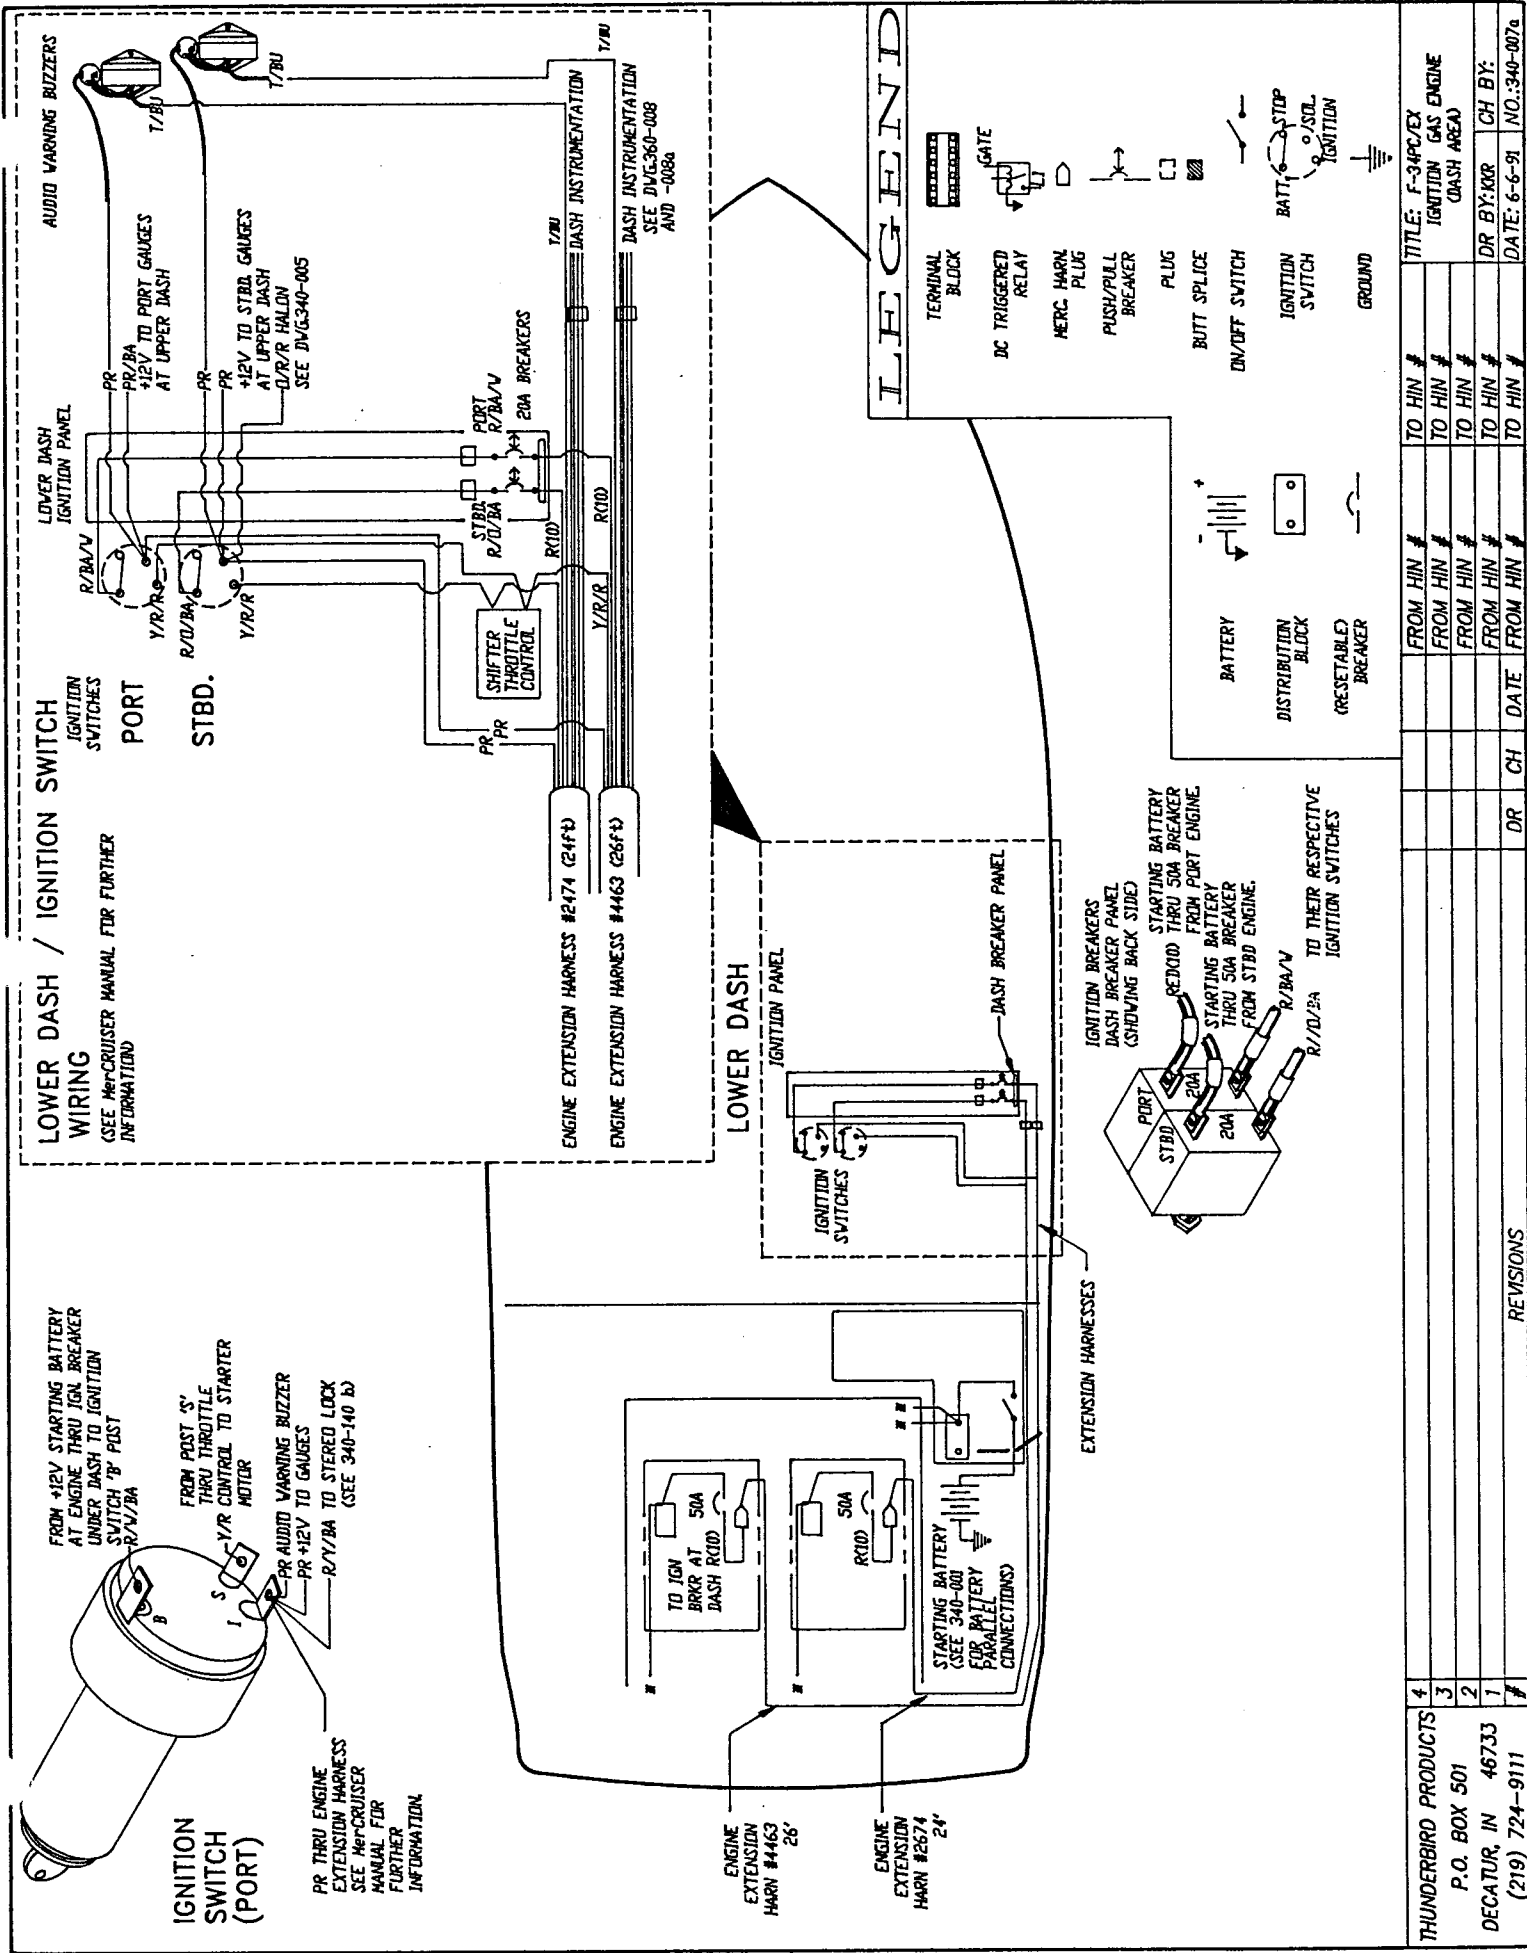

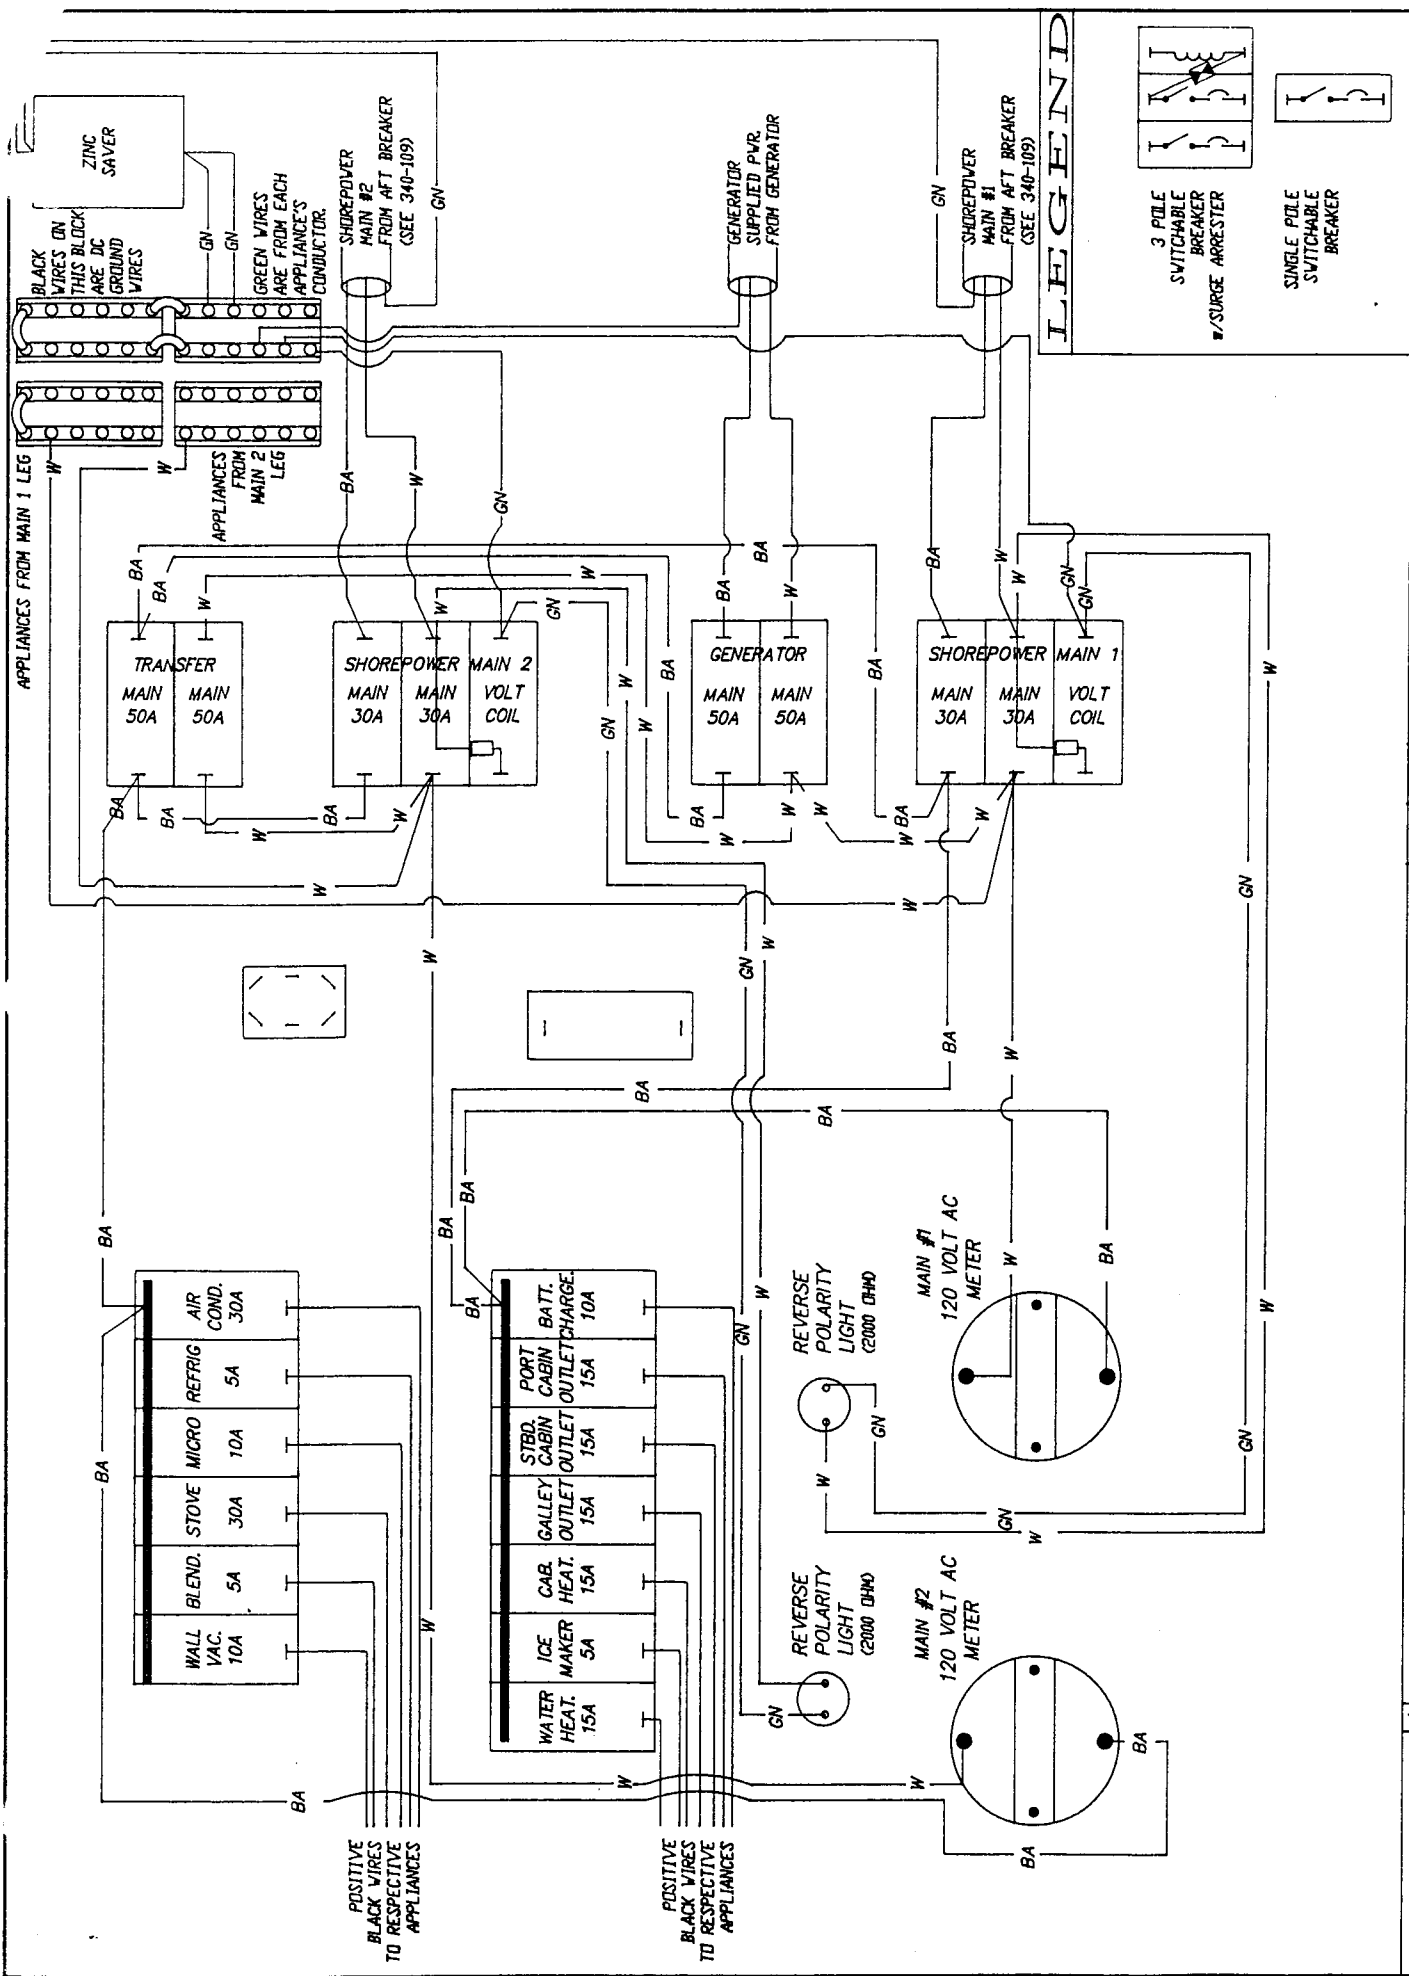

THUNDERBIRD PRODUCTS	4	TO HIN #	FROM HIN #	TO HIN #	TITLE: F-34 PC
P.O. BOX 501	3	TO HIN #	FROM HIN #	TO HIN #	AC WIRING AT AC/DC PANEL
DECATUR, IN 46733	2	TO HIN #	FROM HIN #	TO HIN #	(AC-DC PANEL)
(219) 724-9111	1	TO HIN #	FROM HIN #	TO HIN #	DR BY: KKR
	#	TO HIN #	FROM HIN #	TO HIN #	CH BY: JCE
		DATE	CH	DR	DATE: 4-16-91 NO. 340-109a

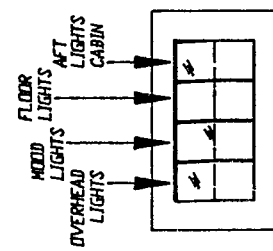

NOTES:


CARON LIGHTS ARE COVERED BY THE HOUSE BATTERY.

TO OPERATE:


1. THE HOUSE BATTERY SWITCH FOUND IN THE STBD COCKPIT STORAGE PAN MUST BE TURNED TO ON.
2. THE DC MAIN 1 BREAKER AT THE AC/DC PANEL MUST BE SWITCHED TO ON.
3. THE OVERHEAD LIGHT BREAKER AT THE AC/DC PANEL MUST BE SWITCHED TO ON.
4. THE ENTRYWAY'S LAST SWITCH IS NOW SUPPLIED WITH POWER TO TURN LIGHTS ON.


LIGHT	SWITCH	BREAKER SWITCH	PLUG	GROUND

THUNDERBIRD PRODUCTS						TITLE: F-34 PC CABIN LIGHTS	
4				FROM HIN # *	TO HIN # *		
3	P.O. BOX 501			FROM HIN # *	TO HIN # *		
2				FROM HIN # *	TO HIN # *		
1	DECATUR, IN 46733			FROM HIN # *	TO HIN # *		DR BY: KKR CH BY: 10
#	(219) 724-9111	REVISIONS	DR	CH	DATE	TO HIN # *	DATE: 5-6-91 NO. 340-000 a

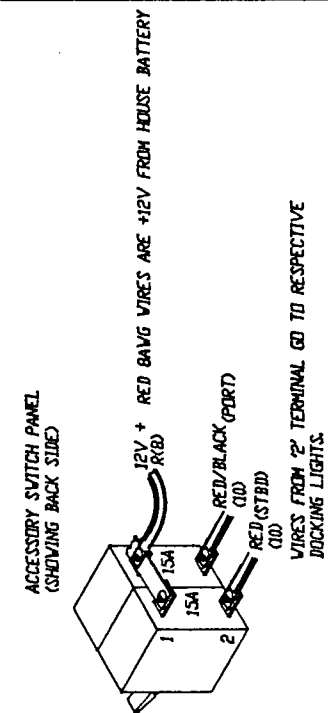

THE

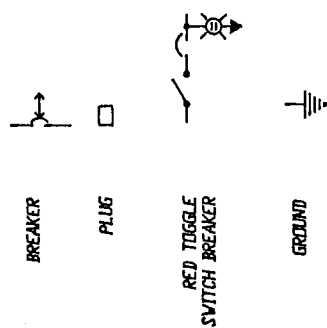[illegible]

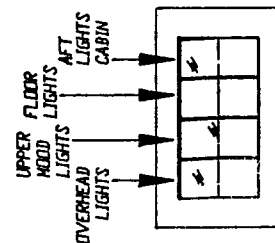

NOTES:



FLOOR LIGHTS ARE POWERED BY THE HOUSE BATTERY.

TO OPERATE:


1. THE HOUSE BATTERY SWITCH FOUND IN THE STBD COCKPIT STORAGE COMPARTMENT MUST BE TURNED TO ON.
2. THE DC MAIN 1 BREAKER AT THE AC/DC PANEL MUST BE SWITCHED TO ON.
3. THE CABIN LIGHT BREAKER AT THE AC/DC PANEL MUST BE SWITCHED TO ON.
4. THE ENTRYWAY'S SECOND SWITCH IS NOW SUPPLIED WITH POWER TO TURN LIGHTS ON.

LIGHT	SWITCH	BREAKER SWITCH	PLUG	GROUND


4	THUNDERBIRD PRODUCTS	FROM HIN # *	TO HIN # *
3	P.O. BOX 501	FROM HIN # *	TO HIN # *
2		FROM HIN # *	TO HIN # *
1	DECATUR, IN 46733	FROM HIN # *	TO HIN # *
#	(219) 724-9111	FROM HIN # *	TO HIN # *
REVISIONS		DR	CH
		DATE	
		DR BY: KKR	CH BY: JLB
		DATE: 4-25-91	NO. 340-000 *
		TITLE: F-34 PC FLOOR LIGHTS	

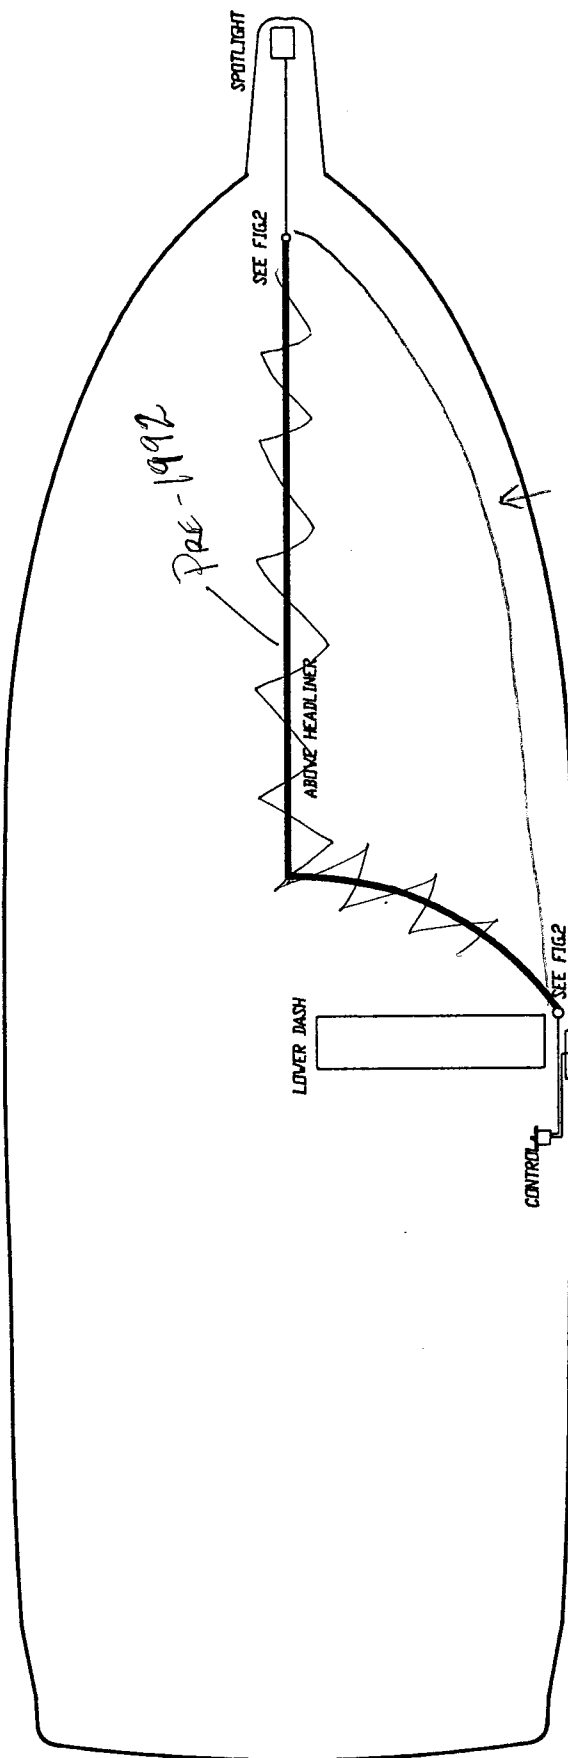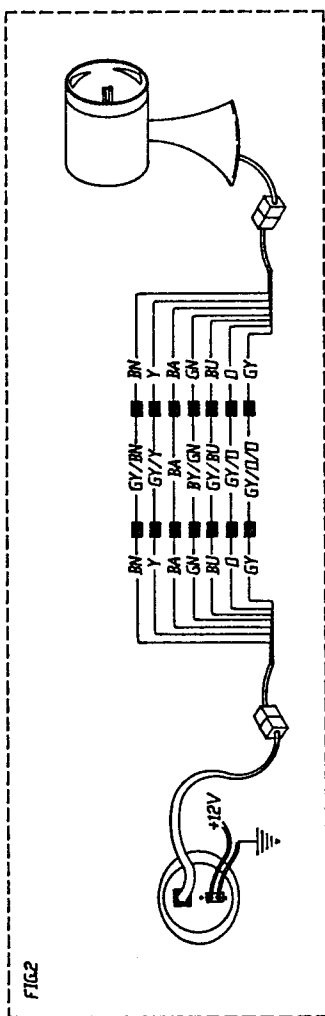

THUNDERBIRD PRODUCTS	4				FROM HIN #	TO HIN #	TITLE: F-34 PC SPOT-LIGHT CRASH / BOV PULPIT	
P.O. BOX 501	3				FROM HIN #	TO HIN #		
	2				FROM HIN #	TO HIN #		
DECATUR, IN 46733	1				FROM HIN #	TO HIN #		
(219) 724-9111	#				FROM HIN #	TO HIN #		
REVISIONS				DR	CH	DATE	DR BY: KKR	CH BY: JPS
							DATE: 6-7-91	NO: 340-001

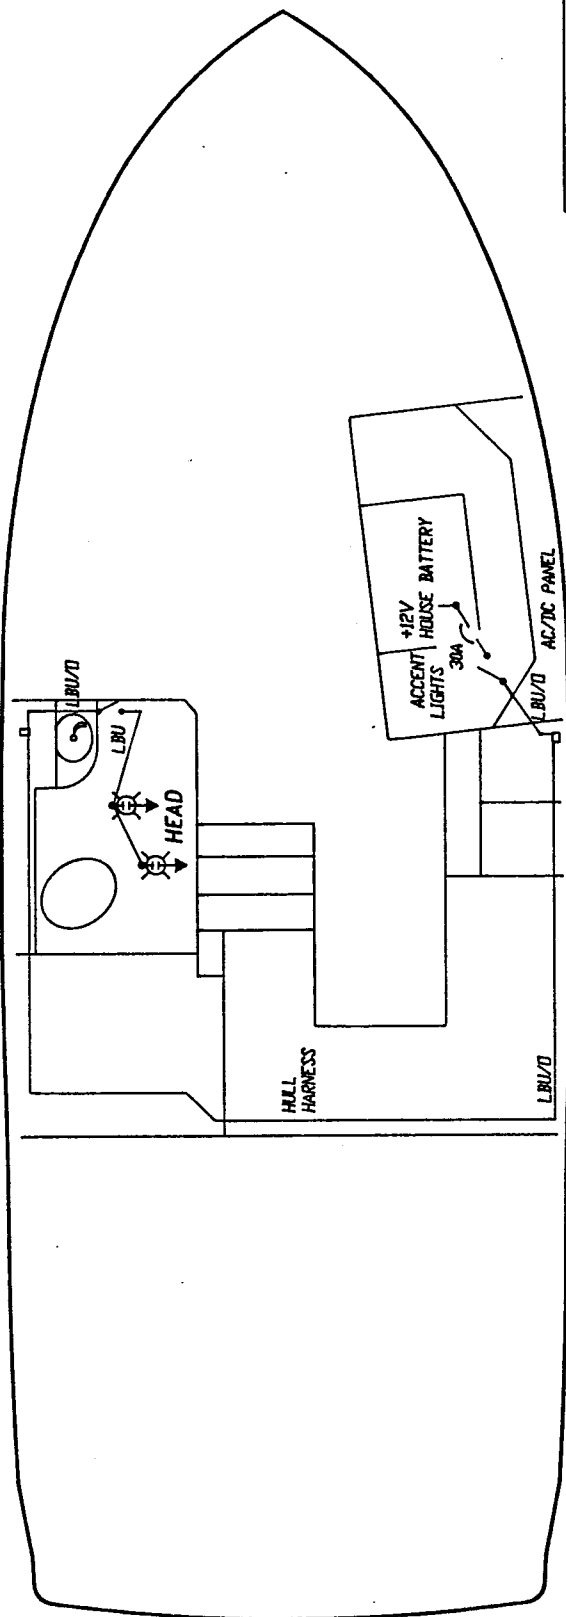

LE GEND

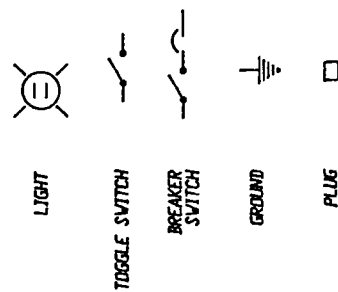

NOTES



NOTES

HEAD LIGHTS ARE POWERED BY THE HOUSE BATTERY.


TO OPERATE:

1. THE HOUSE BATTERY SWITCH FOUND IN THE STD COCKPIT STORAGE PANEL MUST BE TURNED TO ON.
2. THE DC MAIN 1 BREAKER AT THE AC/DC PANEL MUST BE SWITCHED TO ON.
3. THE ACCENT LIGHT BREAKER AT THE AC/DC PANEL MUST BE SWITCHED TO ON.
4. THE HEAD'S LIGHT SWITCH IS NOW SUPPLIED WITH POWER TO TURN THE LIGHTS ON.


	4				TO HIN #	TITLE: F-34 PC HEAD ROOM LIGHTS
THUNDERBIRD PRODUCTS	3				FROM HIN #	(AC-DC PANEL/HEAD)
P.O. BOX 501	2				FROM HIN #	DR BY: KKR CH BY: DB
DECATUR, IN 46733	1				FROM HIN #	DATE: 5-7-91 NO. 340-000 F
(219) 724-9111		DR	CH	DATE	FROM HIN #	
		REVISIONS				

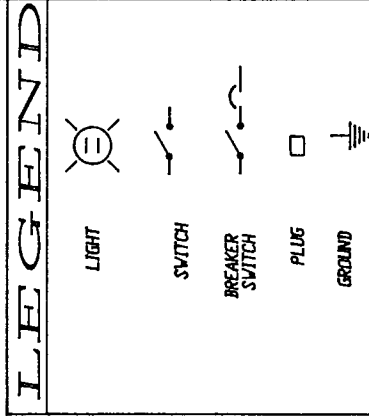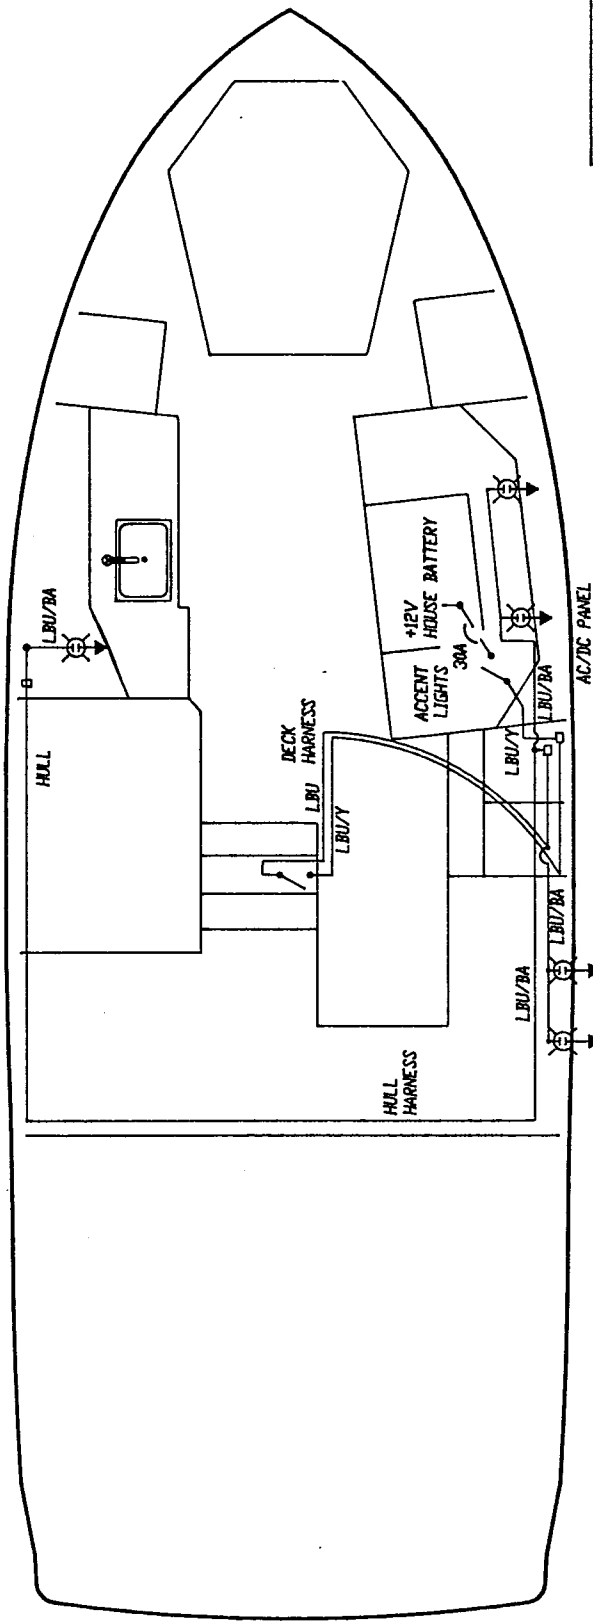

NOTES:
 MOOD LIGHTS ARE POWERED BY THE HOUSE BATTERY.
 TO OPERATE:
 1. THE HOUSE BATTERY SWITCH FOUND IN THE STBD COCKPIT STORAGE PAN MUST BE TURNED TO ON.
 2. THE DC MAIN 1 BREAKER AT THE AC/DC PANEL MUST BE SWITCHED TO ON.
 3. THE ACCENT LIGHT BREAKER AT THE AC/DC PANEL MUST BE SWITCHED TO ON.
 4. THE ENTRYWAYS THIRD SWITCH IS NOW SUPPLIED WITH POWER TO TURN LIGHTS ON.

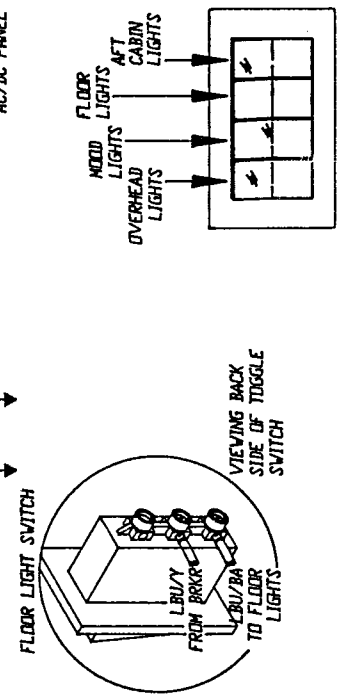

THUNDERBIRD PRODUCTS	4									TO HIN #	TO HIN #	TITLE: F-34 PC
P.O. BOX 501	3									FROM HIN #	FROM HIN #	MOOD LIGHTS
DECATUR, IN 46733	2									FROM HIN #	FROM HIN #	AC-DC PANEL/CABIN SWITCHES
(219) 724-9111	1									FROM HIN #	FROM HIN #	DR BY: KKR CH BY: KKR
	#									FROM HIN #	FROM HIN #	DATE: 5-6-91 NO. 340-010 B

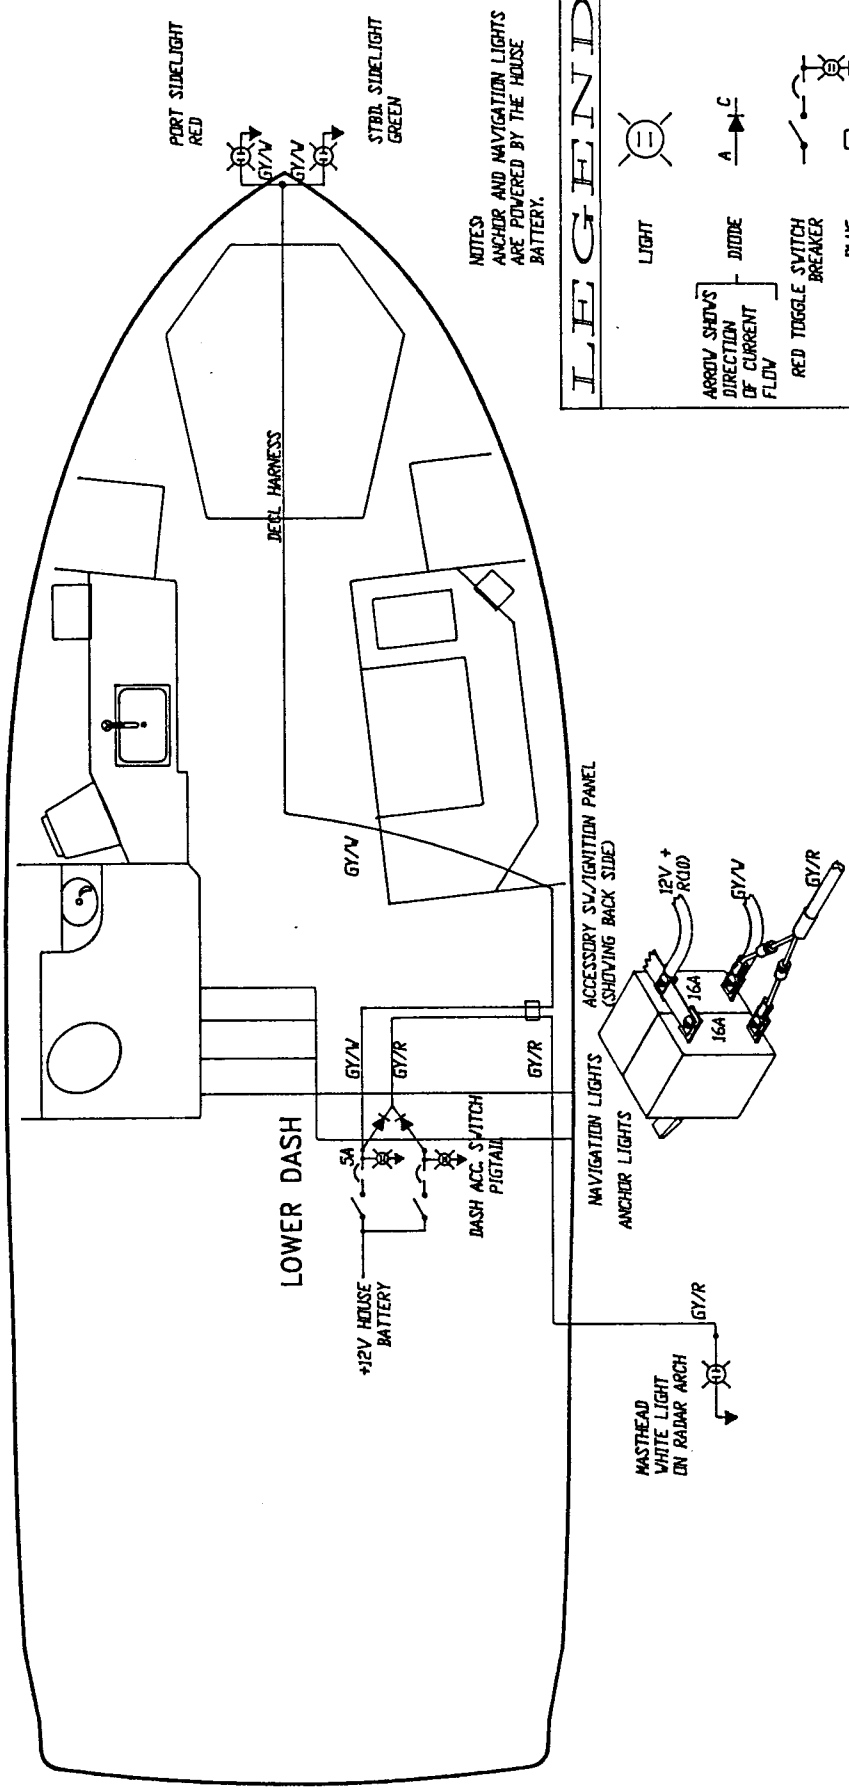


NOTES
ANCHOR AND NAVIGATION LIGHTS
ARE POWERED BY THE HOUSE
BATTERY.

LEGEND

LIGHT
 ARROW SHOWS DIRECTION OF CURRENT FLOW
 DIODE
 RED TOGGLE SWITCH
 BREAKER
 PLUG
 GROUND

THUNDERBIRD PRODUCTS P.O. BOX 501 DECATUR, IN 46733 (219) 724-9111	4								TO HIN # *	TITLE: F-34 PC	
	3								FROM HIN # *	NAVIGATION LIGHTS	
	2								FROM HIN # *		
	1								FROM HIN # *	DR BY: KKR CH BY: JRE	
	#								FROM HIN # *	DATE: 5-6-91 NO. 340-010 h	
REVISIONS											
		DR	CH	DATE							

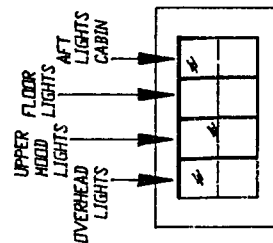

NOTES


AFT CABIN LIGHTS ARE POWERED BY THE HOUSE BATTERY.

TO OPERATE:


1. THE HOUSE BATTERY SWITCH FOUND IN THE STBD COCKPIT STORAGE PAN MUST BE TURNED TO ON.
2. THE DC MAIN 1 BREAKER AT THE AC/DC PANEL MUST BE SWITCHED TO ON.
3. THE CABIN LIGHT BREAKER AT THE AC/DC PANEL MUST BE SWITCHED TO ON.
4. THE ENTRYWAY'S FIRST SWITCH IS NOW SUPPLIED WITH POWER TO TURN LIGHTS ON.

LIGHT	SWITCH	BREAKER SWITCH	PLUG	GROUND

4					FROM HIN # *	TO HIN # *	TITLE: F-34 PC AFT CABIN LIGHTS
3					FROM HIN # *	TO HIN # *	
2					FROM HIN # *	TO HIN # *	
1					FROM HIN # *	TO HIN # *	
#			DR	CH	DATE	FROM HIN # *	DR BY: KKR DATE: 4-25-91 NO. 340-00 k

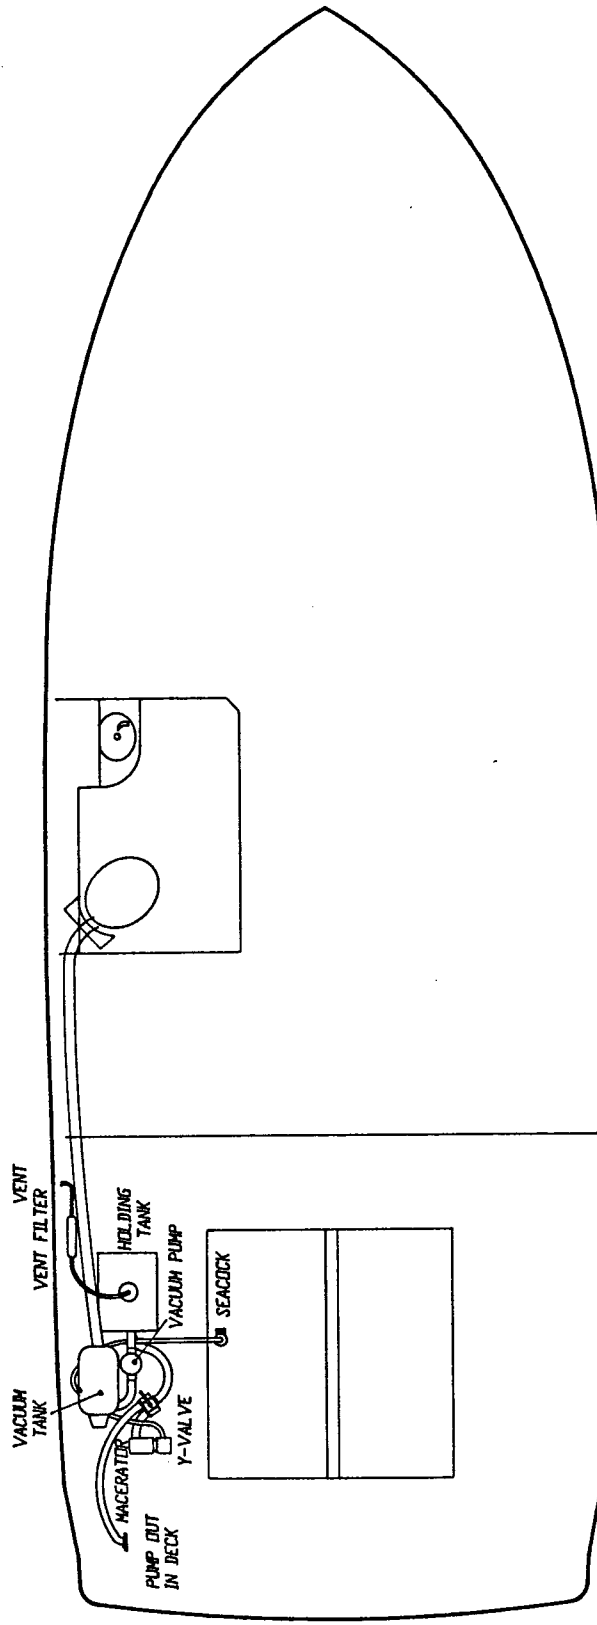



OVERHEAD VIEW

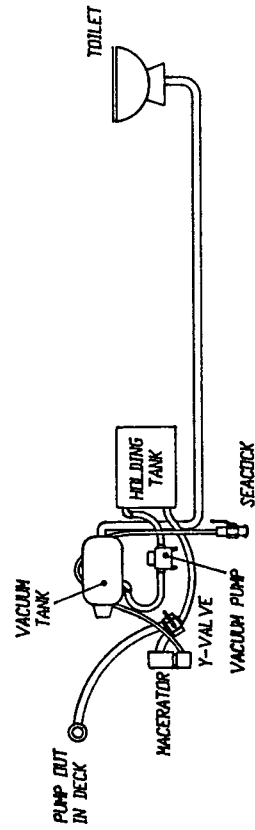

SIDE VIEW

THUNDERBIRD PRODUCTS P.O. BOX 501 DECATUR, IN 46733 (219) 724-9111	4					FROM HIN #	TO HIN #	TITLE: F-34 PC MACERATOR HOOK-UP PLUMBING DR BY: KKR CH BY: JRE DATE: 4-30-91 NO.: 340-001 b
	3					FROM HIN #	TO HIN #	
	2					FROM HIN #	TO HIN #	
	1					FROM HIN #	TO HIN #	
	#					FROM HIN #	TO HIN #	
REVISIONS								
		DR	CH	DATE				


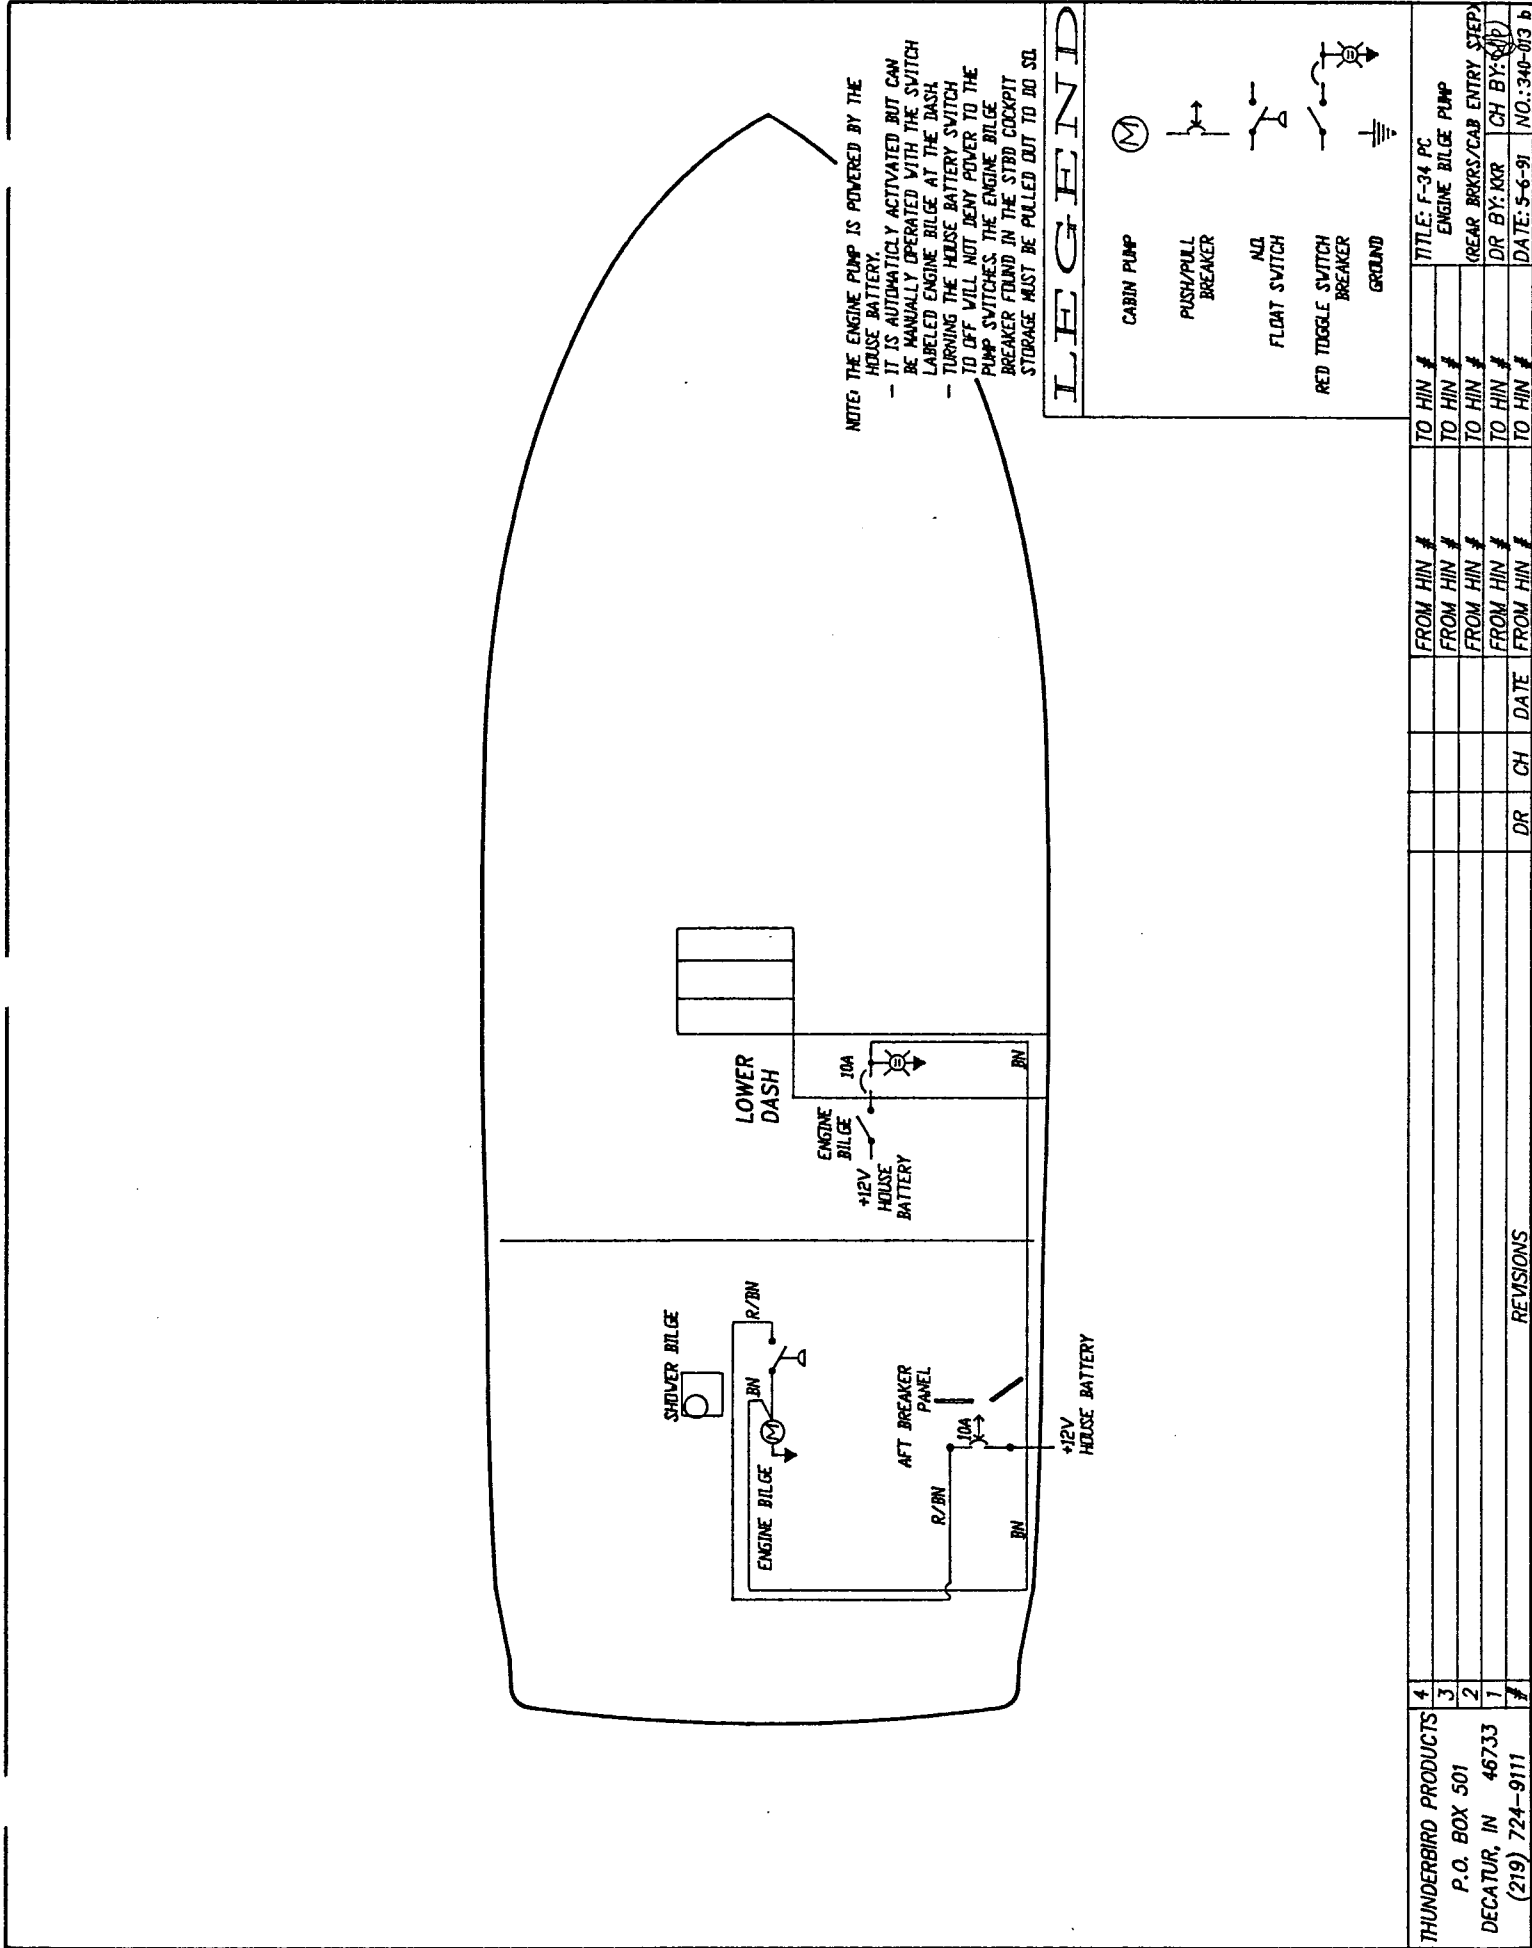


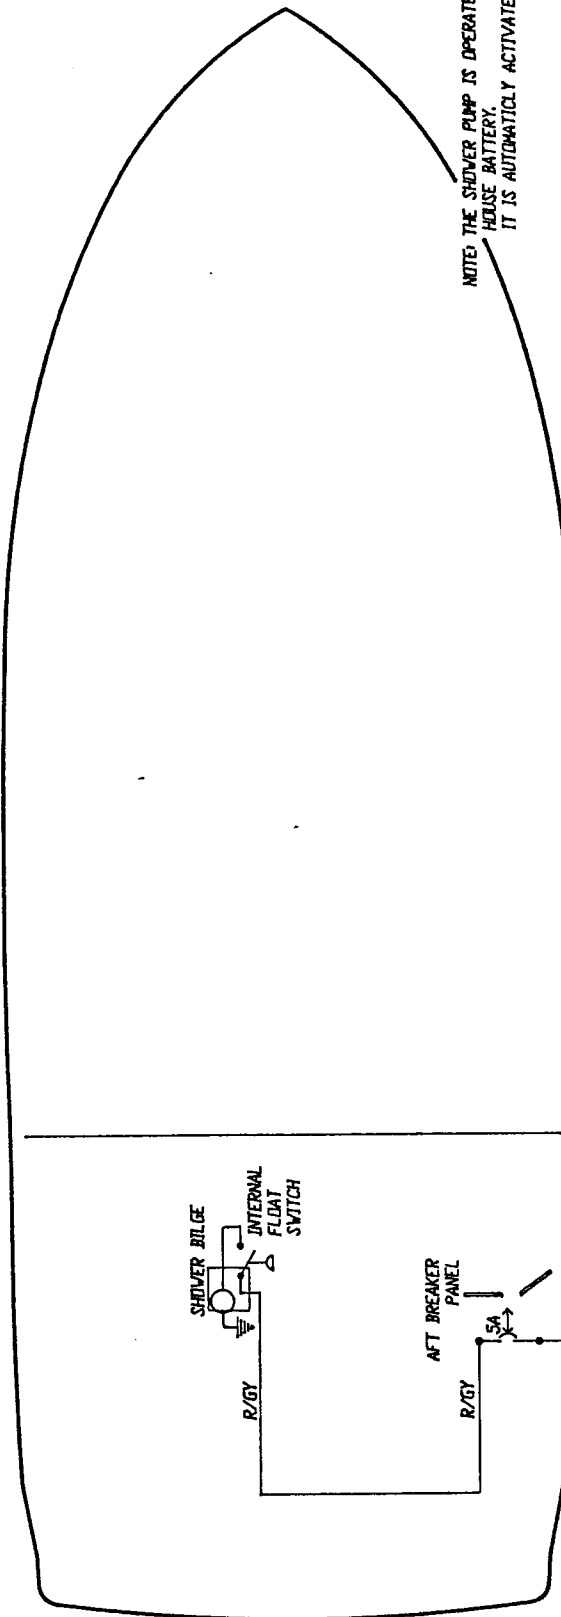


NOTE: THE SHOWER PUMP IS OPERATED BY THE HOUSE BATTERY. IT IS AUTOMATICALLY ACTIVATED

THUNDERBIRD PRODUCTS				REVISIONS			
P.O. BOX 501	4						
DECATUR, IN 46733	3						
(219) 724-9111	2						
	1						
	#						
TITLE: F-34 PC				SHOWER BILGE PUMP			
TO HIN #				TO HIN #			
FROM HIN #				FROM HIN #			
TO HIN #				TO HIN #			
FROM HIN #				FROM HIN #			
TO HIN #				TO HIN #			
FROM HIN #				FROM HIN #			
DR				CH			
DATE				DATE			
DR				CH			
DATE: 5-6-91				DATE: 5-6-91			
NO: 340-013 d				NO: 340-013 d			


CABIN PUMP	Ⓜ
PUSH/PULL BREAKER	⏏
NO. FLOAT SWITCH	⏏
GROUND	⏏

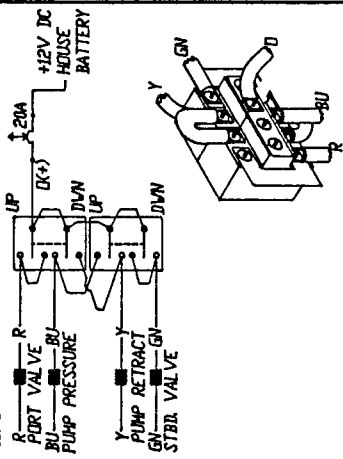


NOTES
THE TRIM PUMP IS POWERED
BY THE HOUSE BATTERY
SEE BENNETT TRIM TABS
OWNERS MANUAL

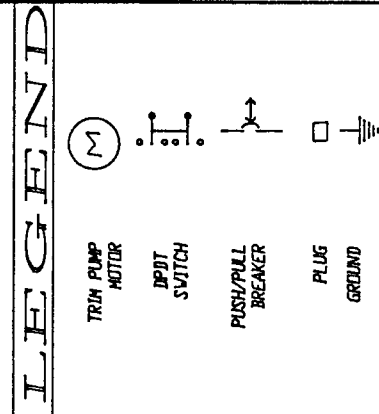

THUNDERBIRD PRODUCTS	4				FROM HIN # *	TO HIN # *	TITLE: F-34 PC
P.O. BOX 501	3				FROM HIN # *	TO HIN # *	TRIM TAB PUMP
DECATUR, IN 46733	2				FROM HIN # *	TO HIN # *	(BILGE /SHIFTER PANEL)
(219) 724-9111	1				FROM HIN # *	TO HIN # *	DR BY: KKR
	#				FROM HIN # *	TO HIN # *	CH BY: JRC
					FROM HIN # *	TO HIN # *	DATE: 5-7-91
					FROM HIN # *	TO HIN # *	NO: 340-015



VINDULLESS BREAKER									
		4				FROM HIN #	TO HIN #	TITLE:	
THUNDERBIRD PRODUCTS		3				FROM HIN #	TO HIN #	MAXWELL VINDULLESS VVC 800	
P.O. BOX 501		2				FROM HIN #	TO HIN #	CULICE/LOVER MASHV-BESTRO	
DECATUR, IN 46733		1				FROM HIN #	TO HIN #	DR BY: KCR	CH BY:
(219) 724-9111		#		DR	CH	DATE	TO HIN #	DATE: 6-5-91 NO.: 340-016 b	
REVISIONS									

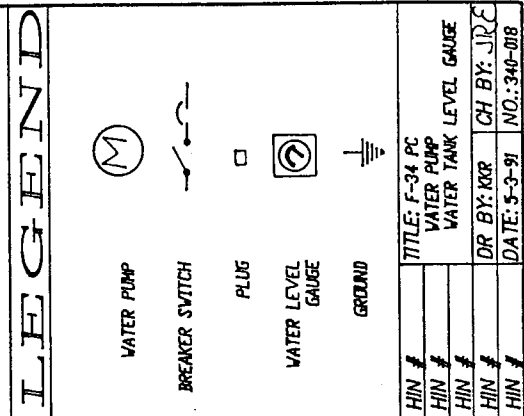

THUNDERBIRD PRODUCTS								TITLE: F-34 PC	
								WATER PUMP	
								WATER TANK	
								LEVEL GAUGE	
4								TO HIN #	
3								TO HIN #	
2								TO HIN #	
1								TO HIN #	
4								TO HIN #	

THUNDERBIRD PRODUCTS

P.O. BOX 501

DECATUR, IN 46733

(317) 724-9111


DR BY: KKR

DATE: 5-3-91


NO.: 346-018



CH BY: JRE

REVISIONS

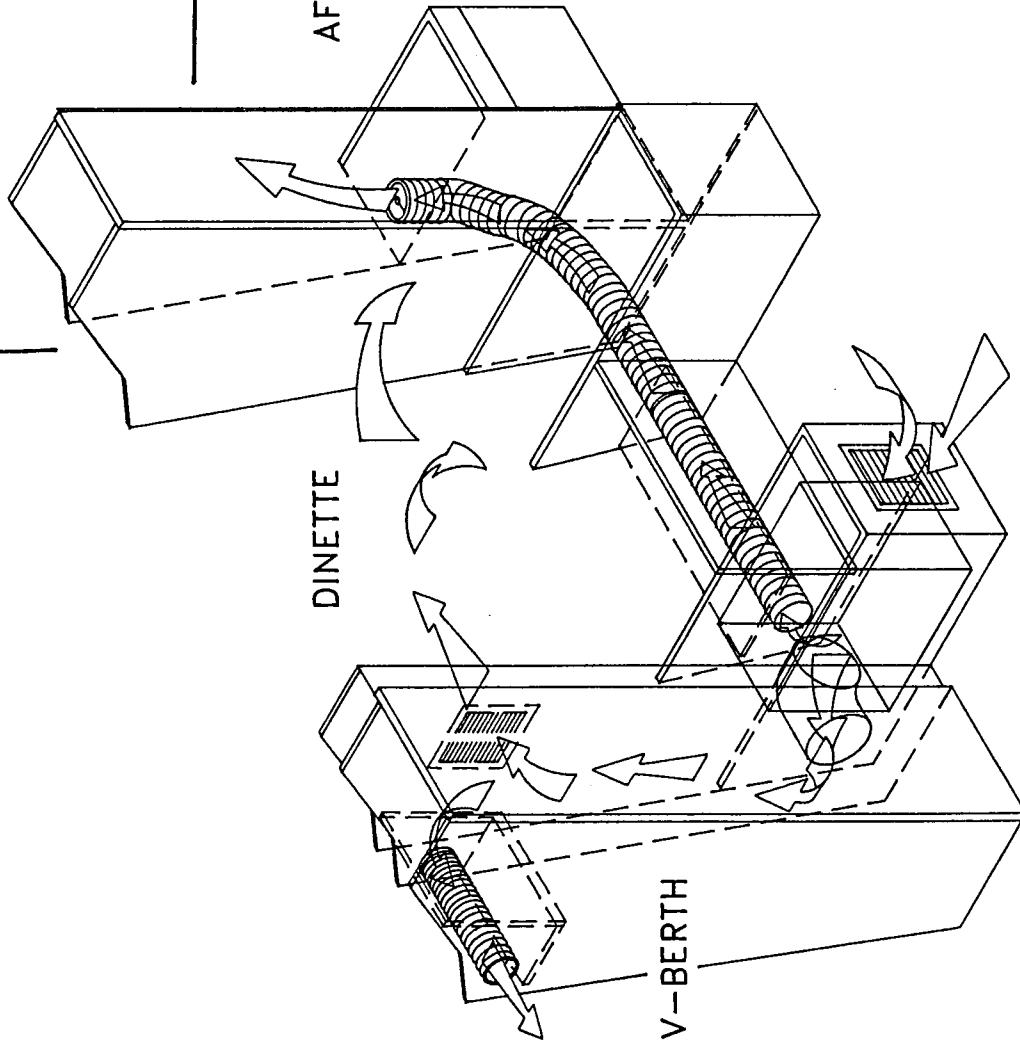


4					FROM HIN #	TO HIN #	TITLE: F-34 PC A/C VENTILATION STANDARD
3					FROM HIN #	TO HIN #	
2					FROM HIN #	TO HIN #	
1					FROM HIN #	TO HIN #	
#	REVISIONS	DR	CH	DATE	FROM HIN #	TO HIN #	DR BY: KKR CH BY: JRE DATE: 4-29-91 NO: 340-100

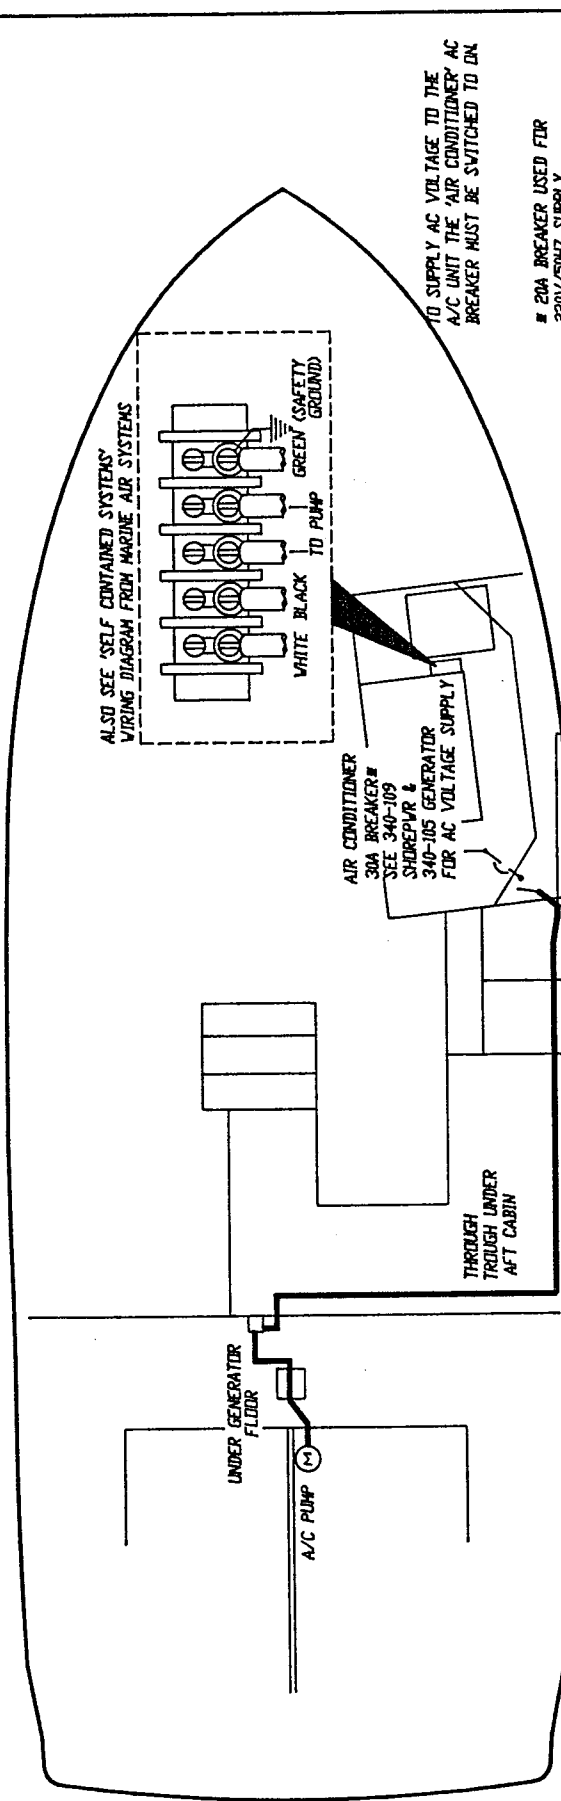

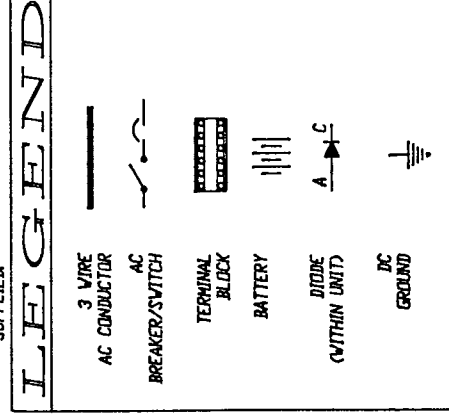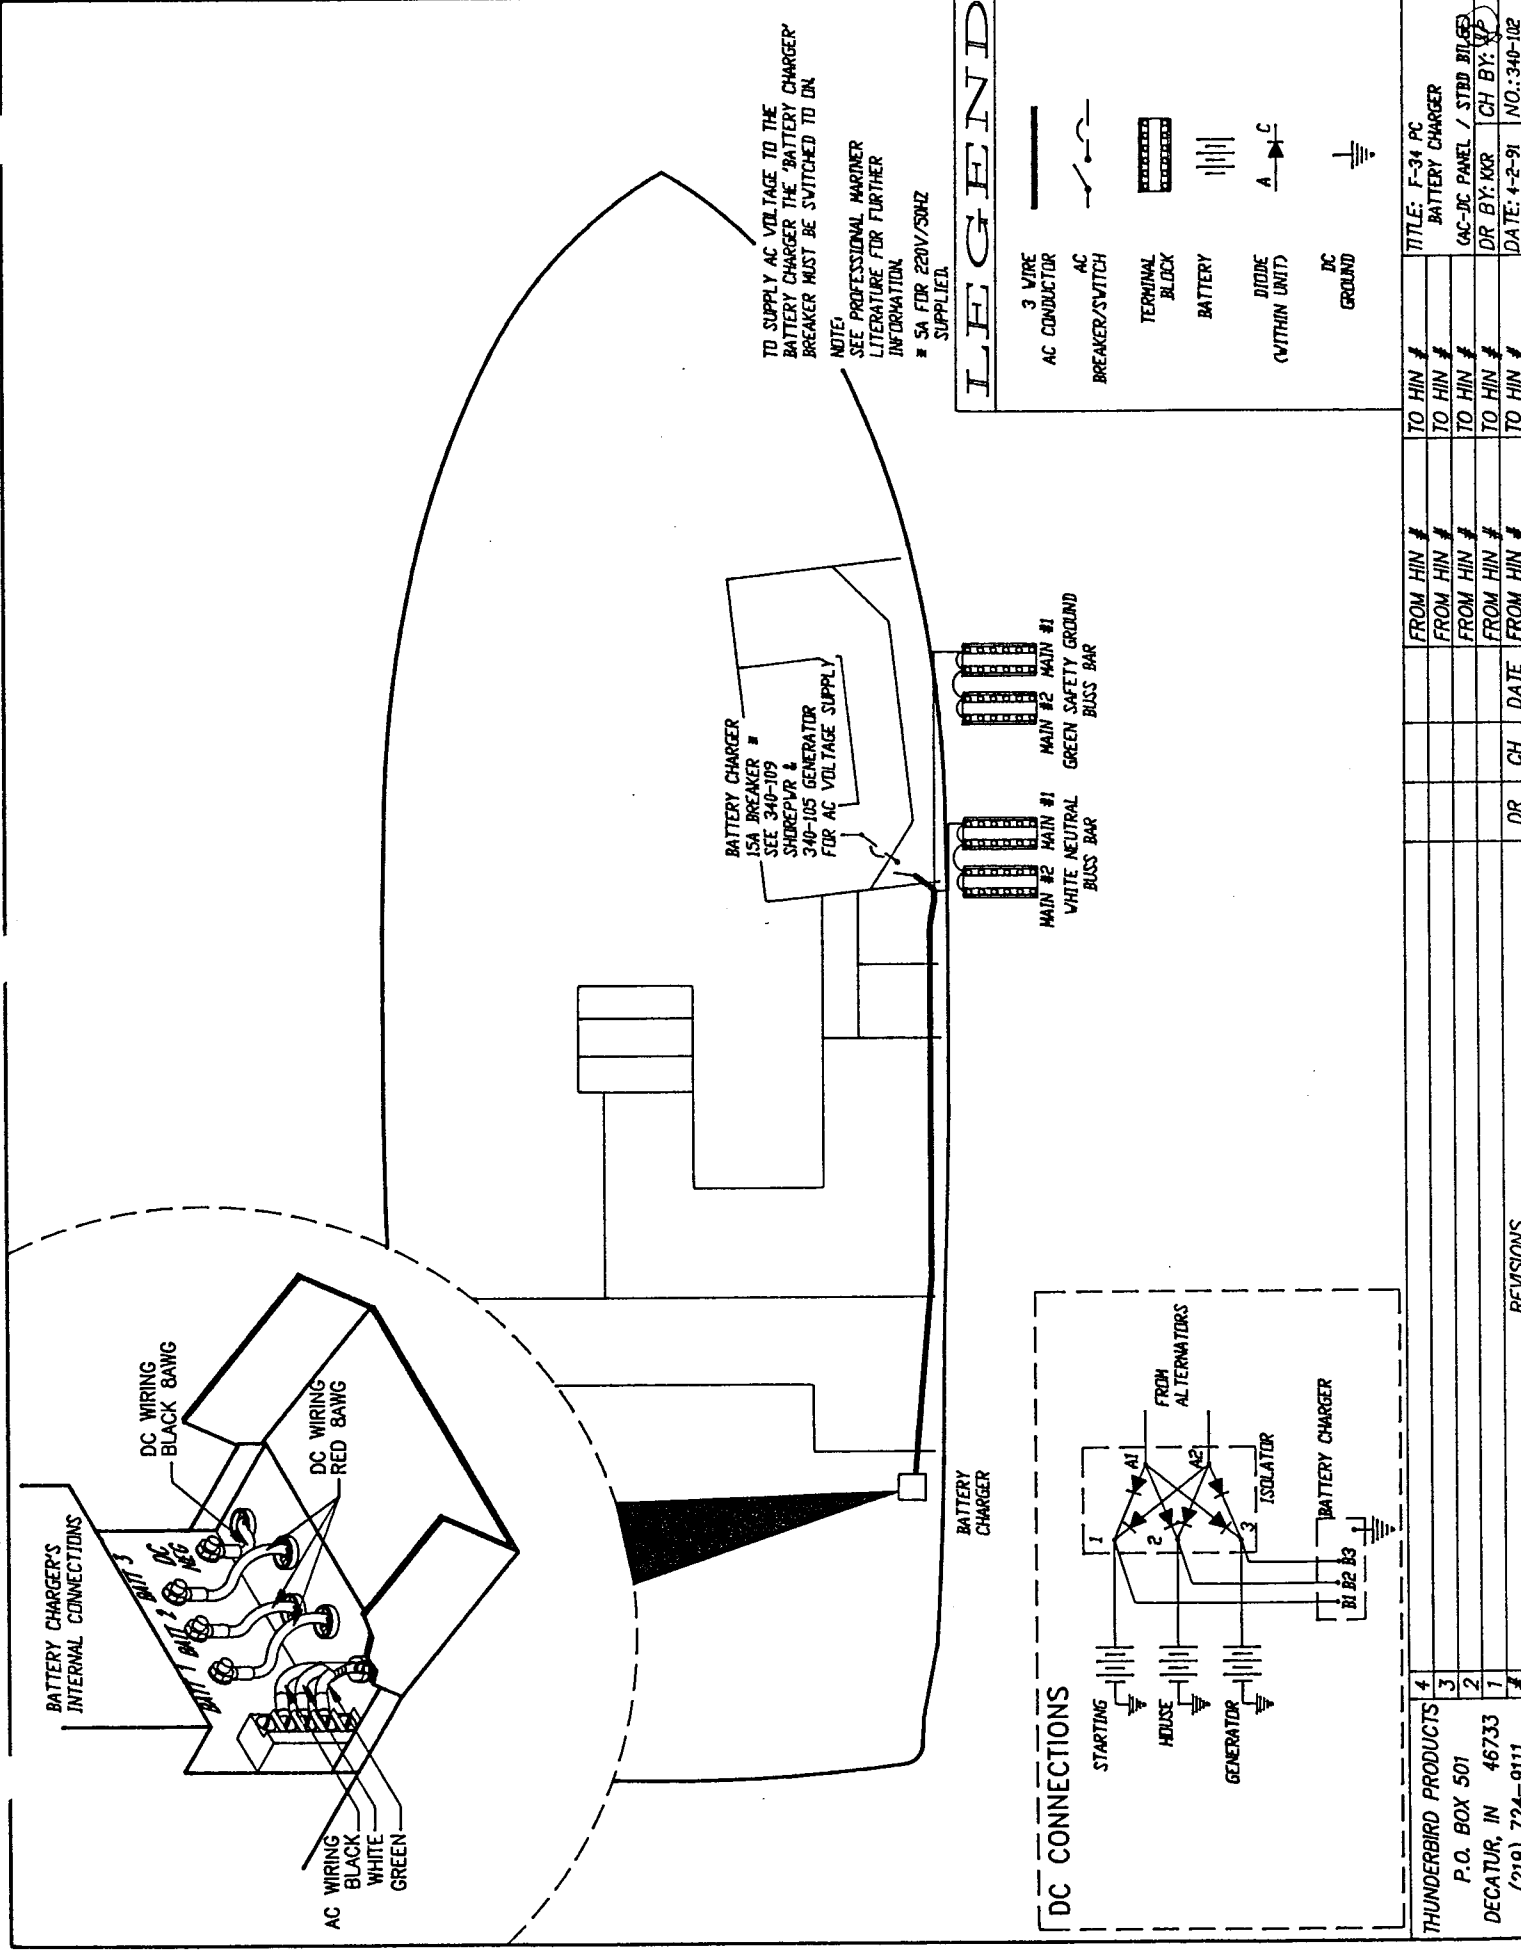

THUNDERBIRD PRODUCTS				REVISIONS			
4				DR	CH	DATE	TO HIN #
3							FROM HIN #
2							TO HIN #
1							TO HIN #
#							TO HIN #
P.O. BOX 501 DECATUR, IN 46733 (219) 724-9111				TITLE: F-34 PC BATTERY CHARGER AC-DC PANEL / STD BILGES DR BY: KKR CH BY: J DATE: 4-2-91 NO.: 340-102			

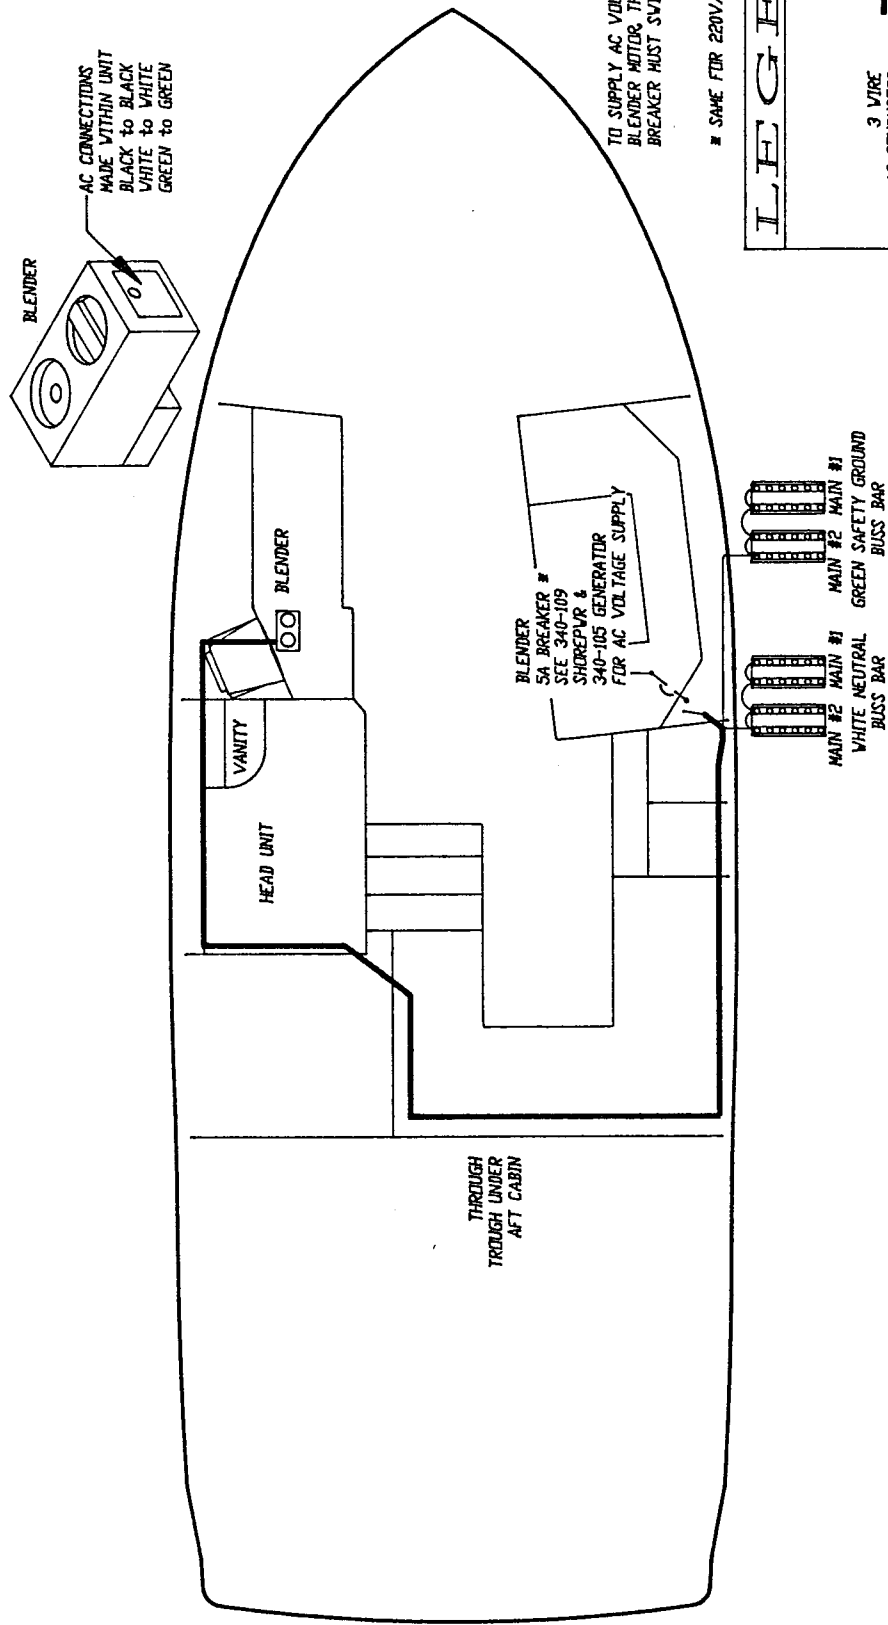



LEGEND

3 WIRE
AC CONDUCTOR

AC
BREAKER/SWITCH


TERMINAL
BLOCK

THUNDERBIRD PRODUCTS P.O. BOX 501 DECATUR, IN 46733 (219) 724-9111	4						FROM HIN #		TO HIN #	TITLE: F-34 PC
	3						FROM HIN #		TO HIN #	BLENDER
	2						FROM HIN #		TO HIN #	(AC-DC PANEL / GALLEY)
	1						FROM HIN #		TO HIN #	DR BY: KKR CH BY: JRC
	#						FROM HIN #		TO HIN #	DATE: 4-14-91 NO.: 340-103

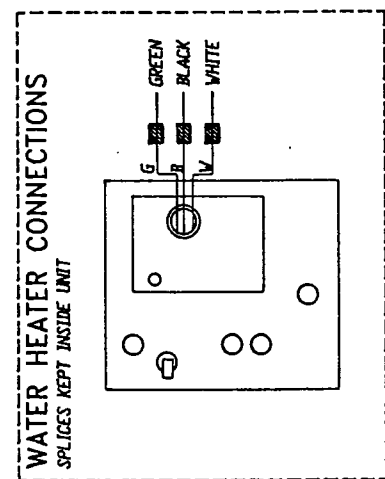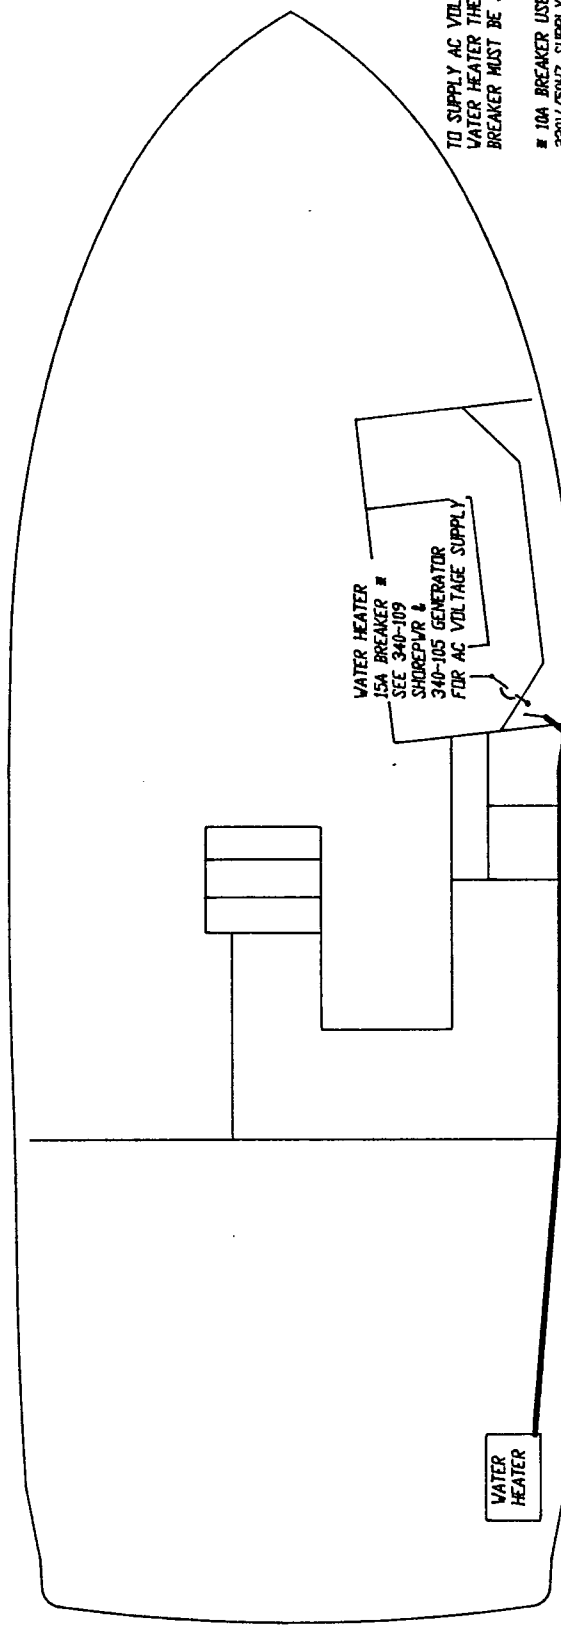


4				FROM HIN #	TO HIN #	TITLE: F-34 PC
3				FROM HIN #	TO HIN #	WATER HEATER
2				FROM HIN #	TO HIN #	GAC-DC PANEL / STBD BILGE
1				FROM HIN #	TO HIN #	DR BY: KKR CH BY: JRE
#		DR	CH	DATE	TO HIN #	DATE: 4-2-91 NO: 340-106 b
THUNDERBIRD PRODUCTS P.O. BOX 501 DECATUR, IN 46733 (219) 724-9111						
REVISIONS						

FIG. 1

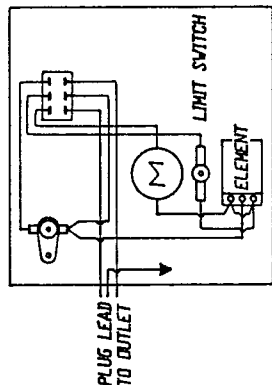

DINETTE

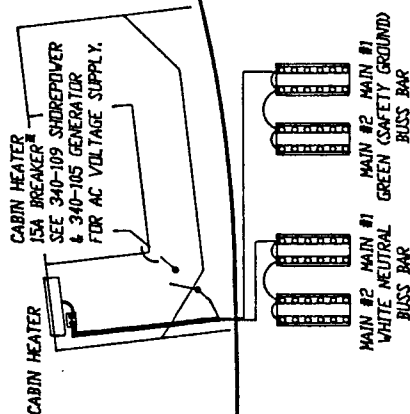

NOTE:


- 1. TO SUPPLY AC VOLTAGE TO THE CABIN HEATER UNIT
- 1. PLUG UNIT INTO OUTLET UNDER DINETTE SEAT.
- 2. SWITCH 'CABIN HEATER' BREAKER ON AC/DC PANEL TO ON
- TO OPERATE HEATER REFER TO THE OPERATION SECTION OF THE DAYTON WALL HEATERS MANUAL.
- 10A BREAKER USED FOR 220V/50HZ SUPPLY.

THE GENE



3 WIRE
AC CONDUCTOR

AC
BREAKER/SWITCH

TERMINAL BLOCK


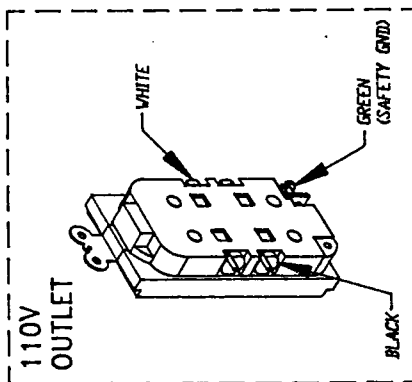


THUNDERBIRD PRODUCTS		FROM HIN #	TO HIN #	TITLE:
4				CABIN HEATER
3				
2				CAC-DC PANEL / LUVER DIMETTES
1				DR BY: KKR CH BY: JR E
#				DATE: 4-18-91 NO.: 340-106a


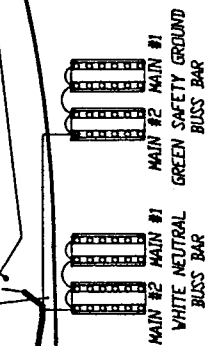



TERMINAL
BLACK

THUNDERBIRD PRODUCTS P.O. BOX 501 DECATUR, IN 46733 (219) 724-9111	4			FROM HIN #	TO HIN #	TITLE: F-34 PC MICROVAPE CAC-DC PANEL / UPPER GALLEY DR BY: KKR CH BY: JRE DATE: 4-2-91 NO.: 340-107
	3			FROM HIN #	TO HIN #	
	2			FROM HIN #	TO HIN #	
	1			FROM HIN #	TO HIN #	
	#	OR	CH	DATE	TO HIN #	
					REVISIONS	

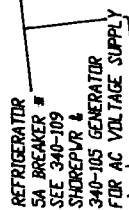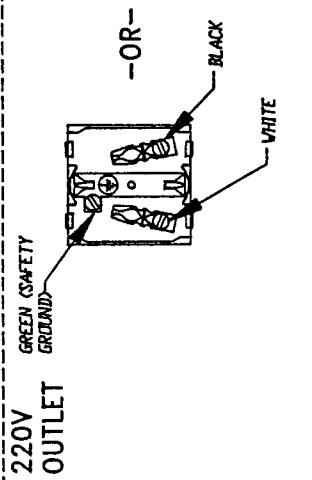

■ 5A BREAKER USED FOR 220V/50HZ SUPPLY.

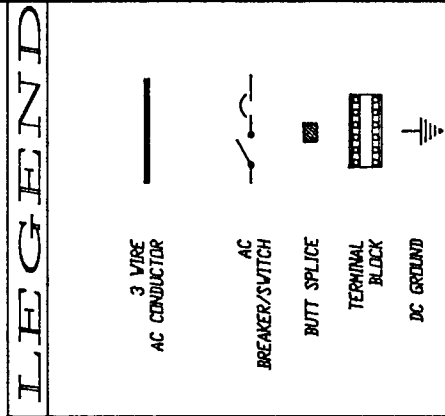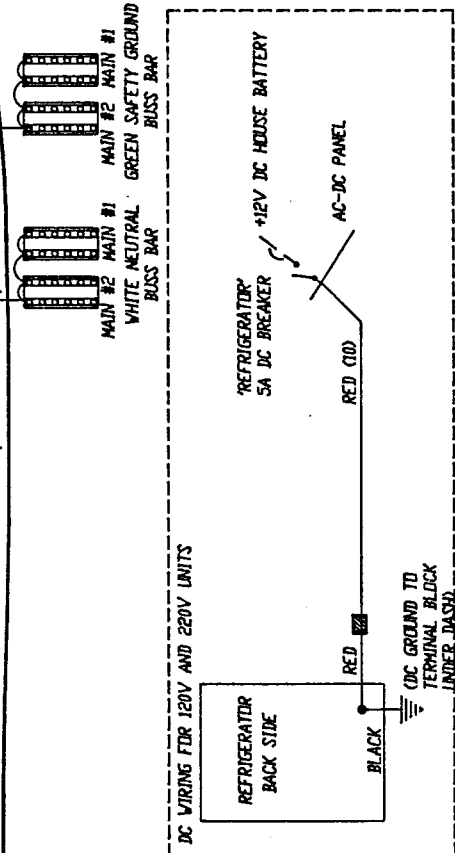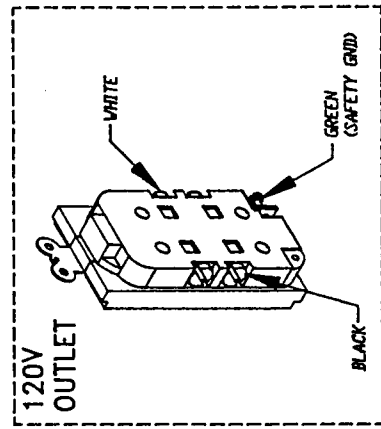

4				FROM HIN #	TO HIN #	TITLE: F-34 PC REFRIGERATOR
3				FROM HIN #	TO HIN #	
2				FROM HIN #	TO HIN #	
1				FROM HIN #	TO HIN #	
7				FROM HIN #	TO HIN #	
		DR	CH	DATE		DR BY: KKR
						DATE: 4-2-91
						NO.: 340-1087

SEE FIG 1
FOR INLET AND MAIN
BREAKER WIRING

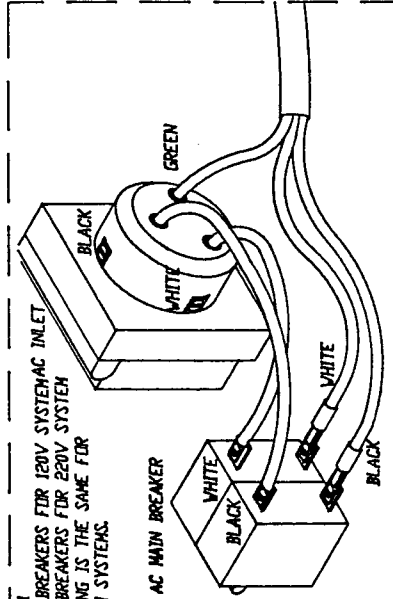
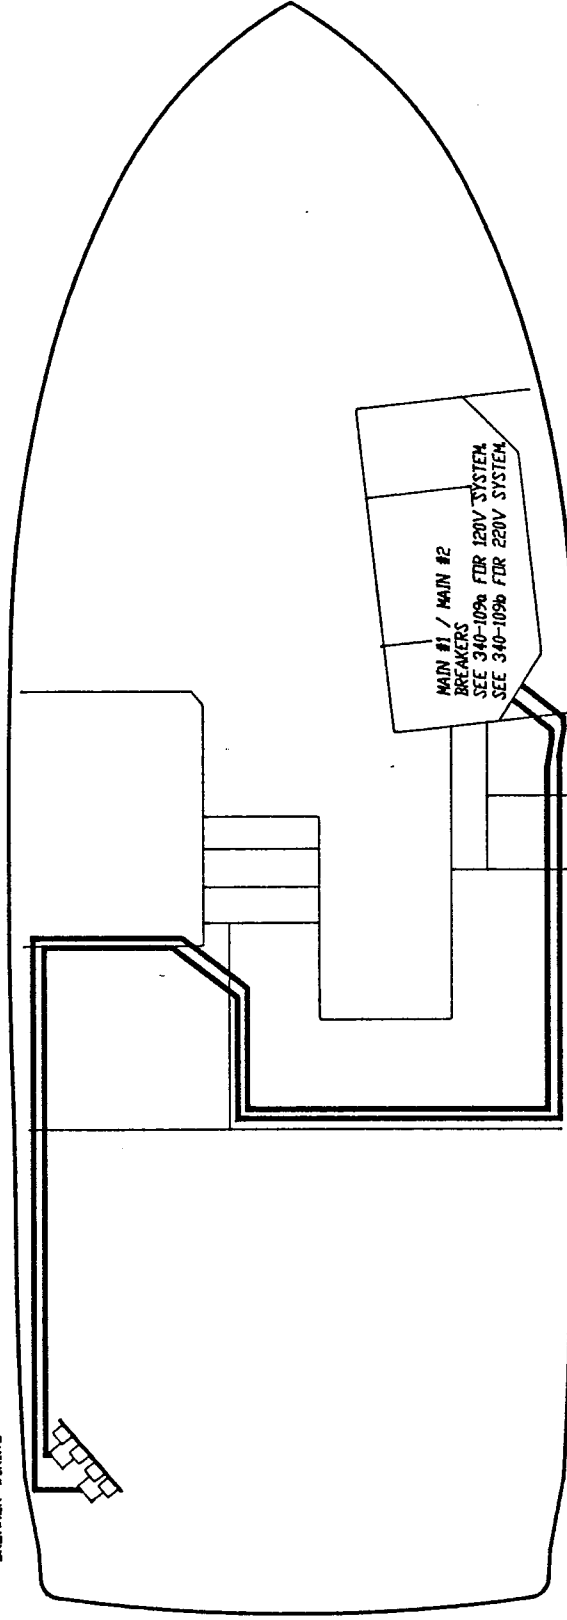


FIG 1
30A BREAKERS FOR 120V SYSTEM AC INLET
16A BREAKERS FOR 220V SYSTEM
WIRING IS THE SAME FOR
BOTH SYSTEMS.


LEGEND


3 WIRE
AC CONDUCTOR

AC
INLET/BREAKER


THUNDERBIRD PRODUCTS	4					FROM HIN #	TO HIN #	TITLE: F-34 PC
P.O. BOX 501	3					FROM HIN #	TO HIN #	SHOREPOWER WIRING
DECATUR, IN 46733	2					FROM HIN #	TO HIN #	WFT SEAT PAN / AC-DC PANEL
(219) 724-9111	1					FROM HIN #	TO HIN #	DR BY: KKR
	#					FROM HIN #	TO HIN #	CH BY: JRE
						FROM HIN #	TO HIN #	DATE: 4-17-91
						FROM HIN #	TO HIN #	NO: 340-109

REVISIONS

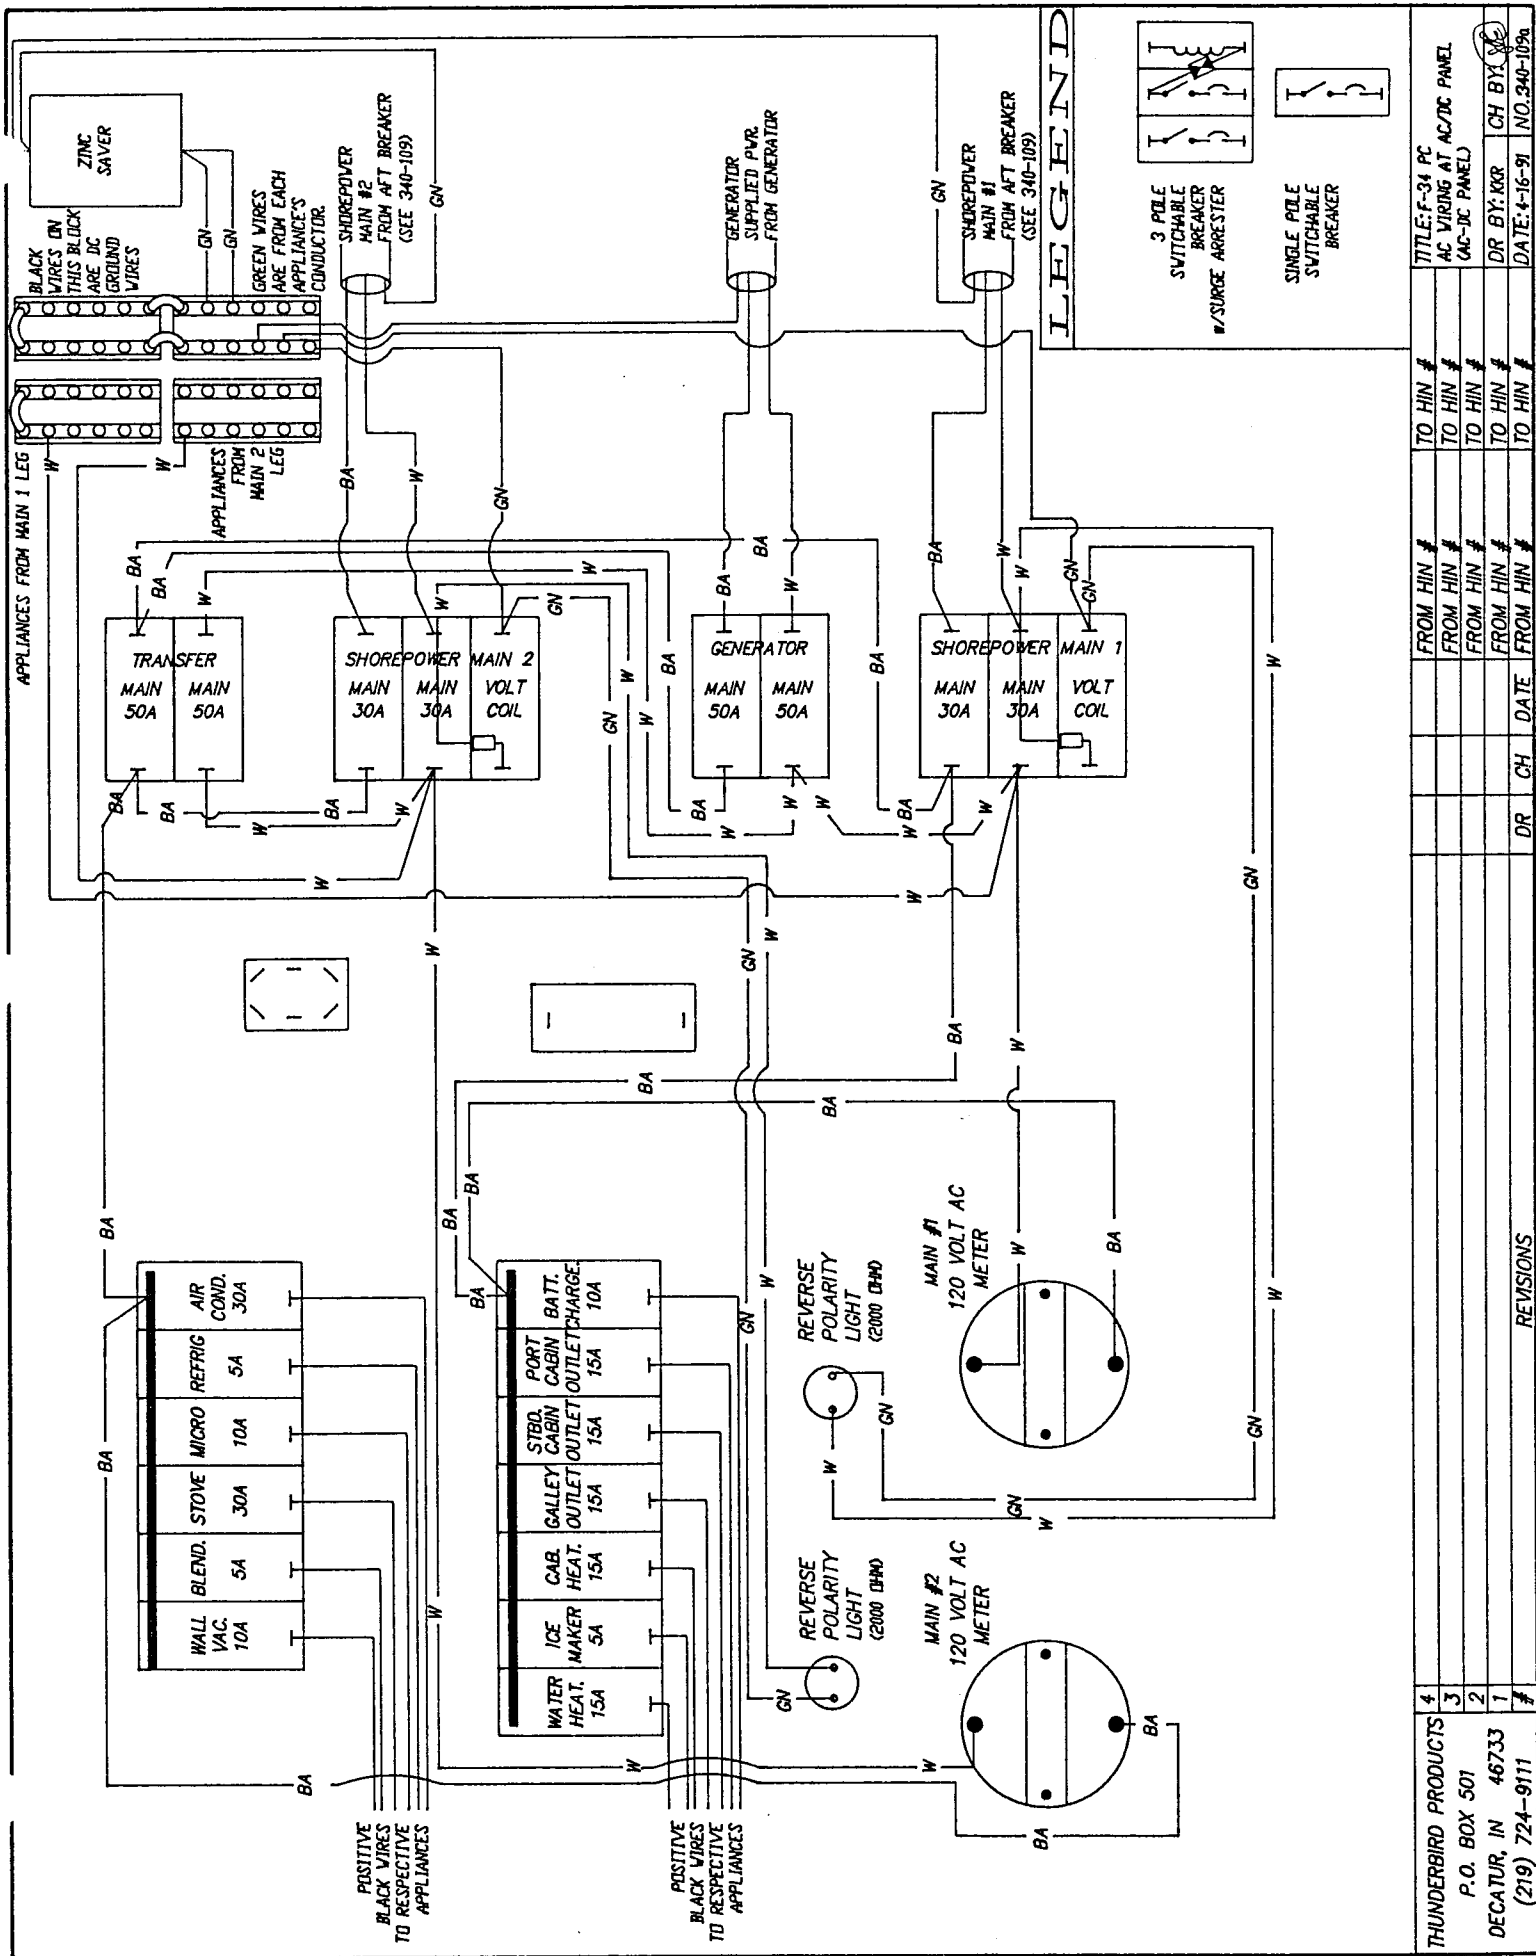

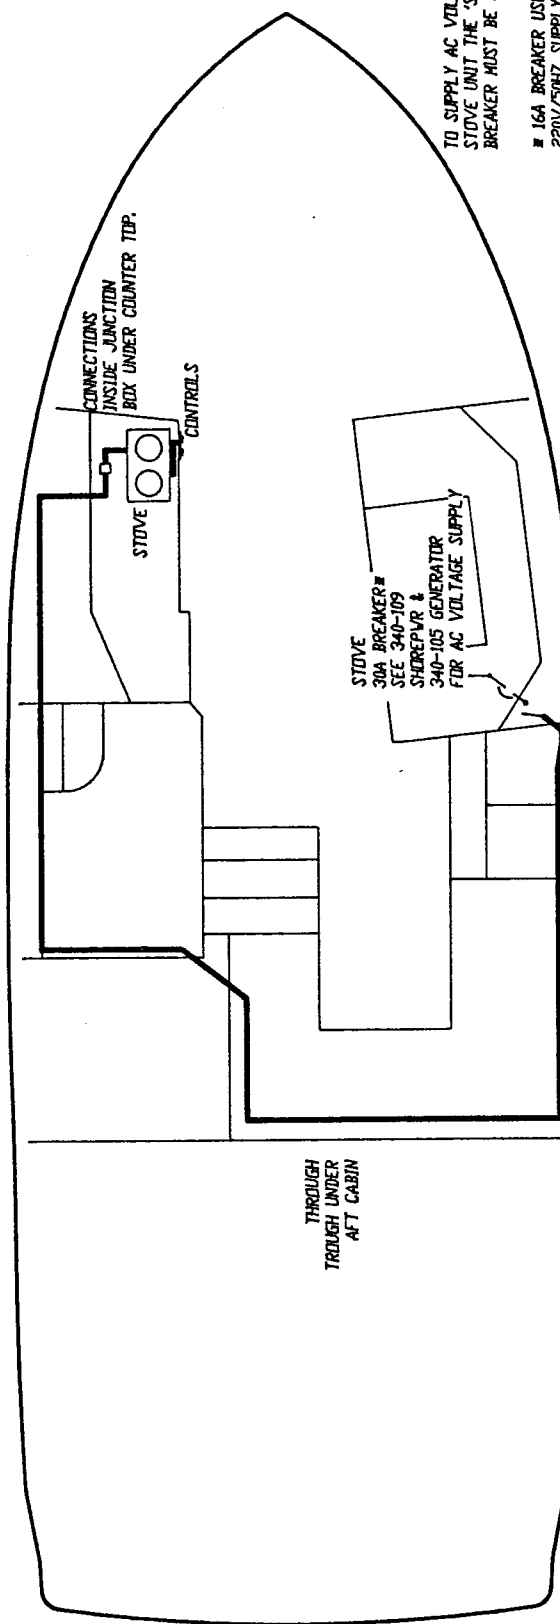


220V

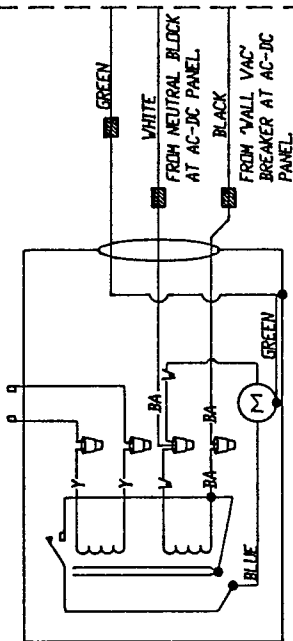

DINETTE

**WALL VAC
10A BREAKER
SEE 340-109 S
& 340-105 GEN
FOR AC VOLTAGE**

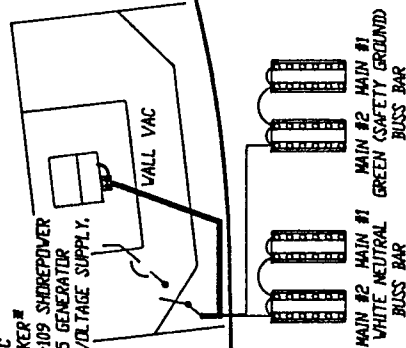


NOTE:
 1. TO SUPPLY AC VOLTAGE TO THE WALL VAC UNIT,
 1. PLUG UNIT INTO OUTLET UNDER
 DINETTE STEP.
 2. SWITCH "WALL VAC" BREAKER ON
 AC/DC PANEL TO ON.
 TO ACTIVATE VACUUM INSERT HOSE
 INTO INLET RECEPTACLE ON CLEANER
 ■ SA BREAKER USED FOR 220V/50HZ
 SUPPLY.

THE GENTLE





3 WIRE
AC CONDUCTOR

AC
BREAKER/SWITCH

TERMINAL BLOCK

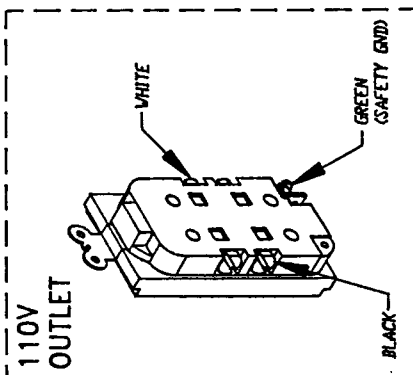110V
OUTLET

4					FROM HIN #	TO HIN #	TITLE:
3					FROM HIN #	TO HIN #	WALL VAC
2					FROM HIN #	TO HIN #	AC-DC PANEL / LOWER DIMETTE
1					FROM HIN #	TO HIN #	DR BY: KKR
#		DR	CH	DATE	FROM HIN #	TO HIN #	DATE: 4-1-91
REVISIONS THUNDERBIRD PRODUCTS P.O. BOX 501 DECATUR, IN 46733 (219) 724-9111							

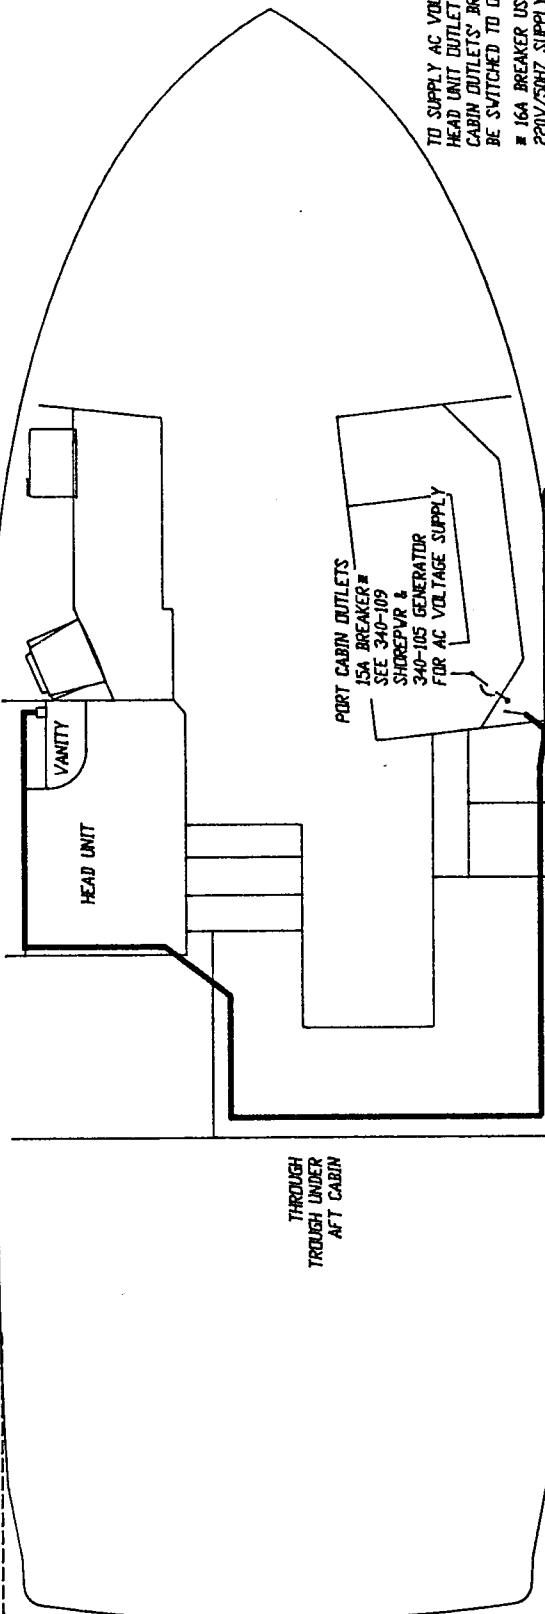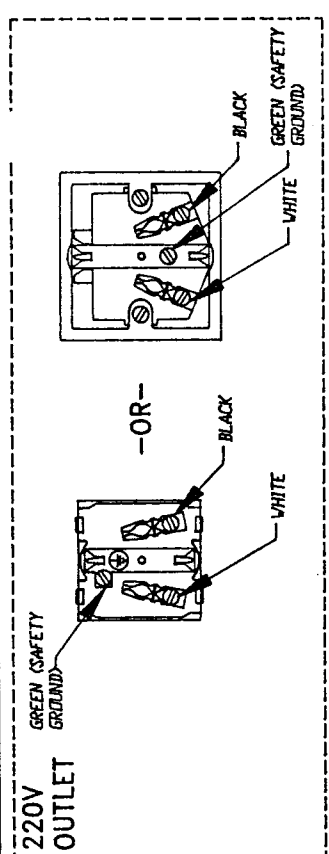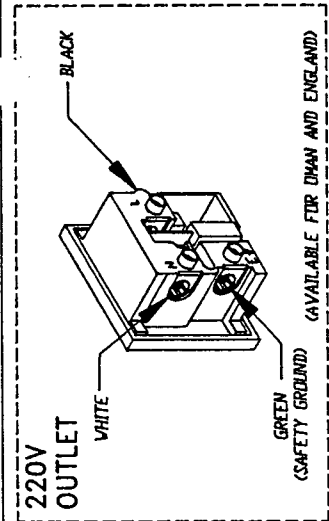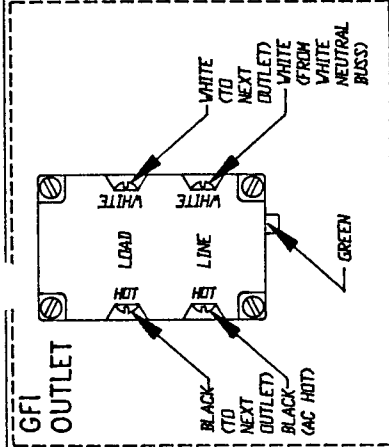

TO SUPPLY AC VOLTAGE TO THE HEAD UNIT OUTLET THE PORT CABIN OUTLETS' BREAKER MUST BE SWITCHED TO ON

16A BREAKER USED FOR 220V/50HZ SUPPLY.


LEGEND







3 WIRE AC CONDUCTOR

AC BREAKER/SWITCH

TERMINAL BLOCK

THUNDERBIRD PRODUCTS P.O. BOX 501 DECATUR, IN 46733 (219) 724-9111	4	TO HIN #	FROM HIN #	DATE	DR	CH	REVISIONS	TITLE: F-34 PC
	3	TO HIN #	FROM HIN #					HEAD UNIT OUTLET
	2	TO HIN #	FROM HIN #					(AC-DC PANEL / VANITY)
	1	TO HIN #	FROM HIN #					DR BY: KKR CH BY: JVS
	#	TO HIN #	FROM HIN #					DATE: 4-2-91 NO.: 340-156




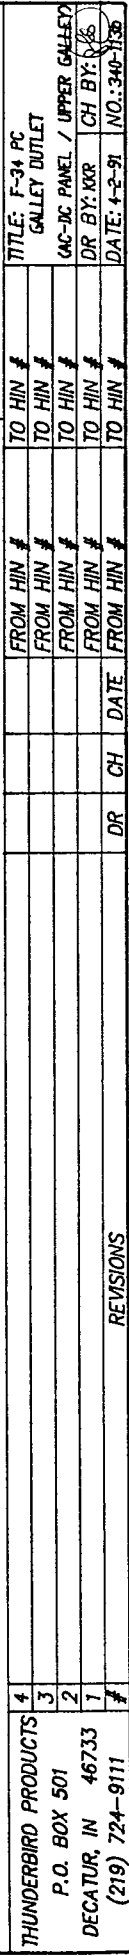


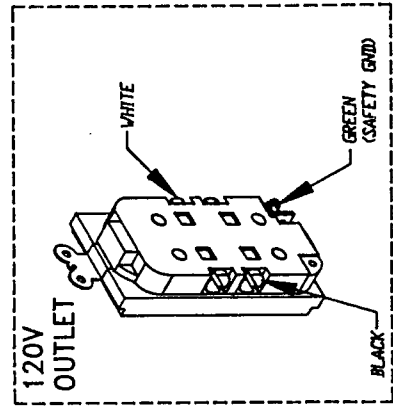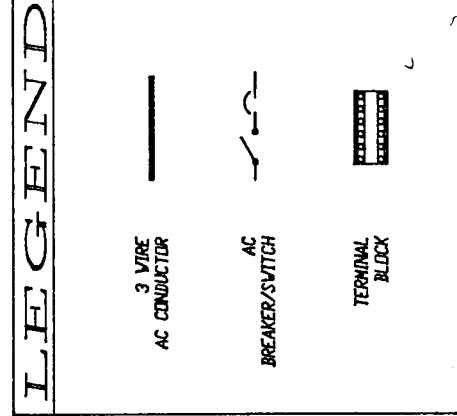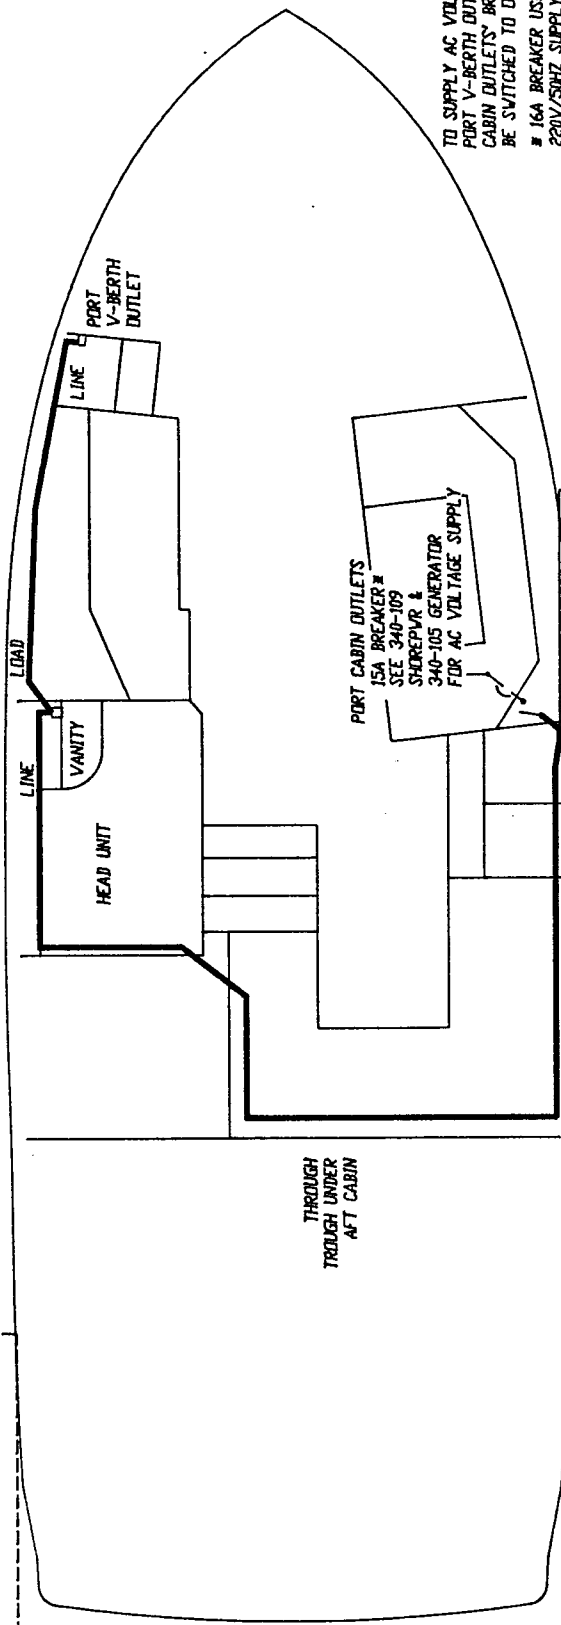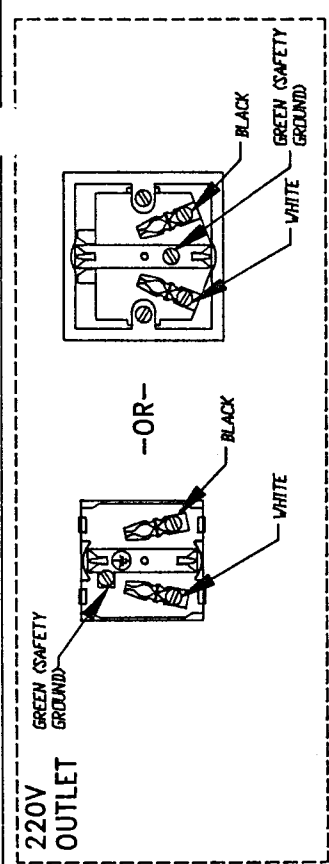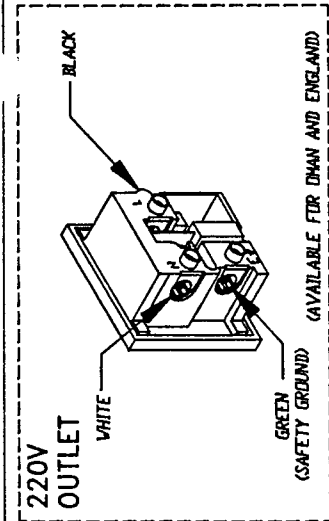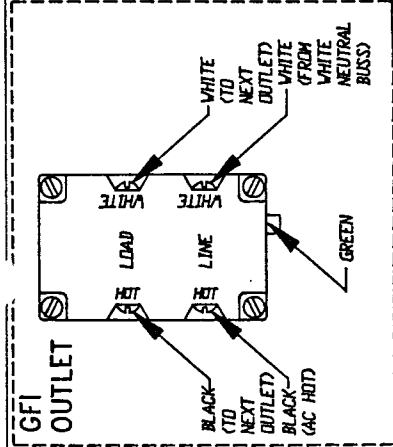

TO SUPPLY AC VOLTAGE TO THE PORT V-BERTH OUTLET THE PORT CABIN OUTLETS' BREAKER MUST BE SWITCHED TO ON

15A BREAKER USED FOR 220V/50HZ SUPPLY.

THUNDERBIRD PRODUCTS P.O. BOX 501 DECATUR, IN 46733 (219) 724-9111	4	FROM HIN #	TO HIN #	TITLE: F-34 PC
	3	FROM HIN #	TO HIN #	PORT V-BERTH OUTLET
	2	FROM HIN #	TO HIN #	VAC-DC PANEL/VANITY/V-BERTH
	1	FROM HIN #	TO HIN #	DR BY: WKR CH BY: K
	#	FROM HIN #	TO HIN #	DATE: 4-2-91 NO.: 340-113C
REVISIONS				
	OR	CH	DATE	

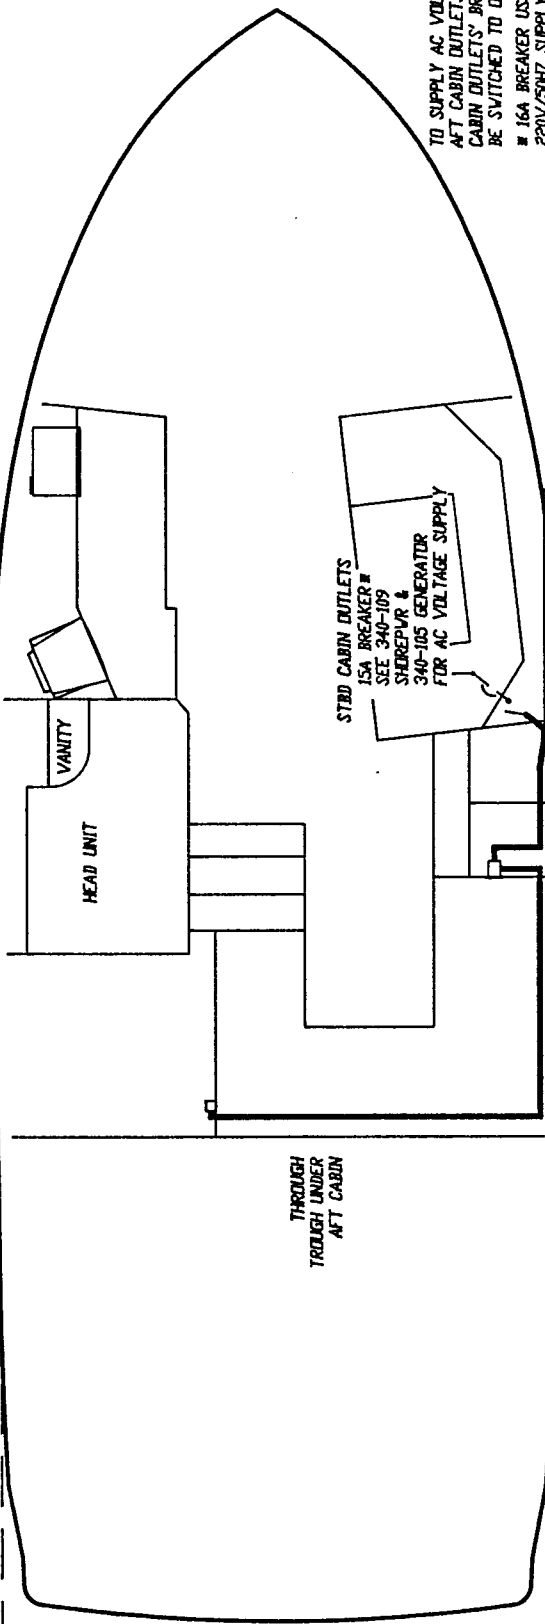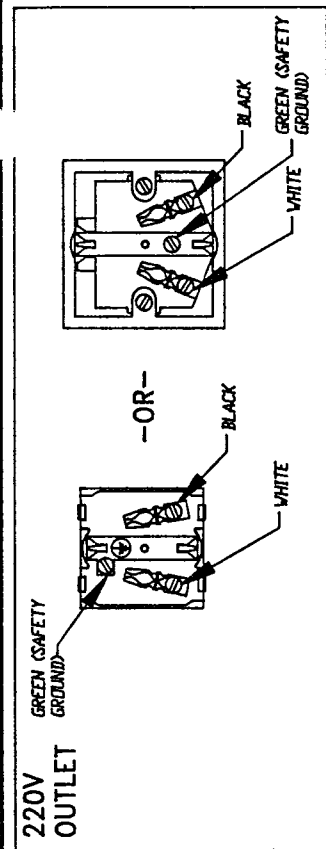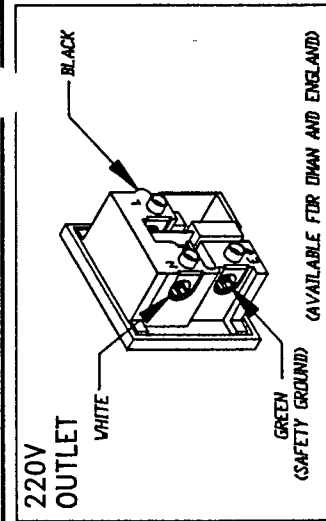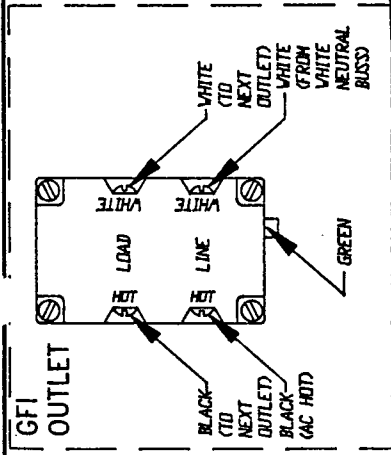

TO SUPPLY AC VOLTAGE TO THE AFT CABIN OUTLETS THE 'STBD CABIN OUTLETS' BREAKER MUST BE SWITCHED TO ON.

■ 16A BREAKER USED FOR 220V/50HZ SUPPLY.


LEGEND

3 WIRE
AC CONDUCTOR


AC
BREAKER/SWITCH

TERMINAL
BLOCK

THUNDERBIRD PRODUCTS	P.O. BOX 501	DECATUR, IN 46733	(219) 724-9111	REVISIONS				TITLE: F-34 PC			
				4	3	2	1	TO HIN #	FROM HIN #	STBD CABIN OUTLETS	CH BY: JRE
								TO HIN #	FROM HIN #	CAC-DC PANEL / AFT CABIN	DATE: 5-7-91
								TO HIN #	FROM HIN #	DR BY: KKR	NO: 340-113 d

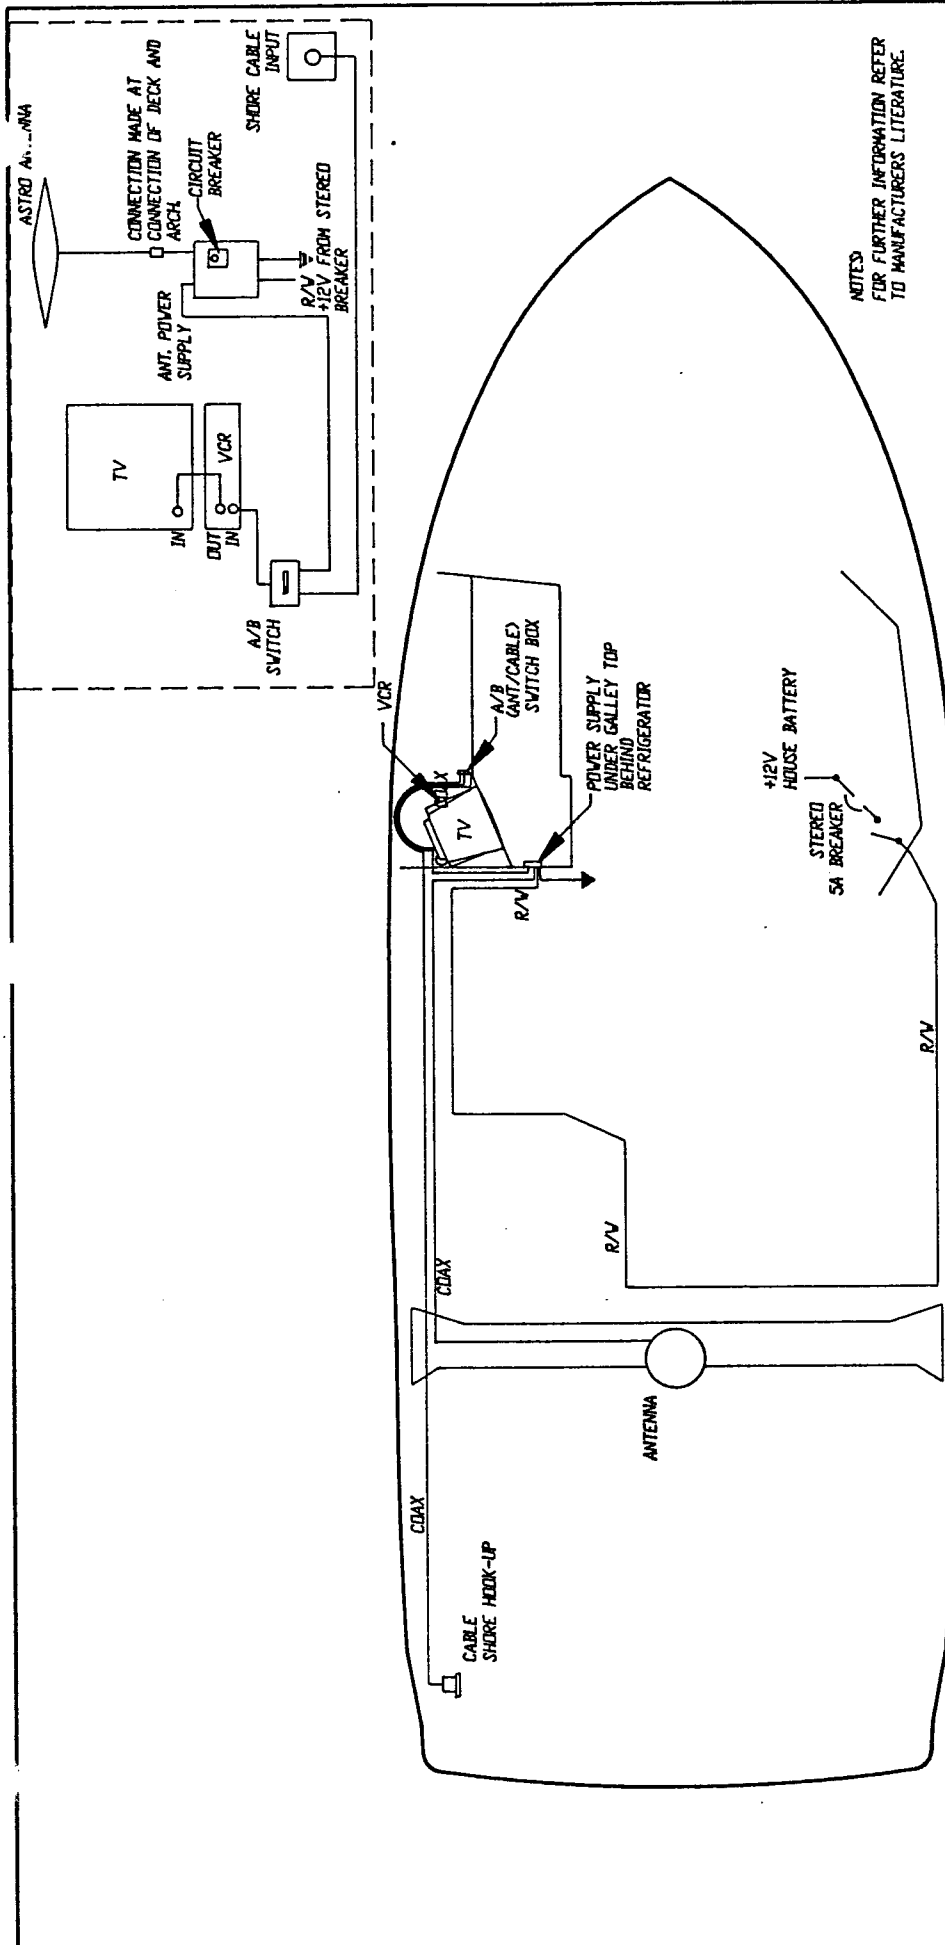

LEGEND

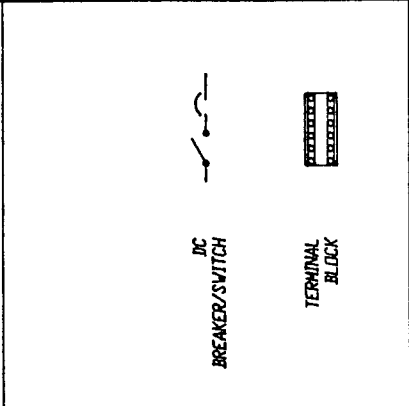


- TO SUPPLY AC VOLTAGE TO TV/VCR SWITCH THE 'GALLEY OUTLETS' AC BREAKER TO ON (LOCATED IN THE AC/DC PANEL)
- TO RECEIVE AN ANTENNA SIGNAL, SWITCH THE 'STEREO' DC BREAKER TO ON AND THE A/B SWITCH (FIG 1) TO ANTENNA ('STEREO' BREAKER LOCATED IN AC/DC PANEL)
- TO RECEIVE CABLE SIGNAL PROGRAMMING, HOOK THE CABLE PROVIDED FROM SHORE TO THE CONNECTION LOCATED INSIDE THE AFT COCKPIT SEAT AND SWITCH THE A/B SWITCH TO THE CABLE POSITION.

THUNDERBIRD PRODUCTS P.O. BOX 501 DECATUR, IN 46733 (219) 724-9111	4								TO HIN #	TITLE: F-34 PC TV/VCR
	3								TO HIN #	
	2								TO HIN #	GAC-DC PANEL / UPPER GALLEY
	1								TO HIN #	DR BY: KKR CH BY: JLC
REVISIONS										DATE: 4-2-91 NO.: 340-141

220V
OUTLET

GREEN (SAFETY
GROUND)

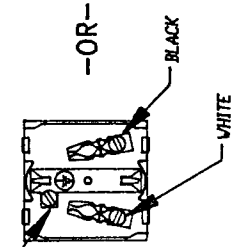


--OR--

WHITE
BLACK


WHITE
BLACK
GREEN (SAFETY
GROUND)

VCR

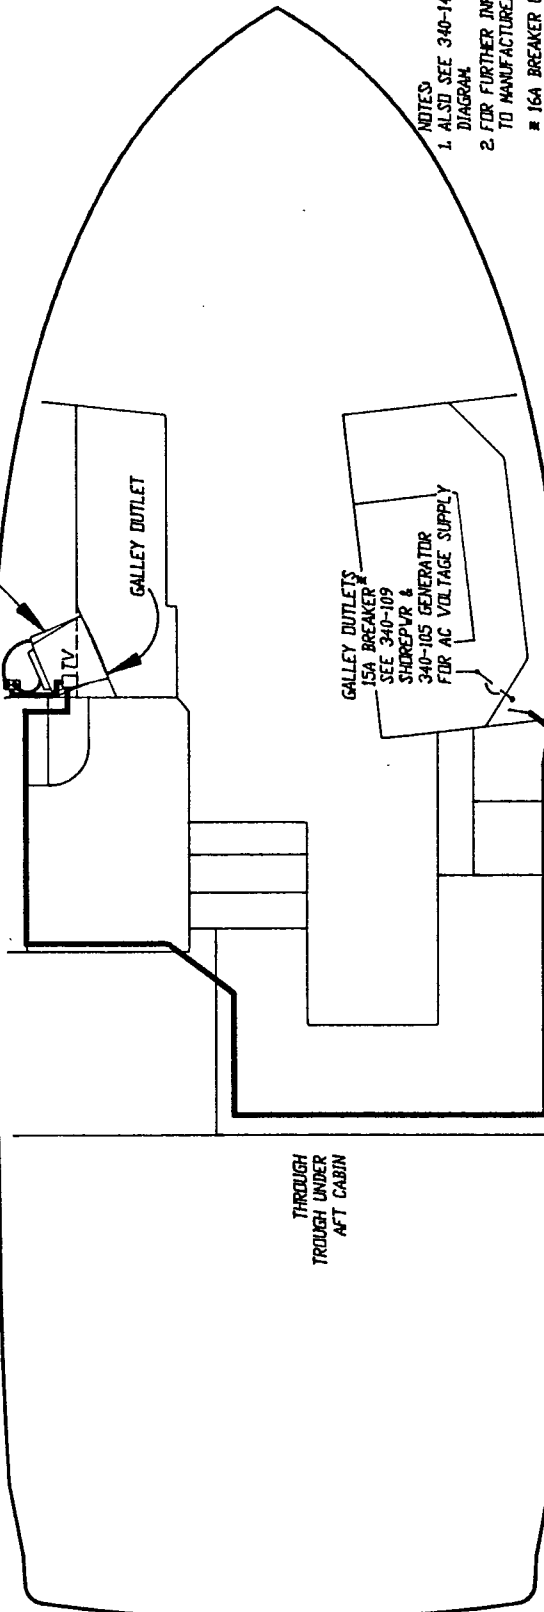

THROUGH
TROUGH UNDER
AFT CABIN

GALLEY OUTLETS
15A BREAKER
SEE 340-109
SHOREPWR &
340-105 GENERATOR
FOR AC VOLTAGE SUPPLY

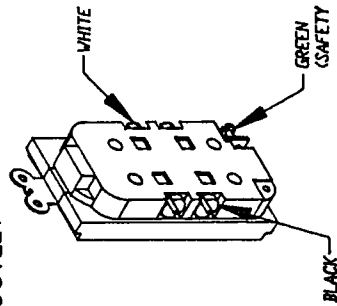

120V
OUTLET

NOTES

1. ALSO SEE 340-141 VIDEO SYSTEM DIAGRAM
 2. FOR FURTHER INFORMATION REFER TO MANUFACTURERS LITERATURE.
- # 16A BREAKER USED FOR 220V/50HZ SUPPLY.

LEGEND

3 WIRE
AC CONDUCTOR

AC
BREAKER/SWITCH

TERMINAL
BLOCK



TO SUPPLY AC VOLTAGE TO TV/VCR
SWITCH THE 'GALLEY OUTLETS' AC
BREAKER TO ON (LOCATED IN THE
AC/DC PANEL)

TO RECEIVE AN ANTENNA SIGNAL,
SWITCH THE 'STEREO' DC BREAKER
TO ON AND THE A/B SWITCH (FIG. 1)
TO ANTENNA ('STEREO' BREAKER
LOCATED IN AC/DC PANEL)

TO RECEIVE CABLE SIGNAL PROGRAMMING
FROM THE CABLE PROVIDED FROM SHORE
TO THE CONNECTION LOCATED INSIDE THE
AFT COCKPIT SEAT AND SWITCH THE
A/B SWITCH TO THE CABLE POSITION

THUNDERBIRD PRODUCTS	4	FROM HIN #	TO HIN #	TITLE: F-34 PC
P.O. BOX 501	3	FROM HIN #	TO HIN #	TV/VCR
DECATUR, IN 46733	2	FROM HIN #	TO HIN #	AC-DC PANEL / UPPER GALLEY
(219) 724-9111	1	FROM HIN #	TO HIN #	DR BY: ROR CH BY: JRE
	#	DATE	TO HIN #	DATE: 4-2-91 NO: 340-114

REVISIONS

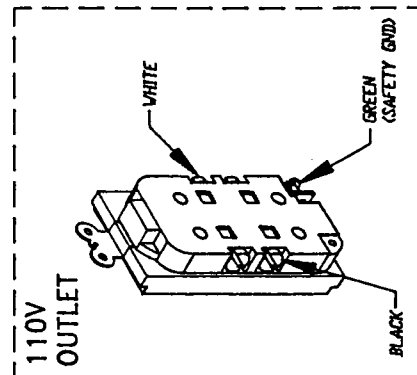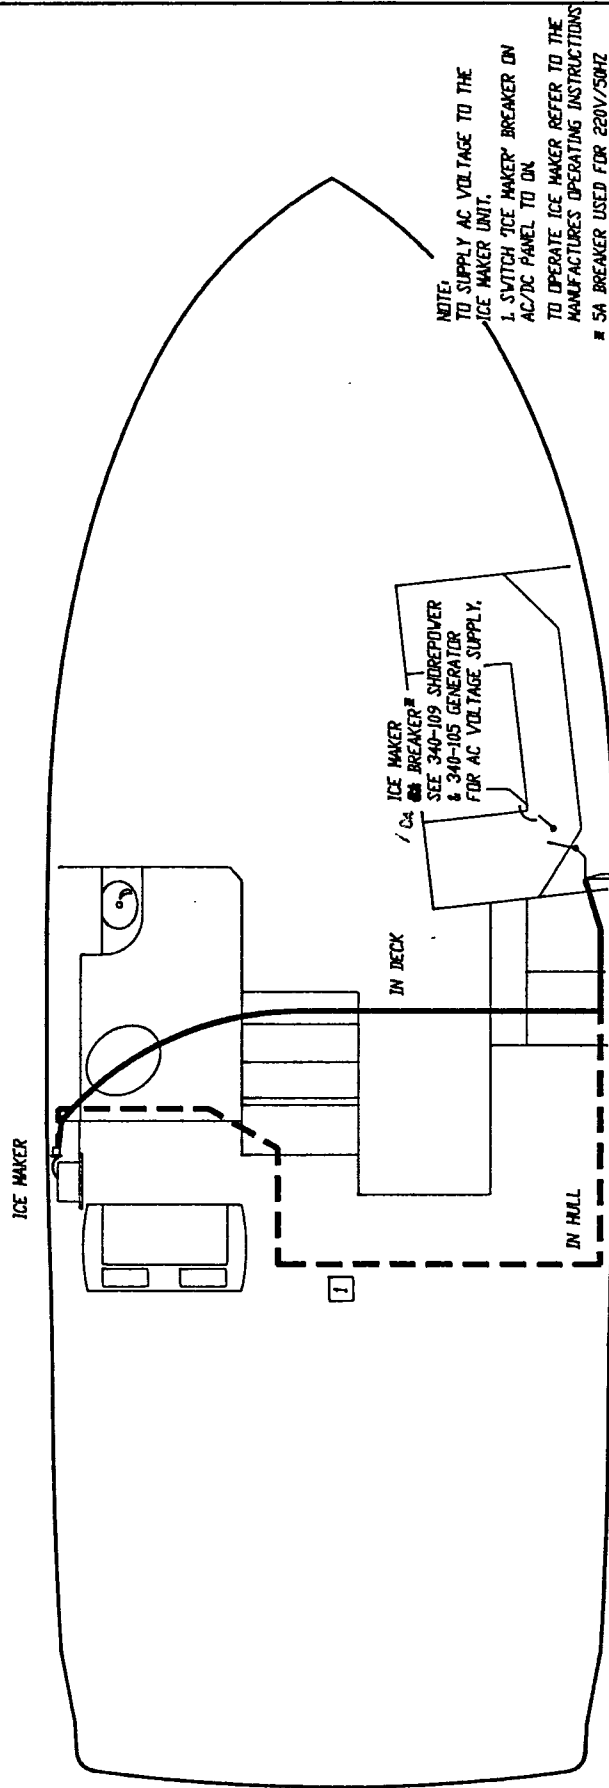

THE

3 WIRE
AC CONDUCTOR


AC
BREAKER/SWITCH

TERMINAL BLOCK

REVISION NOTICE

NOTE:
TO SUPPLY AC VOLTAGE TO THE
ICE MAKER UNIT,
1. SWITCH 'ICE MAKER' BREAKER ON
AC/DC PANEL TO ON
TO OPERATE ICE MAKER REFER TO THE
MANUFACTURES OPERATING INSTRUCTIONS
■ 5A BREAKER USED FOR 220V/50HZ
SUPPLY

THUNDERBIRD PRODUCTS	4					FROM HIN #	TO HIN #	TITLE: F-34 PC
P.O. BOX 501	3					FROM HIN #	TO HIN #	JCE MAKER
DECATUR, IN 46733	2					FROM HIN #	TO HIN #	GAC-DC PANEL / FORD CDRPTD
(219) 724-9111	1					FROM HIN #	TO HIN #	DR BY: KCR
	#					5-91	DATE	DATE: 4-18-91
						DR	CH	NO: 340-375

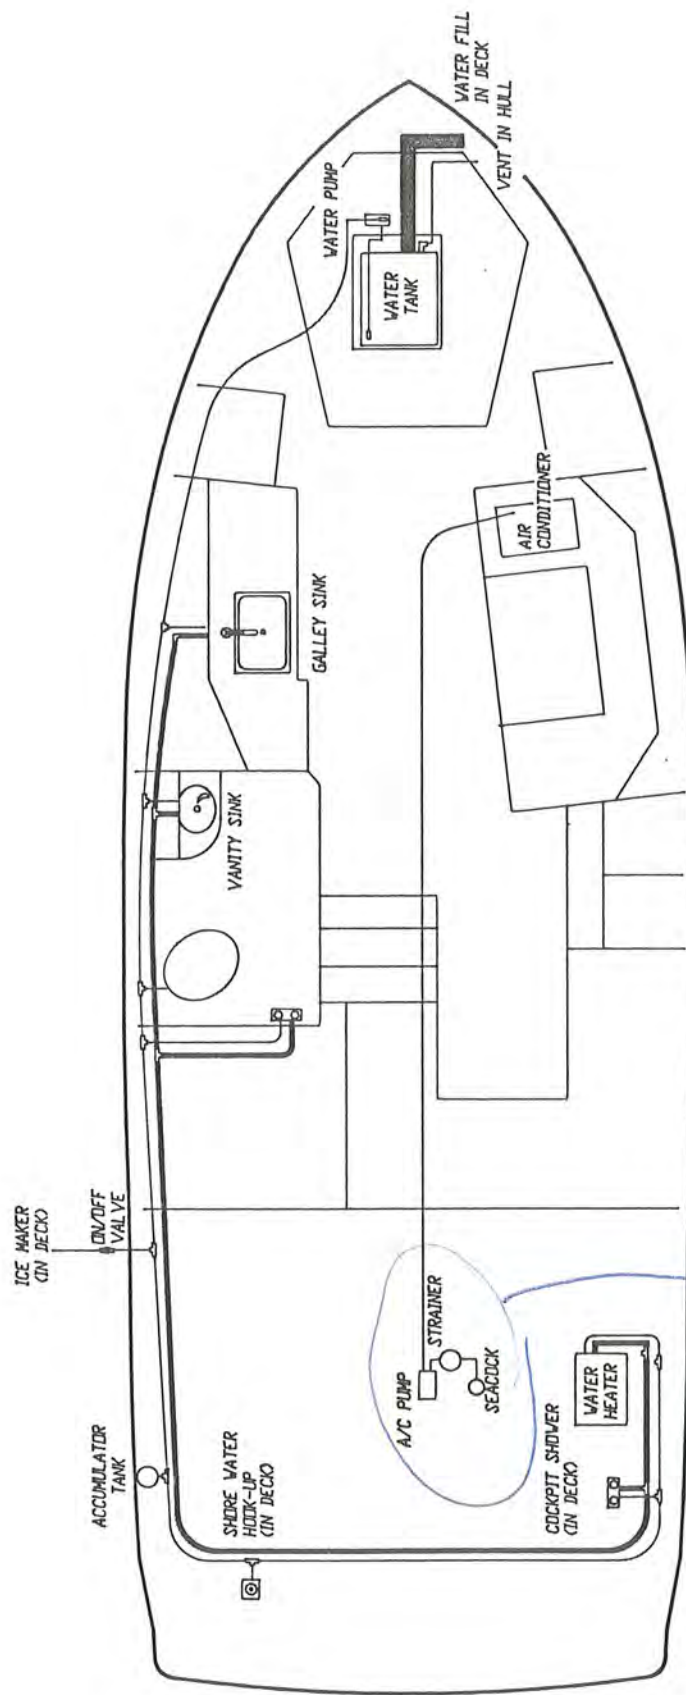

Now Located
BENEATH
ENTRY
FLOOR
CABIN
STEP IN
STORAGE
(KEEL)
COMPARTMENT
(AS OF 94/95 MODEL YR.)

PHILIP

COLD WATER LINE


HOT WATER LINE

VENT LINES


WATER FILL

THUNDERBIRD PRODUCTS		4				FROM HIN #	TO HIN #	TITLE: F-34 PC PLUMBING SYSTEM
P.O. BOX 501		3				FROM HIN #	TO HIN #	
		2				FROM HIN #	TO HIN #	
DECATUR, IN 46733		1				FROM HIN #	TO HIN #	
(219) 724-9111		#				FROM HIN #	TO HIN #	
REVISIONS			DR	CH	DATE			DR BY: KCR
								DATE: 5-3-91
								NO.: 340-13

MULTI PORT
DRAINAGE ASSEMBLY

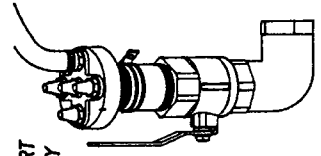

VENT

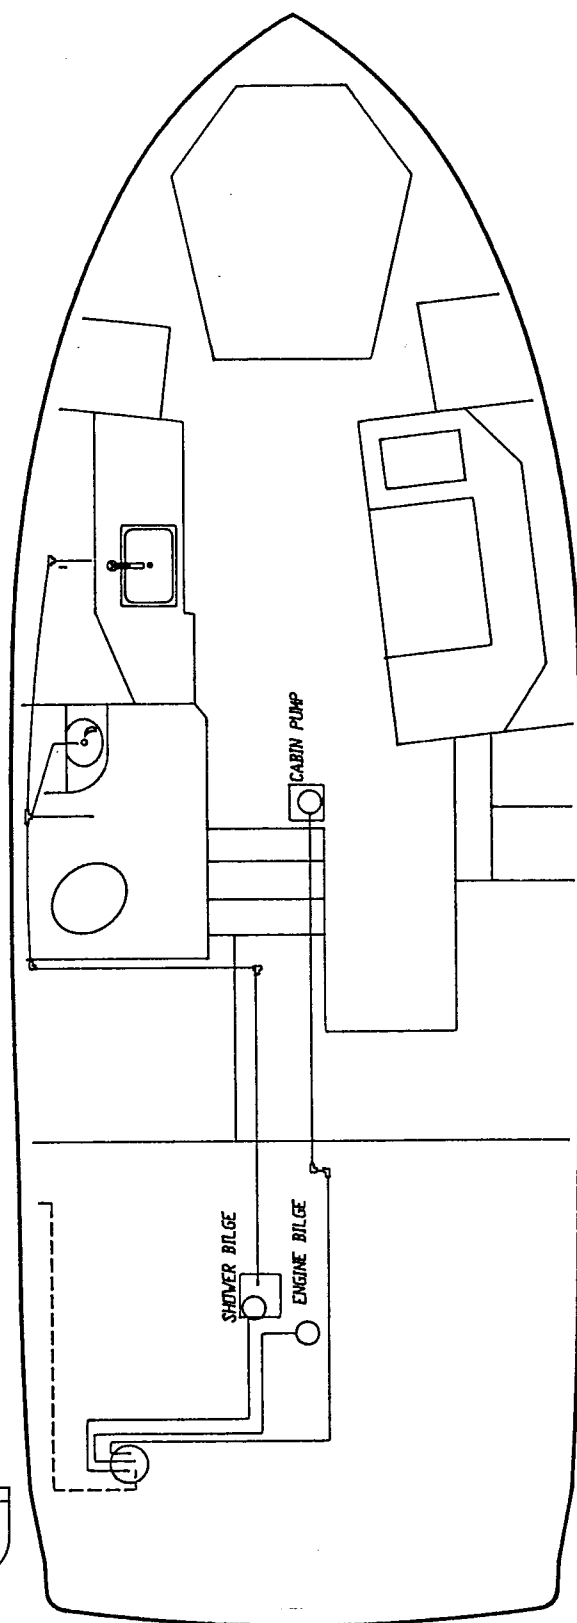


NOTE: ALL COCKPIT DRAINS DRAIN TO THE
ENGINE BILGE.

LEGEND


VENT LINES - - - - -
DRAINAGE _____

THUNDERBIRD PRODUCTS P.O. BOX 501 DECATUR, IN 46733 (219) 724-9111	4							FROM HIN #	TO HIN #	TITLE: F-34 PC DRAINAGE SYSTEM DR BY: KCR DATE: 5-3-91 CH BY: [Signature] NO: 340-13-A
	3							FROM HIN #	TO HIN #	
	2							FROM HIN #	TO HIN #	
	1							FROM HIN #	TO HIN #	
	#							FROM HIN #	TO HIN #	
REVISIONS										
			DR	CH	DATE					


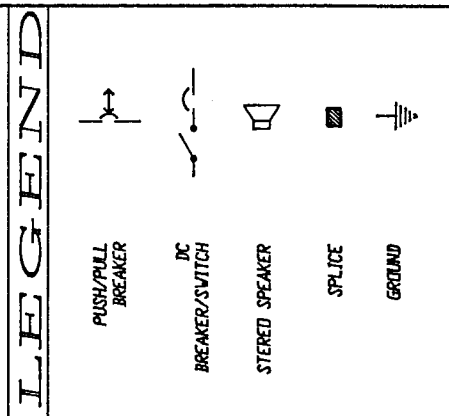


STEREO OPERATION
THE ELECTRONICS MEMORY
BREAKER IN THE AFT BREAKER
PANEL MUST BE PUSHED IN
THE MAIN 2 AND STEREO
BREAKERS AT THE AC/DC
PANEL MUST BE SWITCHED ON
POWER IS NOW SUPPLIED TO
THE STEREO AND CAN BE TURNED
ON AT THE UNIT.
TO REDUCE THE VOLUME OF
THE ARCH SPEAKERS ONLY,
TURN THE L-PAD CONTROL, AT
THE DASH, TOWARD THE "0".






1. TURN THE STARTING BATTERY
2. SWITCH FOUND IN THE STBD AFT
3. COCKPIT STORAGE TO ON
4. AT THE IGNITION PANEL, TURN
THE PORT IGNITION SWITCH TO
ITS FIRST POSITION THEN OFF.
YOU NOW HAVE 15 SECONDS TO
RETURN TO THE CABIN AND
REMOVE THE STEREO FROM ITS
BASKET.

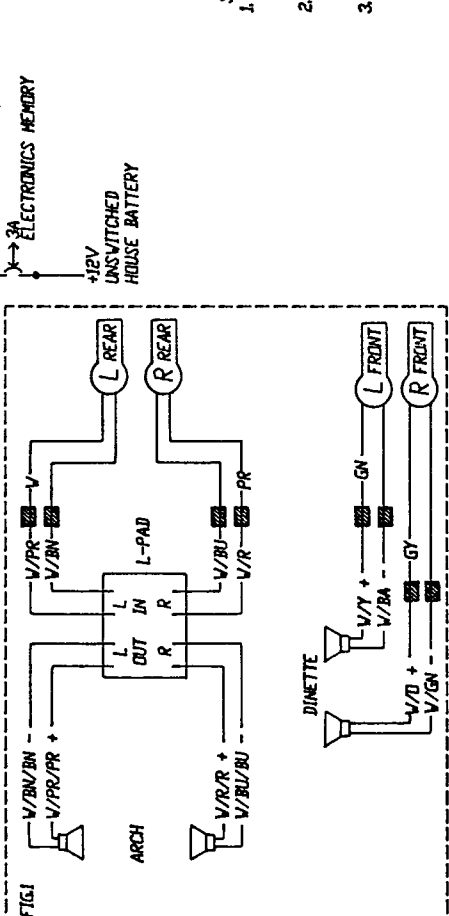

THUNDERBIRD PRODUCTS	4					TO HIN #	TITLE:
P.O. BOX 501	3					FROM HIN #	STERED SYSTEM
DECATUR, IN 46733	2					TO HIN #	
(219) 724-9111	1					FROM HIN #	
	#					TO HIN #	
		DR	CH	DATE		FROM HIN #	
		REVISIONS				TO HIN #	
						DR BY: KKR	CH BY: JG
						DATE: 5-13-91	NO: 348-50

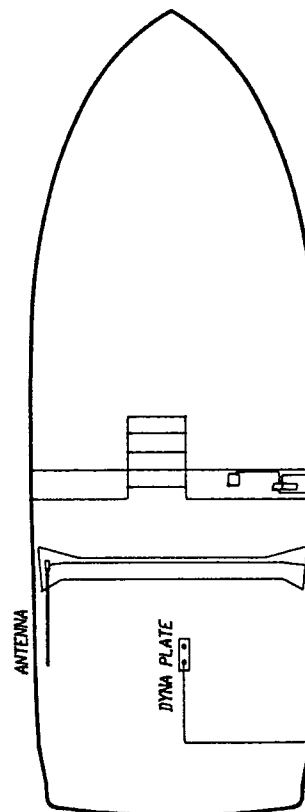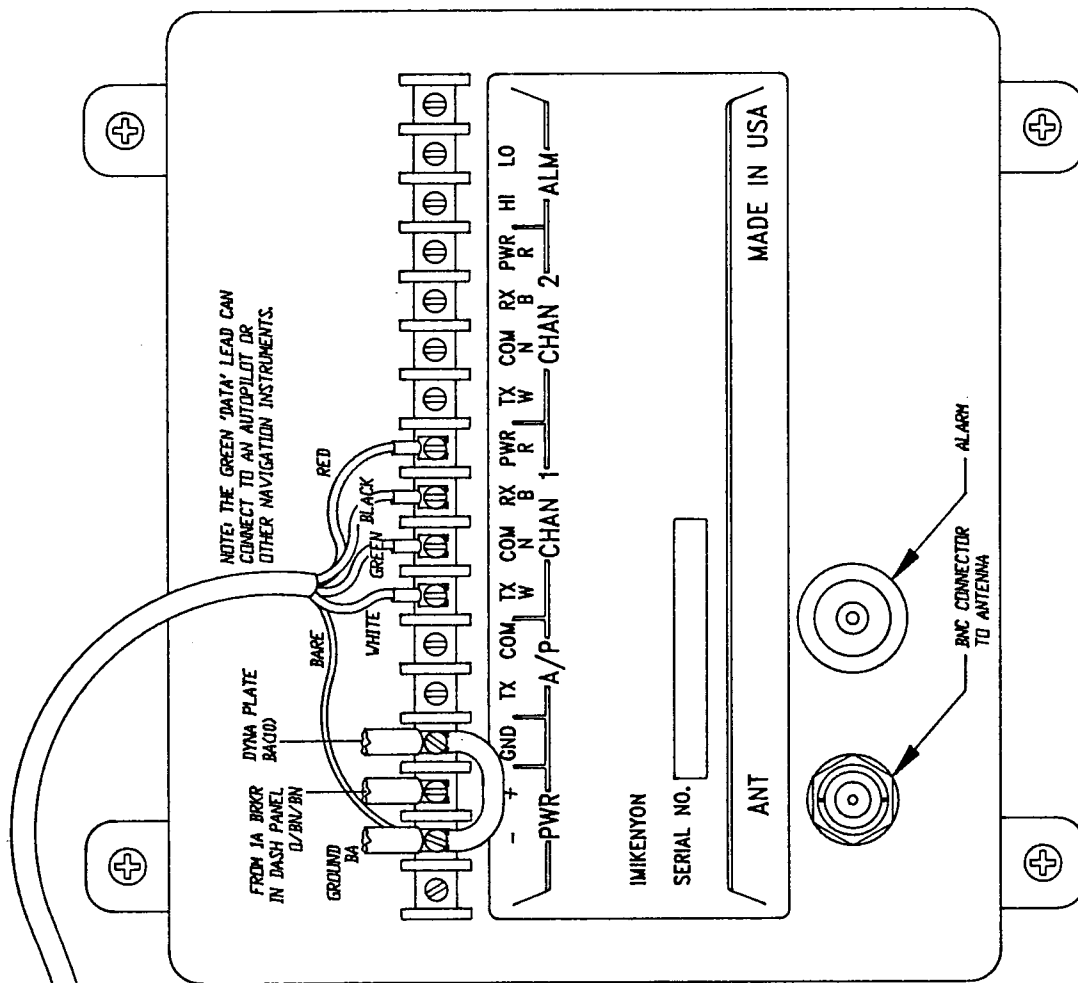

	4				FROM HIN #	TO HIN #	TITLE: F-34 PC LIRAN WIRING (DIRECTIVE)
THUNDERBIRD PRODUCTS	3				FROM HIN #	TO HIN #	
P.O. BOX 501	2				FROM HIN #	TO HIN #	
DECATUR, IN 46733	1				FROM HIN #	TO HIN #	
(219) 724-9111	#				FROM HIN #	TO HIN #	
		DR	CH	DATE			DR BY: KKR DATE: 5-7-91
							CH BY: <u>16</u> NO: 340-143

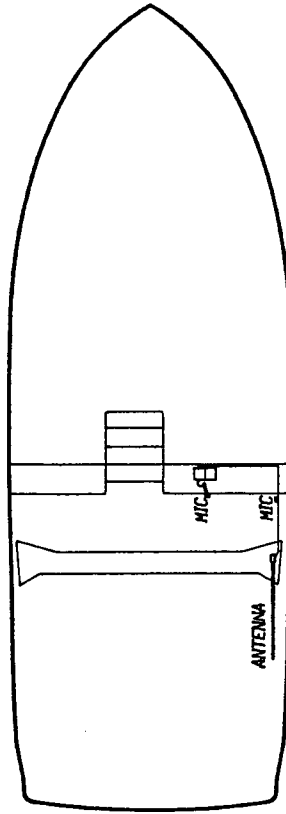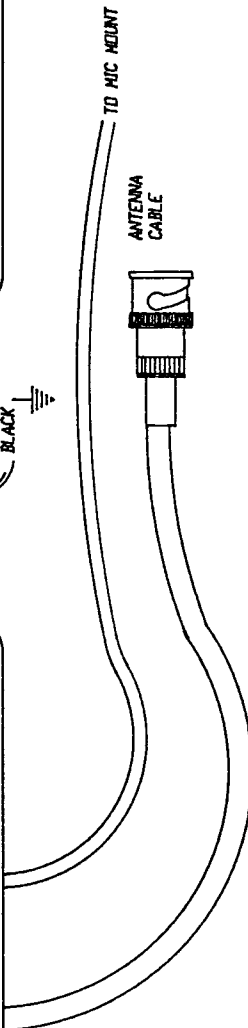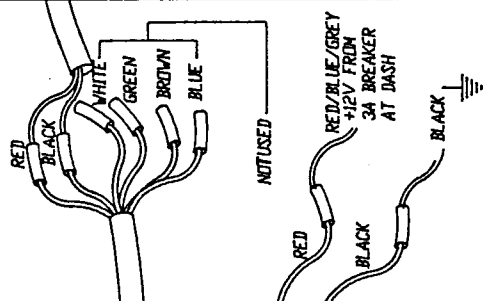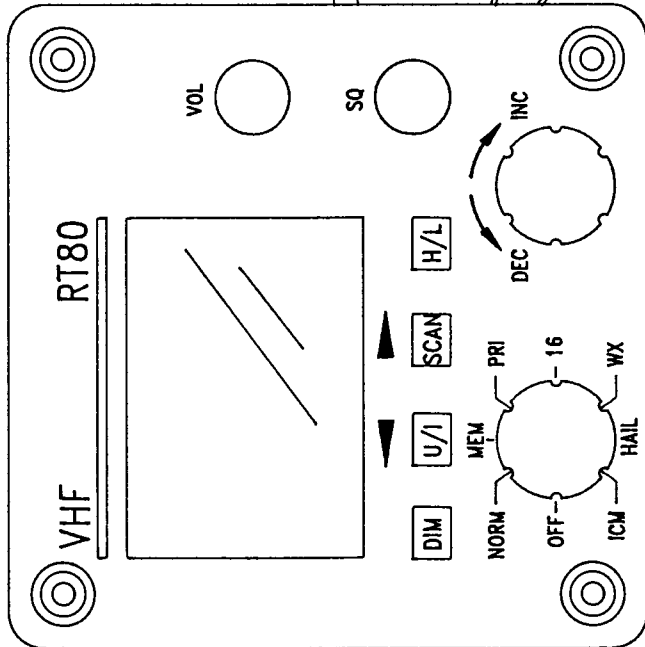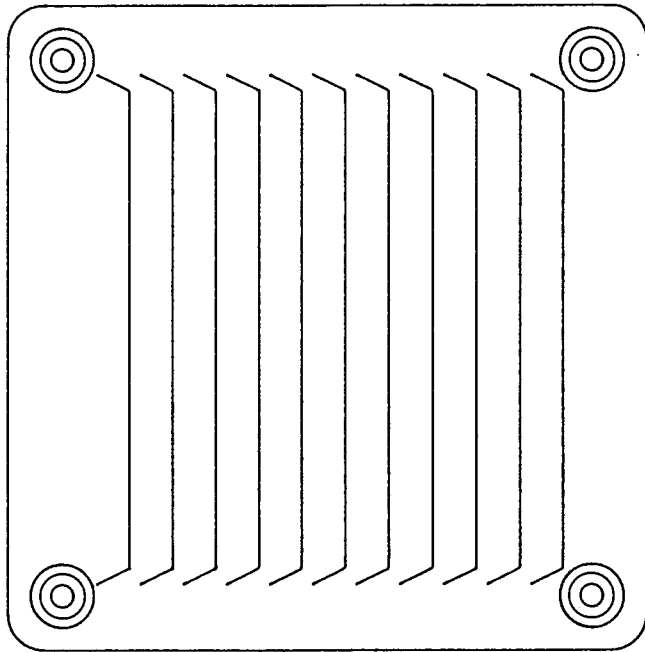

THUNDERBIRD PRODUCTS P.O. BOX 501 DECATUR, IN 46733 (219) 724-9111	4							FROM HIN #	TO HIN #	TITLE: F-34 PC VHF RADIO WIRING CORRECTIVE DR BY: MKR DATE: 5-7-91 CH BY: KS NO.: 340-14
	3							FROM HIN #	TO HIN #	
	2							FROM HIN #	TO HIN #	
	1							FROM HIN #	TO HIN #	
	#							FROM HIN #	TO HIN #	
REVISIONS										
							DR	CH	DATE	